

RENAULT

7 Trim and upholstery

71A BODY INTERNAL TRIM

72A SIDE OPENING ELEMENT TRIM

73A NON-SIDE OPENING ELEMENTS TRIM

75A FRONT SEAT FRAMES AND MECHANISMS

76A REAR SEAT FRAMES AND MECHANISMS

77A FRONT SEAT TRIM

78A REAR SEAT TRIM

79A SEAT COMPONENTS

X95

APRIL 2009

Edition Anglaise

"The repair methods given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which his vehicles are constructed."

All copyrights reserved by Renault.

The reproduction or translation in part of whole of the present document, as well as the use of the spare parts reference numbering system, are prohibited without the prior written consent of Renault.

MEGANE III - Section 7

Contents

Page

71A	BODY INTERNAL TRIM		71A	BODY INTERNAL TRIM	
	Floor carpet: Removal - Refitting	71A-1		Rear parcel shelf side trim: Removal - Refitting	71A-56
	Headlining: Removal - Refitting	71A-8		Rear end panel lining: Removal - Refitting	71A-60
	Door sill lining: Removal - Refitting	71A-25		Luggage compartment floor lining: Removal - Refitting	71A-62
	Front door sill lining: Removal - Refitting	71A-27		Rear load compartment lining: Removal - Refitting	71A-64
	B-pillar lower trim: Removal - Refitting	71A-29		Luggage retaining assembly: Removal - Refitting	71A-66
	Rear door sill lining: Removal - Refitting	71A-31			
	Rear wheel arch lining: Removal - Refitting	71A-33	72A	SIDE OPENING ELEMENT TRIM	
	A-pillar trim: Removal - Refitting	71A-37		Front side door trim: Removal - Refitting	72A-1
	Rear roof drip moulding lining: Removal - Refitting	71A-38		Rear side door trim: Removal - Refitting	72A-4
	B-pillar upper trim: Removal - Refitting	71A-39			
	Rear door sill upper lining: Removal - Refitting	71A-45	73A	NON-SIDE OPENING ELEMENTS TRIM	
	C-pillar upper trim: Removal - Refitting	71A-47		Tailgate lining: Removal - Refitting	73A-1
	Rear quarter panel trim: Removal - Refitting	71A-48			
	Rear panel trim: Removal - Refitting	71A-54			

Contents

75A**FRONT SEAT FRAMES AND MECHANISMS**

Front seat base frame: Removal - Refitting	75A-1
Front seatback frame: Removal - Refitting	75A-4
Front seat runner: Removal - Refitting	75A-8
Front seat height adjuster: Removal - Refitting	75A-11
Front seat remote adjustment: Removal - Refitting	75A-13
Front seat lumbar adjustment: Removal - Refitting	75A-14
Front seat sliding motor: Removal - Refitting	75A-17
Front seat height adjustment motor: Removal - Refitting	75A-20
Front seat backrest tilt control: Removal - Refitting	75A-21
Front seat backrest tilt motor: Removal - Refitting	75A-24
Complete front seat: Removal - Refitting	75A-28

76A**REAR SEAT FRAMES AND MECHANISMS**

Single unit rear bench seatback: Removal - Refitting	76A-1
1/3 and 2/3 rear bench seatback: Removal - Refitting	76A-3
Single unit rear bench seat: Removal - Refitting	76A-6
Rear bench seatback frame 1/3 and 2/3: Removal - Refitting	76A-7
Rear bench seat mechanism: Removal - Refitting	76A-8

76A**REAR SEAT FRAMES AND MECHANISMS**

Rear bench seat single-unit seatback frame: Removal - Refitting	76A-10
Second row complete rear seat: Removal - Refitting	76A-11
Second row rear seat frame: Removal - Refitting	76A-16

77A**FRONT SEAT TRIM**

Front seat base trim: Removal - Refitting	77A-1
Front seatback trim: Removal - Refitting	77A-4
Front seat lower cover: Removal - Refitting	77A-9

78A**REAR SEAT TRIM**

1/3 and 2/3 rear bench seat trim: Removal - Refitting	78A-1
1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting	78A-4
Rear bench seat single unit seatback trim: Removal - Refitting	78A-11
Rear bench seat single unit seat base trim: Removal - Refitting	78A-14
Second row rear seat trim: Removal - Refitting	78A-16

79A**SEAT COMPONENTS**

Seatback tray: Removal - Refitting	79A-1
Front headrest: Removal - Refitting	79A-3

Contents

79A

SEAT COMPONENTS

Heated seat cover: Removal - Refitting	79A-5
Front seat headrest guide: Removal - Refitting	79A-7
Rear centre arm rest: Removal - Refitting	79A-8
Rear seat headrest guide: Removal - Refitting	79A-9
Rear headrest: Removal - Refitting	79A-13
Rear bench seat headrest: Removal - Refitting	79A-14

BODY INTERNAL TRIM

Floor carpet: Removal - Refitting

71A

B95 or D95 or K95

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - the front seats completely (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page 75A-28) ,
 - the central console (see **Centre console: Removal - Refitting**) (57A, Interior equipment).

REAR BENCH FUNCTION

- Remove the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page 76A-6) .

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK

- Remove the 1/3 and 2/3 rear bench seat base (see **1/3 and 2/3 rear bench seat: Removal - Refitting**) .
- Remove the floor storage compartment and flap (see **Floor flap and storage: Removal - Refitting**) (57A, Interior equipment).


B95 or K95

- Remove:
 - the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page 71A-27) ,
 - the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-31) ,
 - the C-pillar upper trim (see **71A, Body internal trim, C-pillar upper trim: Removal - Refitting**, page 71A-47) ,
 - the B-pillar lower trim (see **71A, Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) .

D95

- Remove:
 - the door sill lining (see **71A, Body internal trim, Door sill lining: Removal - Refitting**, page 71A-25) ,
 - the rear panel trim (see **71A, Body internal trim, Rear panel trim: Removal - Refitting**, page 71A-54) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

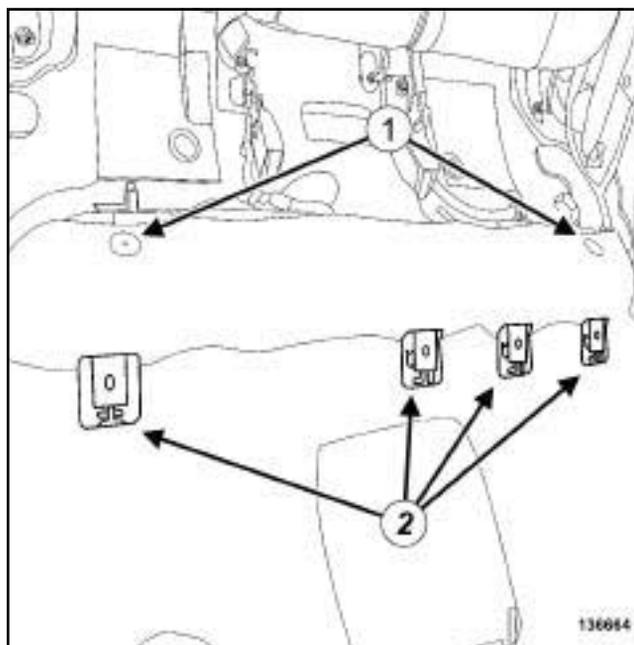

136664


- Remove:
 - the clips (1) ,
 - the mounting supports of the rear bench seat base (2) .

BODY INTERNAL TRIM


Floor carpet: Removal - Refitting

71A


B95 or D95 or K95

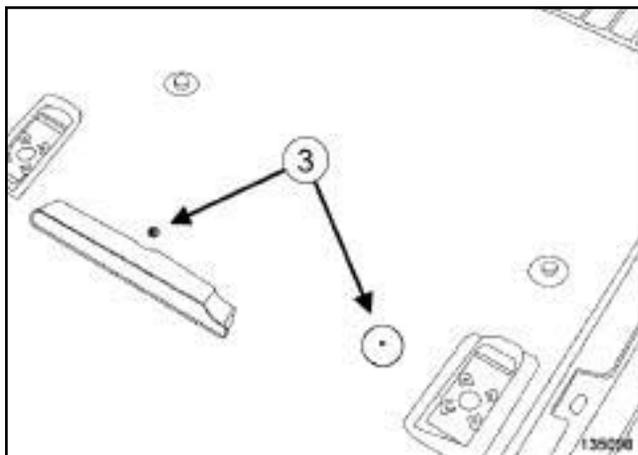

- ❑ Remove the clips (3) .

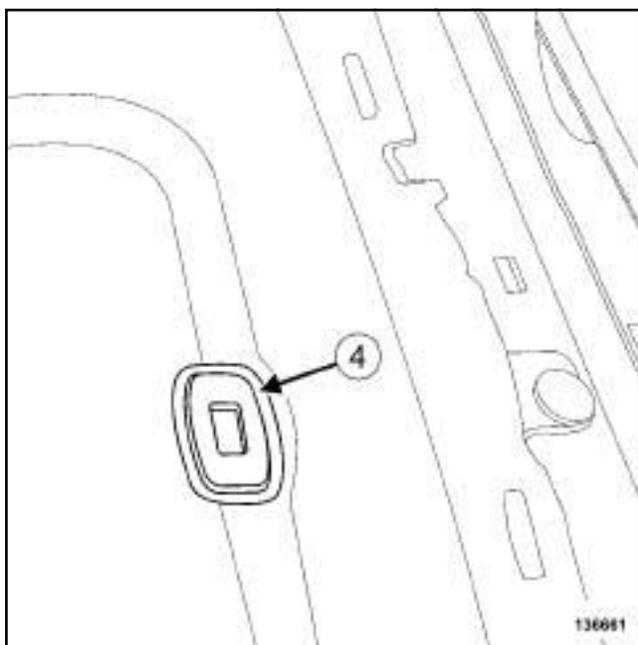

- ❑ Unclip the clip (4) .

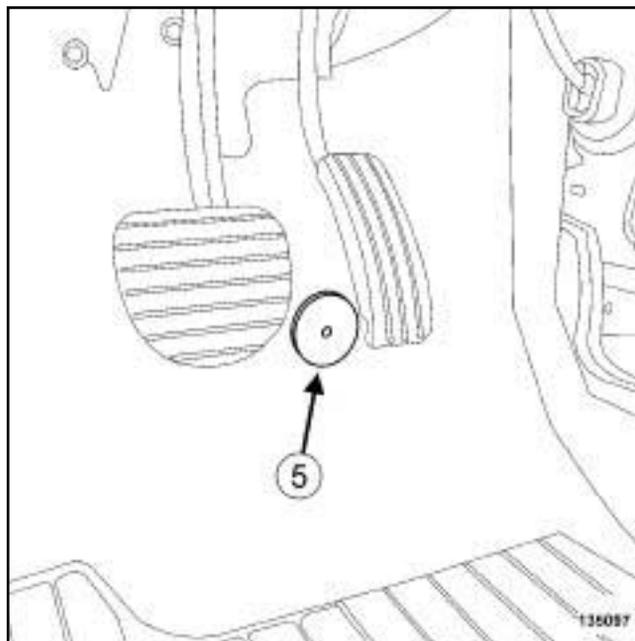

- ❑ Remove:
 - the accelerator pedal stop (5) ,
 - the floor carpet.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ❑ Refit:
 - the floor carpet,
 - the accelerator pedal stop (5) ,
 - the clips (4) , (3) and (1) ,
 - the mounting supports of the rear bench seat base (2) .

II - FINAL OPERATION

D95

- ❑ Refit:
 - the rear panel trim (see 71A, **Body internal trim, Rear panel trim: Removal - Refitting**, page 71A-54) ,
 - the door sill lining (see 71A, **Body internal trim, Door sill lining: Removal - Refitting**, page 71A-25) .

BODY INTERNAL TRIM

Floor carpet: Removal - Refitting

71A

B95 or D95 or K95

B95 or K95

Refit:

- the B-pillar lower trim (see **71A, Body internal trim, B-pillar lower trim: Removal - Refitting**, page **71A-29**) ,
- the C-pillar upper trim (see **71A, Body internal trim, C-pillar upper trim: Removal - Refitting**, page **71A-47**) ,
- the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page **71A-31**) ,
- the front door sill lining (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page **71A-27**) .

- Refit the floor storage compartment and flap (see **Floor flap and storage: Removal - Refitting**) (57A, Interior equipment).

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK

- Refit the 1/3 and 2/3 rear bench seat base (see **1/3 and 2/3 rear bench seat: Removal - Refitting**) .

REAR BENCH FUNCTION

- Refit the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page **76A-6**) .

Refit:

- the central console (see **Centre console: Removal - Refitting**) (57A, Interior equipment),
- the front seats completely (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**) .

- Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

BODY INTERNAL TRIM

Floor carpet: Removal - Refitting

71A

J95

Essential special tooling

Car. 1363 Set of trim removal levers.


REMOVAL

I - REMOVAL PREPARATION OPERATION


- ❑ Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

1 - Rear section

- ❑ Remove the complete rear seats.

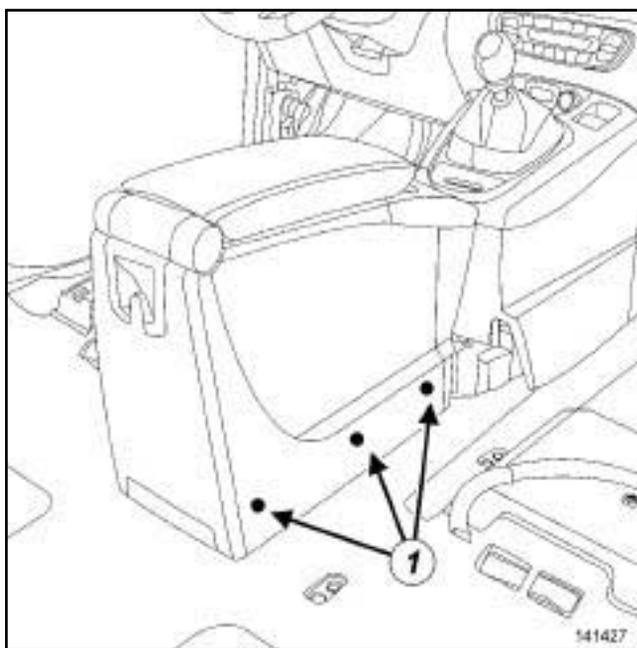

- ❑ Remove the bolts (1) from both sides of the sliding centre console.

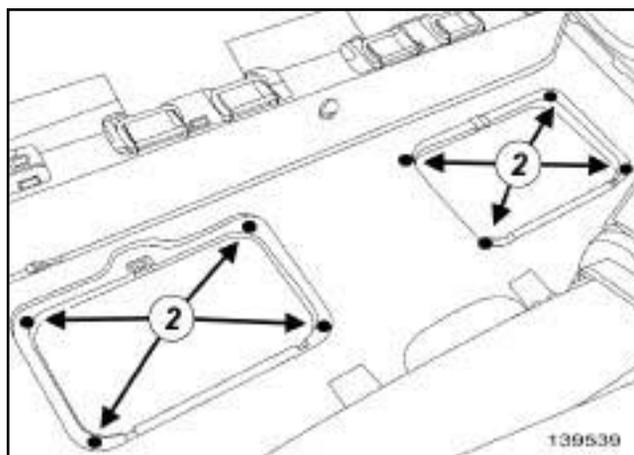

- ❑ Remove:
 - the floor storage flaps (see **Floor flap and storage: Removal - Refitting**) (57A, Interior equipment),
 - the clips (2) of the rear floor carpet in the rear storage compartments using the tool (**Car. 1363**).
 - the B-pillar lower trims (see **71A, Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) ,
 - the rear inner sill upper trims (see **71A, Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
 - the rear door sill linings (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-31) .

0 SEAT 3RD ROW


- ❑ Remove the luggage compartment floor lining (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page 71A-62) .

BODY INTERNAL TRIM

Floor carpet: Removal - Refitting


71A

J95

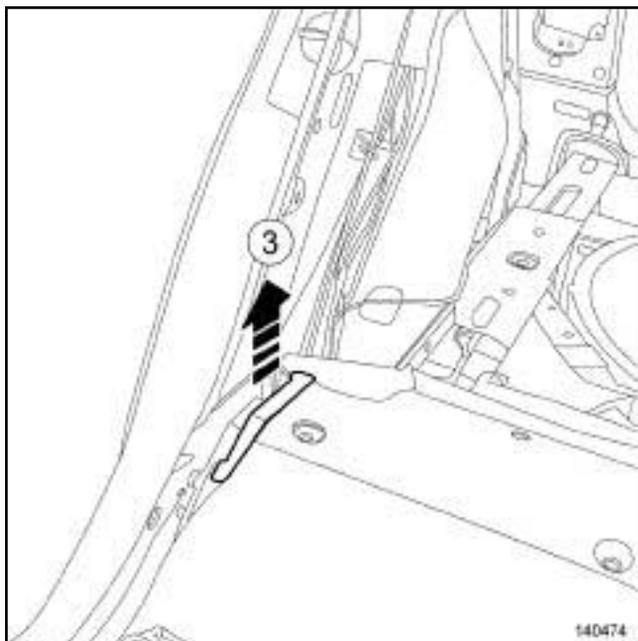


140474

- Remove the seat belt strap output trims (3) of the second row seats.

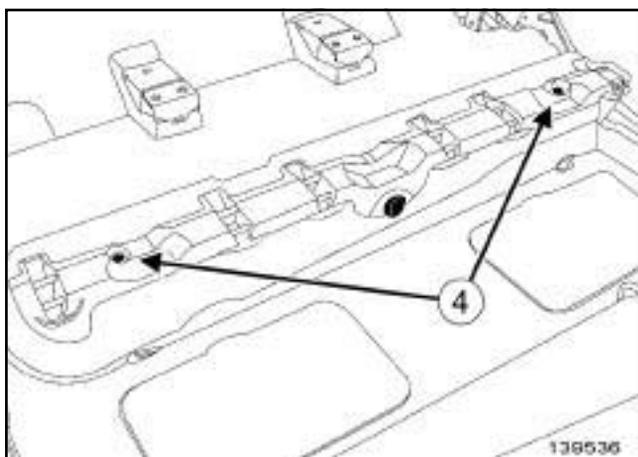

139536


- Remove the bolts (4) from the mounting rail trim of the rear seats.

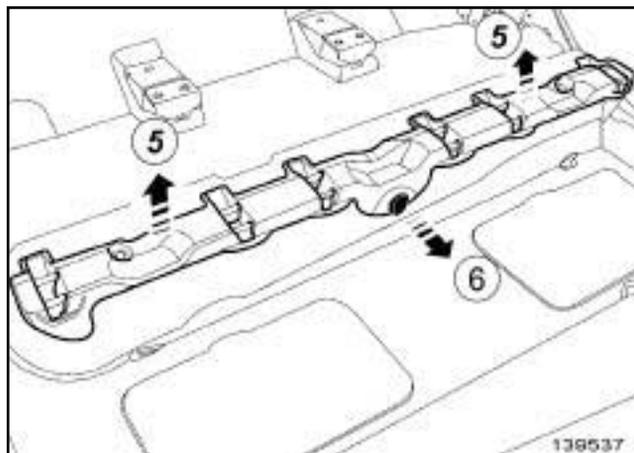

139537

- Unclip the mounting rail trim of the second row seats at (5) and (6).
- Disconnect the accessories socket connector.
- Remove the trim from the rear seats mounting rail.

2 SEATS 3RD ROW

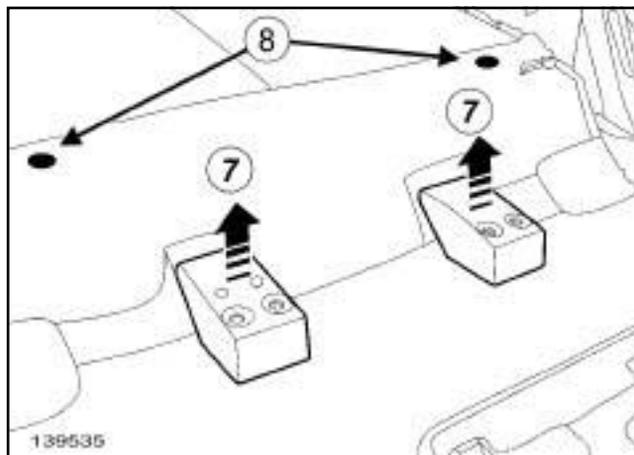

139535

- Remove the trims at (7).
- Remove the clips (8) from the rear floor carpet.

2 - Front section

- Remove the complete rear seats (see 75A, **Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page 75A-28).
- Move the sliding centre console backwards.
- Unclip:
 - the diagnostic socket cover at the front of the centre console,

BODY INTERNAL TRIM

Floor carpet: Removal - Refitting

71A

J95


- the front door sill linings (see **71A, Body internal trim, Front door sill lining: Removal - Refitting, page 71A-27**),
- the front floor flaps (see **Floor flap and storage: Removal - Refitting**) (57A, Interior equipment).

II - OPERATION FOR REMOVAL OF PART CONCERNED


1 - Rear section

- Remove the rear floor carpet.

2 - Front section

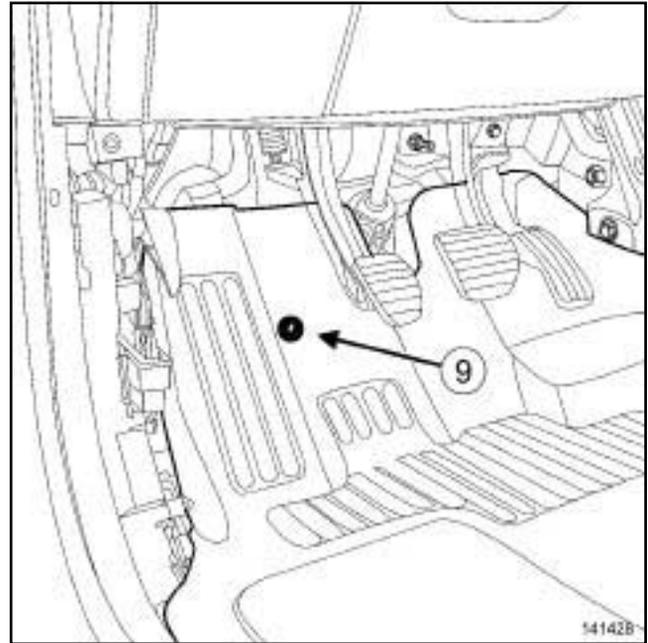

141428

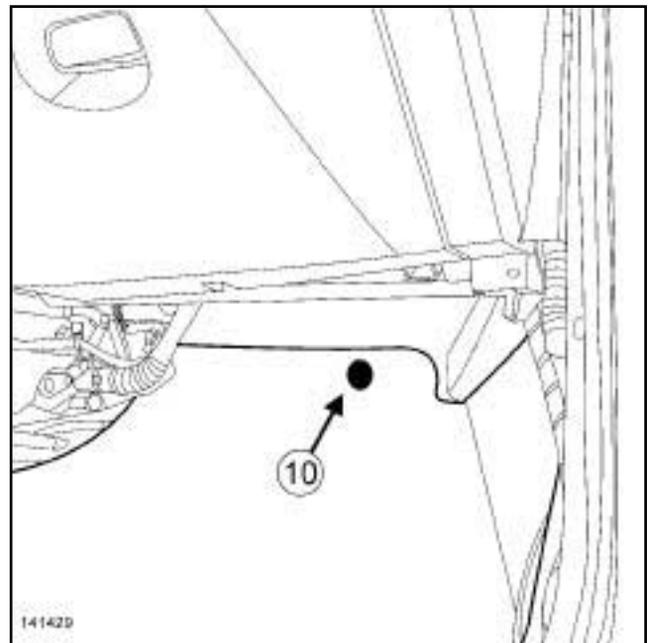

141429

- Remove:
 - the clips **(9)** and **(10)**,
 - the front floor carpet.

BODY INTERNAL TRIM

Floor carpet: Removal - Refitting

71A

J95

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

1 - Front section

- Refit:
 - the front floor carpet,
 - the front floor carpet clips **(9)** and **(10)**.

2 - Rear section

- Refit the rear floor carpet.

II - FINAL OPERATION

1 - Front section

- Clip:
 - the front floor flaps (see **Floor flap and storage: Removal - Refitting**),
 - the front door sill linings (see **71A, Body internal trim, Front door sill lining: Removal - Refitting**, page **71A-27**),
 - the diagnostic socket cover at the front of the centre console.
- Move the sliding centre console forwards.
- Refit the complete rear seats (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**).

2 - Rear section

2 SEATS 3RD ROW

- Refit:
 - the clips **(8)** of the rear floor carpet,
 - the trim pieces **(7)**.
- Connect the accessories socket connector to the trim of the mounting rail for the second row seats.
- Clip on the trim of the mounting rail for the second row seats.
- Refit the bolts **(4)** on the mounting rail trim for the second row seats.

0 SEAT 3RD ROW

- Refit:
 - the luggage compartment floor lining (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page **71A-62**),
 - the seat belt strap output trims **(3)** of the second row seats.
- Refit:
 - the rear door sill linings (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page **71A-31**),
 - the rear inner sill upper trims (see **71A, Body internal trim, Rear door sill upper lining: Removal - Refitting**, page **71A-45**),
 - the B-pillar lower trims (see **71A, Body internal trim, B-pillar lower trim: Removal - Refitting**, page **71A-29**),
 - the clips **(2)** of the rear floor carpet in the rear storage compartments,
 - the floor storage flaps (see **Floor flap and storage: Removal - Refitting**) (**57A**, Interior equipment),
 - the bolts **(1)** of the sliding centre console,
 - the complete rear seats.
- 3 - Final operation common to both sections**
 - Reconnect the battery (see **Battery: Removal - Refitting**) (**80A**, Battery).

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

D95

Essential special tooling

Car. 1363 Set of trim removal levers.


IMPORTANT

To avoid any risk of damaging the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out the repair (see **Airbag and Pretensioners: Precautions for repair**) (88C, Airbags and pretensioners).

REMOVAL

I - REMOVAL PREPARATION OPERATION


- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

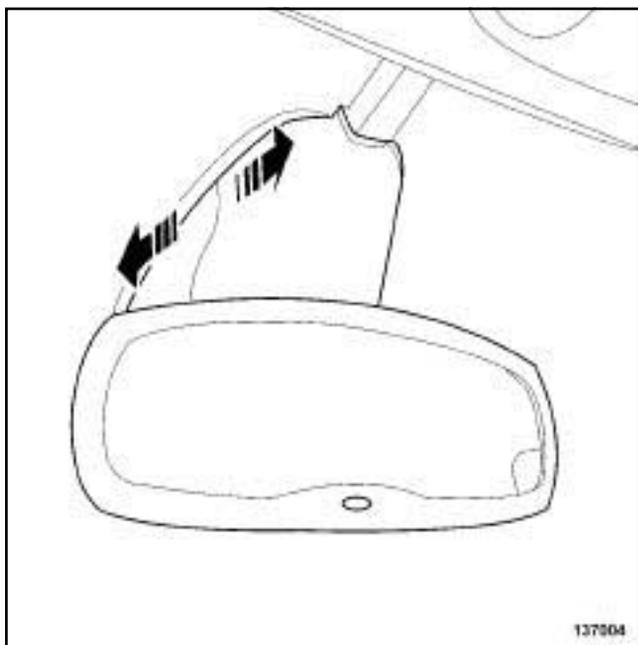

137504
137004

- Remove:
 - the upper cover of the interior rear view mirror using the tool (**Car. 1363**),
 - the lower cover of the interior rear view mirror.
- Unclip the lower cover from the interior rear view mirror.
- Disconnect the interior rear view mirror connectors.
- Remove:
 - the side door seals partially,
 - the sun visors (see **Sun visor: Removal - Refitting**) (57A, Interior equipment),

- the interior lights (see **Courtesy light: Removal - Refitting**) (81B, Interior lighting),
- the grab handles (see **Grab handle: Removal - Refitting**) (57A, Interior equipment),
- the windscreen pillar trims (see **71A, Body internal trim, A-pillar trim: Removal - Refitting**, page 71A-37).

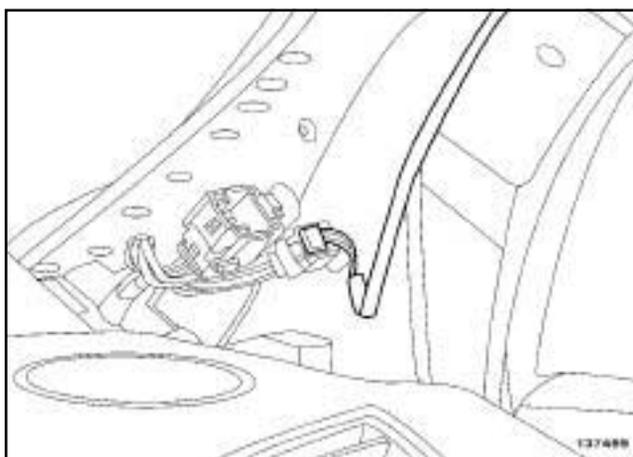

137499



137500

- Disconnect the headlining wiring connectors.

REAR BENCH FUNCTION

- Remove the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page 76A-6).

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A


D95

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK

- Remove the 1/3 and 2/3 rear bench seat base (see **1/3 and 2/3 rear bench seat: Removal - Refitting**).


- Remove:
 - the luggage compartment seal partially,
 - the side roof rail rear trims (see **71A, Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page **71A-38**),
 - the C-pillar upper trims (see **71A, Body internal trim, C-pillar upper trim: Removal - Refitting**, page **71A-47**),
 - the B-pillar upper trims (see **71A, Body internal trim, B-pillar upper trim: Removal - Refitting**, page **71A-39**),
 - the rear parcel shelf side trims (see **71A, Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page **71A-56**),
 - the rear quarter panel trims (see **71A, Body internal trim, Rear quarter panel trim: Removal - Refitting**, page **71A-48**).

FIXED WINDOW SUNROOF

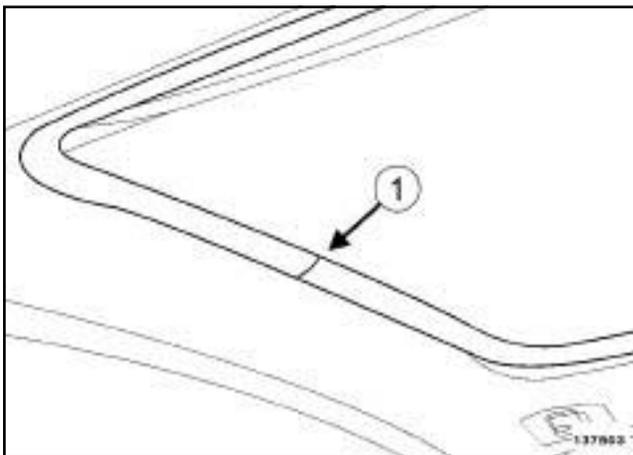


- Mark the positioning of the finishing seal (1).
- Remove the finishing seal.

II - OPERATION FOR REMOVAL OF PART CONCERNED

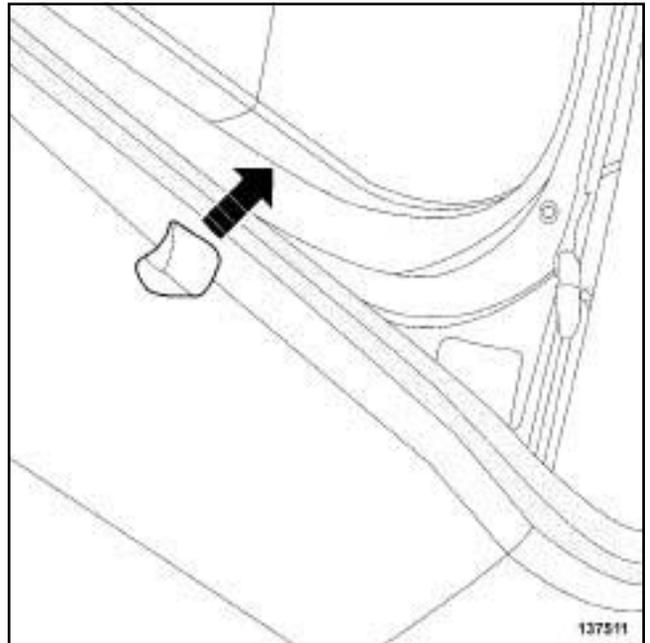

137511

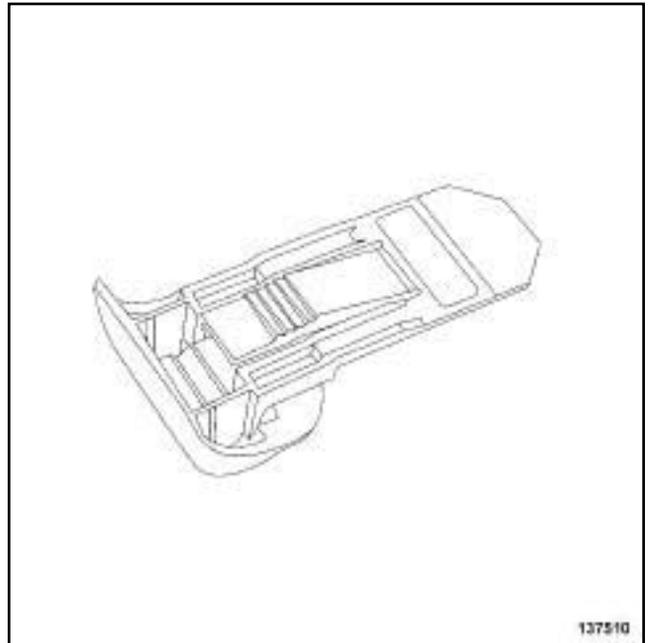

137510


- Unclip the rear mountings.

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A


D95

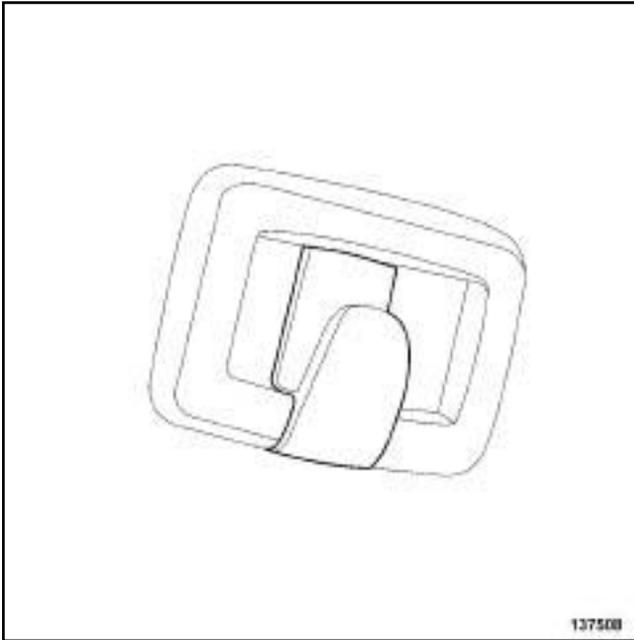



- Unclip the trims.



- Unclip the side mountings at (2) using a flat-blade screwdriver.

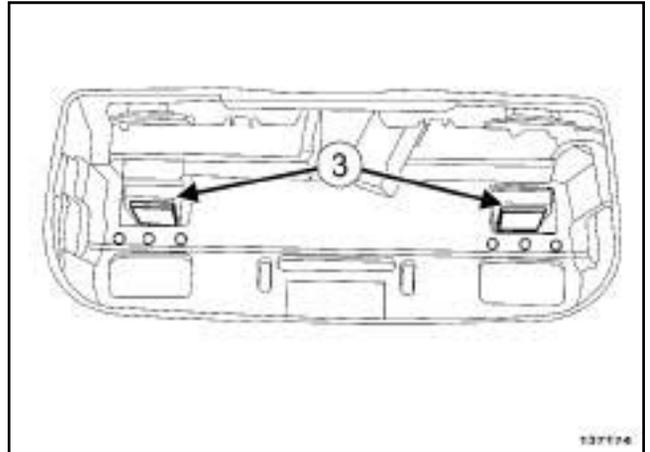

- Unclip the headlining front section (3) .

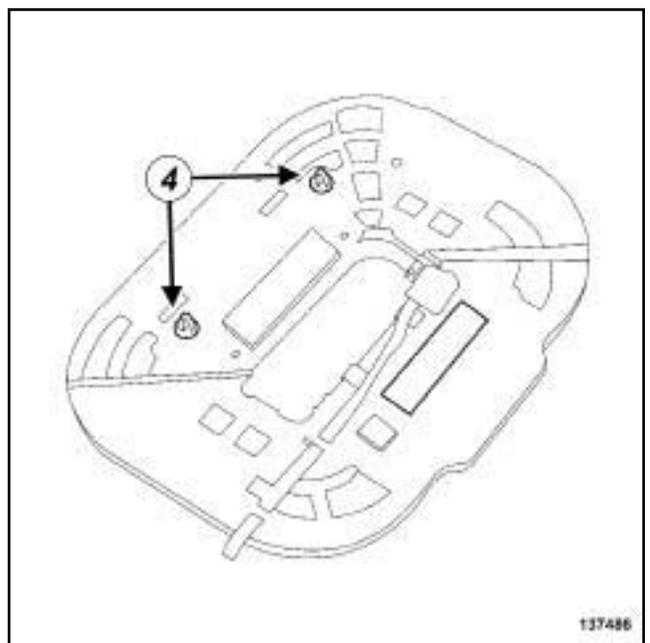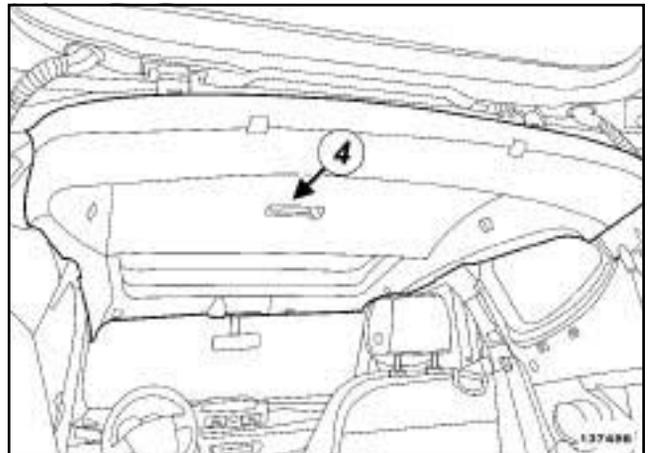


- Unclip the headlining central section (4) .

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

D95

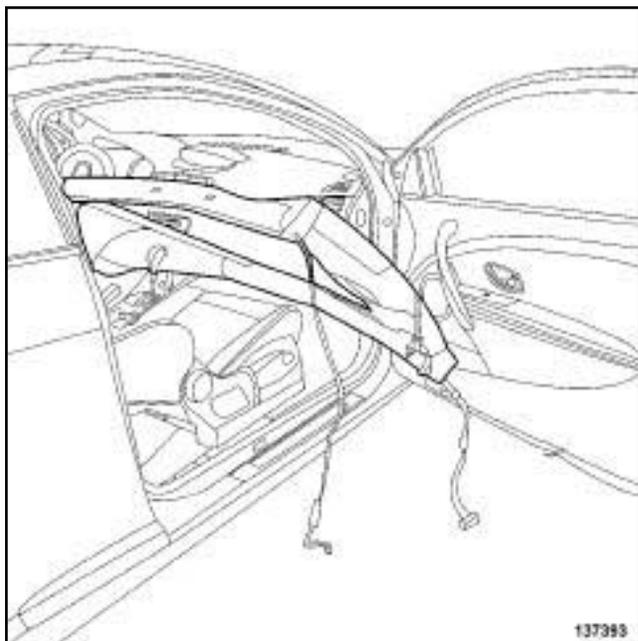


137393

- Remove the headlining (this operation requires two people).

REFITTING

I - REFITTING PREPARATION OPERATION

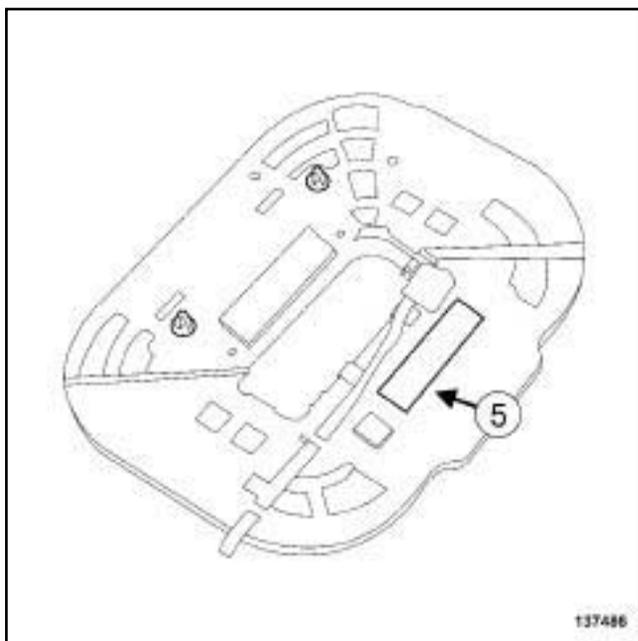

137486

- Check the presence and the condition of the velcro strips (5) .

II - REFITTING OPERATION FOR PART CONCERNED

FIXED WINDOW SUNROOF



Note:

For vehicles equipped with a sunroof, the headlining must be handled with care. The side edges are weakened by the design of the sunroof.

- Fit the headlining (this operation requires two people).
- Clip:
 - the headlining central section (4) ,
 - the headlining front section (3) ,
 - the side mountings,
 - the trims,
 - the rear mountings.

III - FINAL OPERATION

FIXED WINDOW SUNROOF

- Refit the finishing seal.
- Refit:
 - the rear quarter panel trims (see 71A, **Body internal trim, Rear quarter panel trim: Removal - Refitting**, page 71A-48) ,
 - the rear parcel shelf side trims (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
 - the B-pillar upper trims (see 71A, **Body internal trim, B-pillar upper trim: Removal - Refitting**, page 71A-39) ,
 - the C-pillar upper trims (see 71A, **Body internal trim, C-pillar upper trim: Removal - Refitting**, page 71A-47) ,
 - the side roof rail rear trims (see 71A, **Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page 71A-38) ,
 - the luggage compartment seal.

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

D95

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK

- Refit the 1/3 and 2/3 rear bench seat base (see **1/3 and 2/3 rear bench seat: Removal - Refitting**).

REAR BENCH FUNCTION

- Refit the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page 76A-6).

- Connect the headlining wiring connectors.
- Refit:
 - the windscreen pillar trims (see **71A, Body internal trim, A-pillar trim: Removal - Refitting**, page 71A-37),
 - the grab handles (see **Grab handle: Removal - Refitting**) (57B, Interior equipment),
 - the interior lights (see **Courtesy light: Removal - Refitting**) (81B, Interior lighting),
 - the sun visors (see **Sun visor: Removal - Refitting**) (57A, Interior equipment),
 - the side door seals partially.
- Connect the interior rear view mirror connectors.
- Refit:
 - the lower cover of the interior rear view mirror,
 - the upper cover of the interior rear view mirror.
- Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).
- Carry out a function test.

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

B95 or K95

Essential special tooling

Car. 1363 Set of trim removal levers.

IMPORTANT

To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- (see **Airbag and Pretensioners: Precautions for repair**) (88C, Airbag and pretensioners),
- (see **Vehicle: Precautions for repair**) (01D, Mechanical introduction).

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

PANORAMIC SUNROOF


- Remove the sunroof switch (see **Sunroof switch: Removal - Refitting**) (87D, Electric windows - Sunroof).

- Remove:

- the interior lights (see **Courtesy light: Removal - Refitting**) (81B, Interior lighting),
- the sun visors (see **Sun visor: Removal - Refitting**) (57A, Interior equipment),
- the courtesy lights (see **Vanity light: Removal - Refitting**) (81B, Interior lighting),
- the grab handles (see **Grab handle: Removal - Refitting**) (57A, Interior equipment),
- the windscreen pillar trims (see **71A, Body internal trim, A-pillar trim: Removal - Refitting**, page 71A-37) .



137500

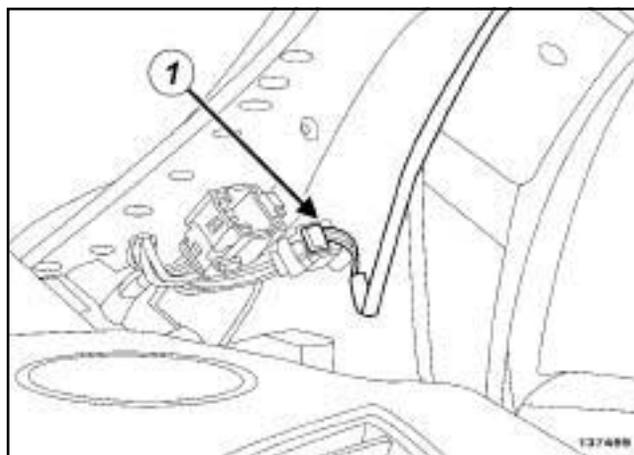

137499

- Disconnect the headlining wiring connectors (1) .

PANORAMIC SUNROOF


- Disconnect the sunroof wiring connectors.

BODY INTERNAL TRIM


Headlining: Removal - Refitting

71A

B95 or K95

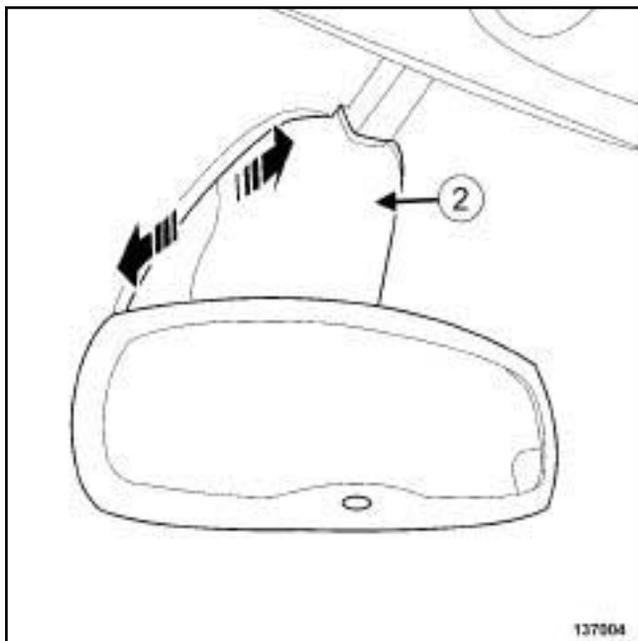


137004

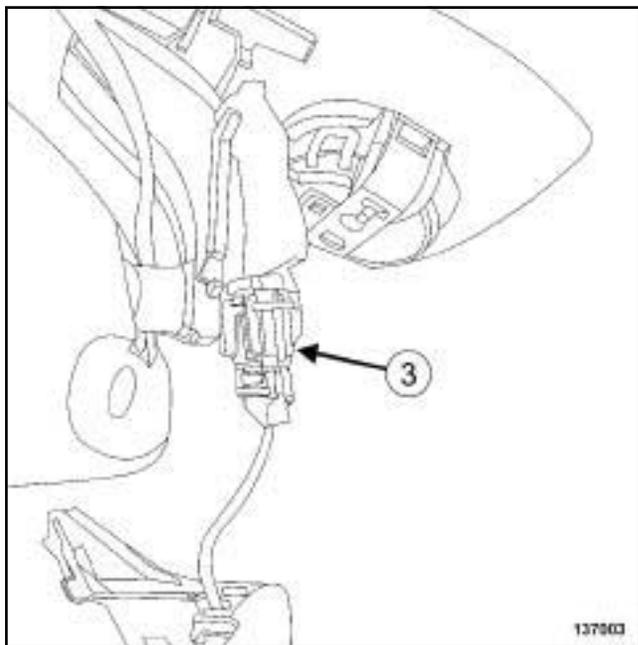

137003

- Remove:
 - the upper cover of the interior rear view mirror (2) using the tool (**Car. 1363**),
 - the lower cover of the interior rear view mirror.
- Disconnect the connectors (3) on the interior rear view mirror.

PANORAMIC SUNROOF

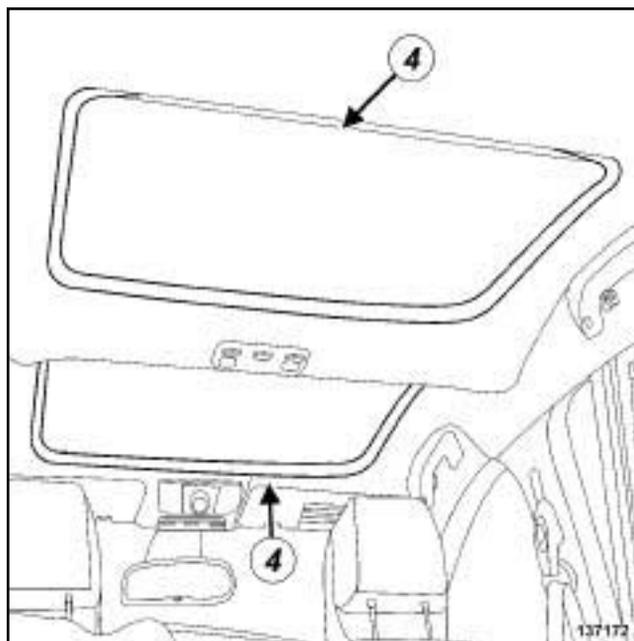

137172

- Mark the positioning of the finishing seals.
- Remove the finishing seals (4) .

REAR BENCH FUNCTION

- Remove the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page **76A-6**) .

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK

- Remove the 1/3 and 2/3 rear bench seat base (see **1/3 and 2/3 rear bench seat: Removal - Refitting**) .

- Remove:
 - the side door seals partially,
 - the luggage compartment seal partially,
 - the B-pillar lower trims (see **71A, Body internal trim, B-pillar lower trim: Removal - Refitting**, page **71A-29**) ,

BODY INTERNAL TRIM


Headlining: Removal - Refitting

71A


B95 or K95

- the B-pillar upper trims (see 71A, **Body internal trim, B-pillar upper trim: Removal - Refitting**, page 71A-39) ,
- the rear parcel shelf side trim panels (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
- the rear quarter panel trims (see 71A, **Body internal trim, Rear quarter panel trim: Removal - Refitting**, page 71A-48) .


II - OPERATION FOR REMOVAL OF PART CONCERNED

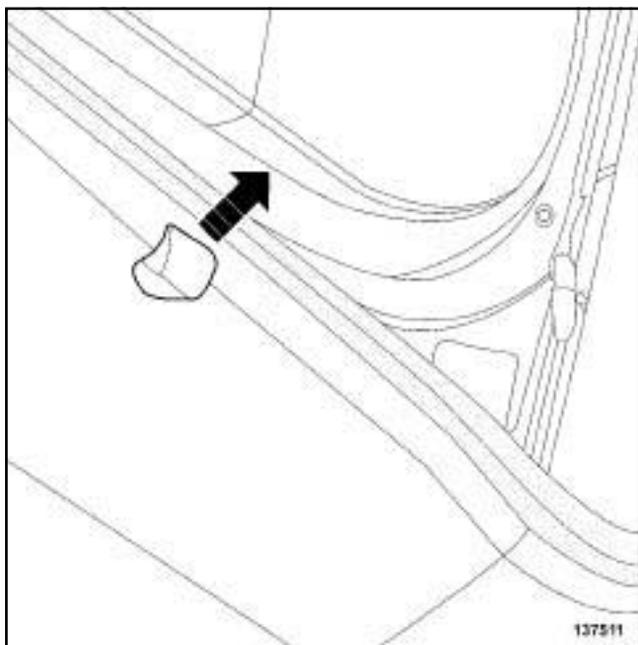

- Unclip the rear mountings.

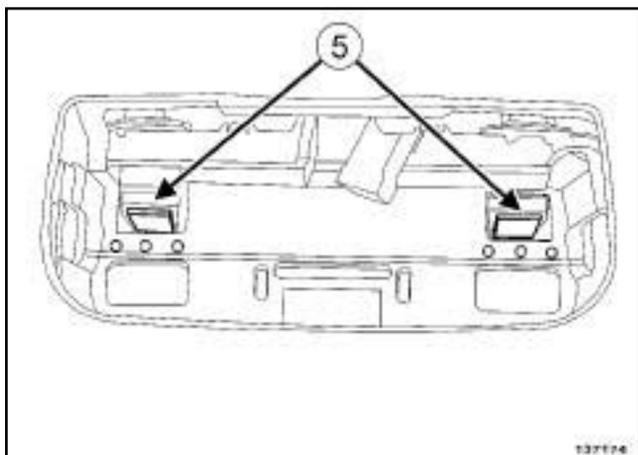


- Unclip the headlining front section (5) .

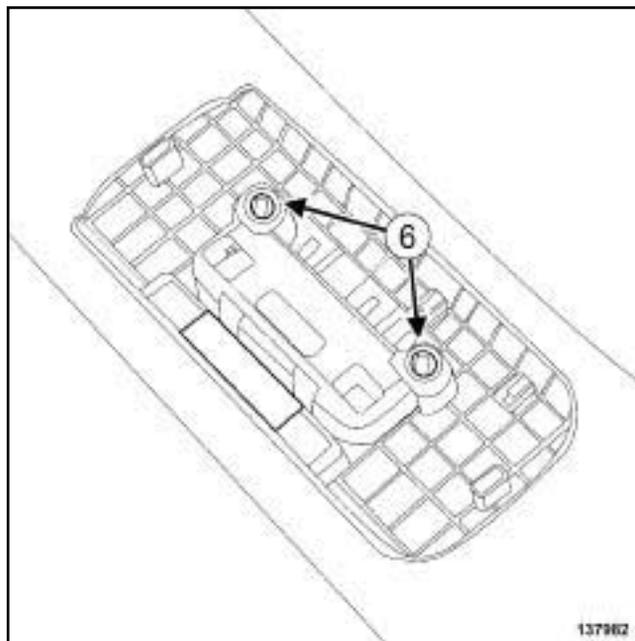

137962

137482

- Unclip the headlining central section (6) .

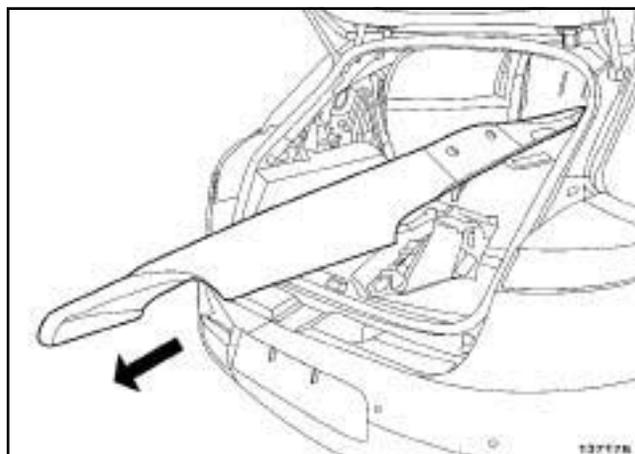

137175

- Remove the headlining (this operation requires two people).

PANORAMIC SUNROOF

-

Note:

For vehicles equipped with a sunroof, the headlining must be handled with care. The side edges are weakened by the design of the sunroof.

BODY INTERNAL TRIM


Headlining: Removal - Refitting

71A


B95 or K95

REFITTING

I - REFITTING PREPARATION OPERATION

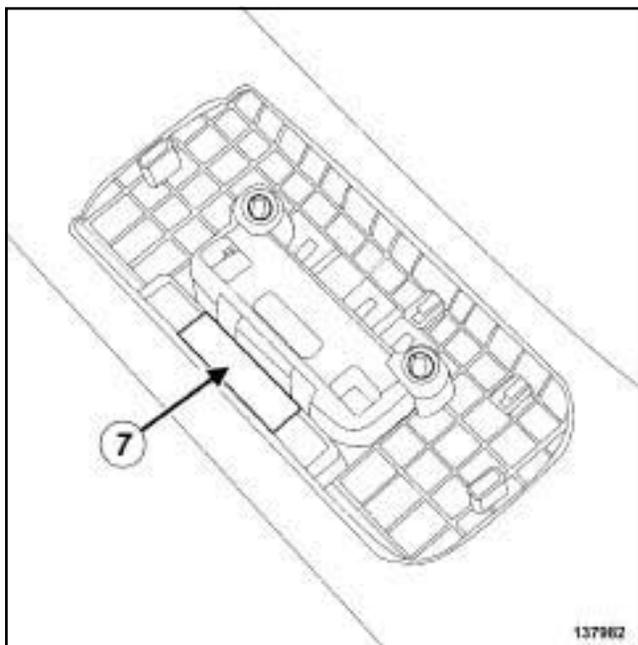

137482

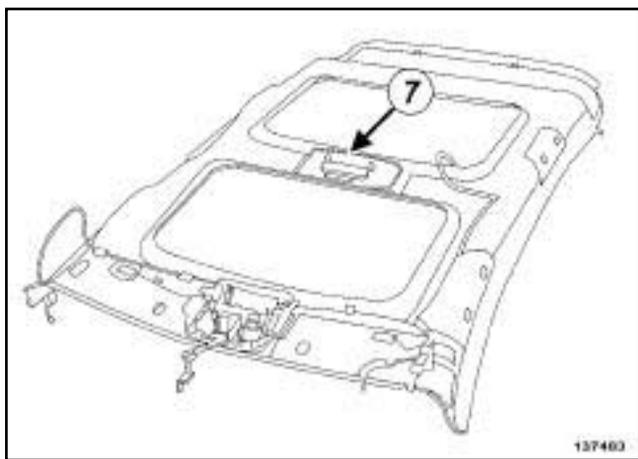

137483

- Check the presence and the condition of the velcro strips (7) .

II - REFITTING OPERATION FOR PART CONCERNED

PANORAMIC SUNROOF

-

Note:

For vehicles equipped with a sunroof, the headlining must be handled with care. The side edges are weakened by the design of the sunroof.

- Fit the headlining (this operation requires two people).
- Clip on:
 - the headlining central section,
 - the headlining front section.

III - FINAL OPERATION

- Refit:
 - the rear quarter panel trims (see 71A, **Body internal trim, Rear quarter panel trim: Removal - Refitting**, page 71A-48) ,
 - the rear parcel shelf side trim panels (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
 - the B-pillar upper trims (see 71A, **Body internal trim, B-pillar upper trim: Removal - Refitting**, page 71A-39) ,
 - the B-pillar lower trims (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) ,
 - the side door seals,
 - the luggage compartment seal.

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK

- Refit the 1/3 and 2/3 rear bench seat base (see 1/3 and 2/3 rear bench seat:Removal - Refitting) .

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

B95 or K95

REAR BENCH FUNCTION

- Refit the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page 76A-6)

PANORAMIC SUNROOF

- Refit the finishing seal.
- Connect the connectors on the interior rear view mirror.
- Clip on:
 - the lower trim of the rear view mirror cover,
 - the lower trim of the rear view mirror cover.
- Connect the headlining wiring connector.

PANORAMIC SUNROOF

- Connect the sunroof wiring connectors.
- Refit:
 - the windscreen pillar trims (see **71A, Body internal trim, A-pillar trim: Removal - Refitting**, page 71A-37) ,
 - the grab handles (see **Grab handle: Removal - Refitting**) (57A, Interior equipment),
 - the courtesy lights (see **Vanity light: Removal - Refitting**) (81B, Interior lighting),
 - the sun visors (see **Sun visor: Removal - Refitting**) (57A, Interior equipment),
 - the interior lights (see **Courtesy light: Removal - Refitting**) (81B, Interior lighting).

PANORAMIC SUNROOF

- Refit the sunroof switch (see **Sunroof switch: Removal - Refitting**) (87D, Electric windows - Sunroof).

- Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

J95

Essential special tooling

Car. 1363 Set of trim removal levers.

IMPORTANT

To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:


- (see **Airbag and Pretensioners: Precautions for repair**) (88C, Airbag and pretensioners),
- (see **Vehicle: Precautions for repair**) (01D, Mechanical introduction).

REMOVAL


I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

PANORAMIC SUNROOF

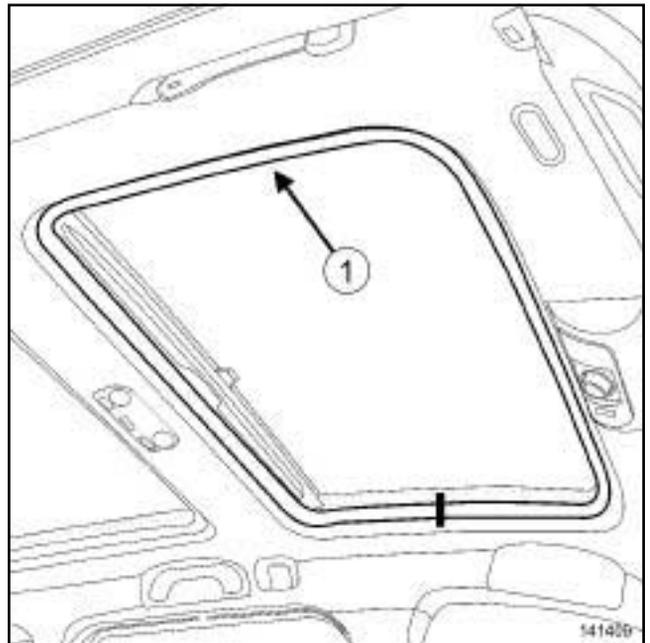

141409

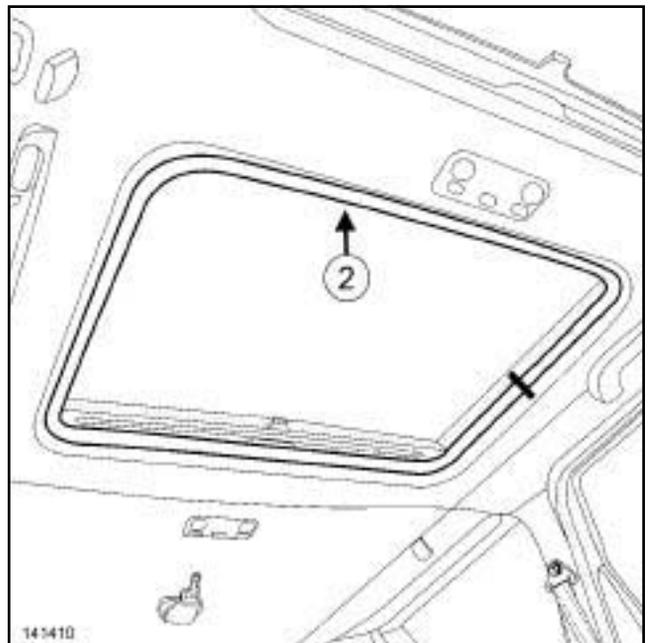

141410

- Mark the positioning of the finishing seals.
- Remove:
 - the front (1) and rear (2) finishing seals,
 - the sunroof switch (see **Sunroof switch: Removal - Refitting**) (87D, Electric windows - Sunroof).


BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A


J95

NORMAL ROOF

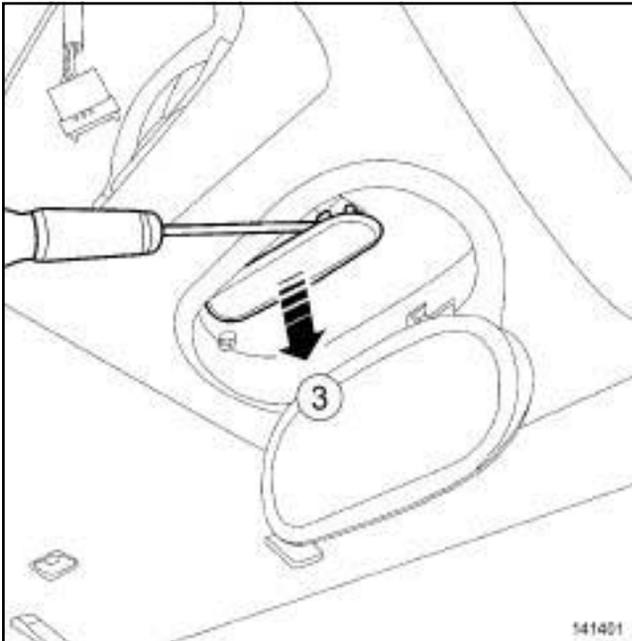


141401

- Unclip the trim at (3) .

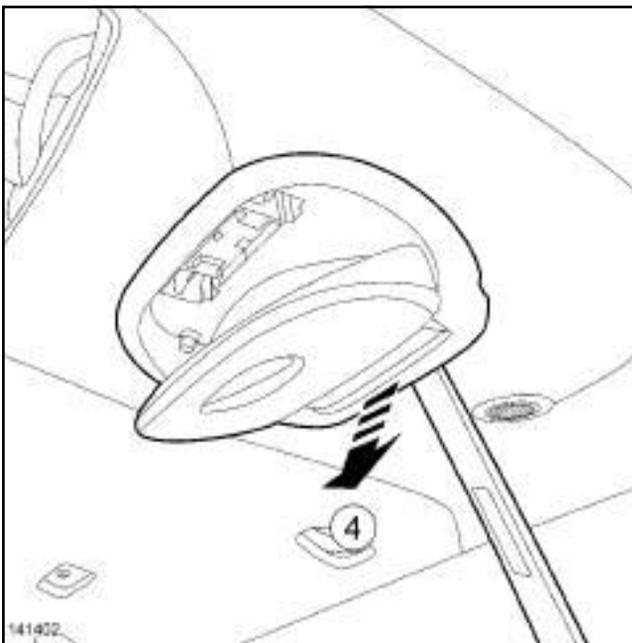

141402


- Unclip the additional rear view mirror mounting at (4) using the tool (**Car. 1363**).

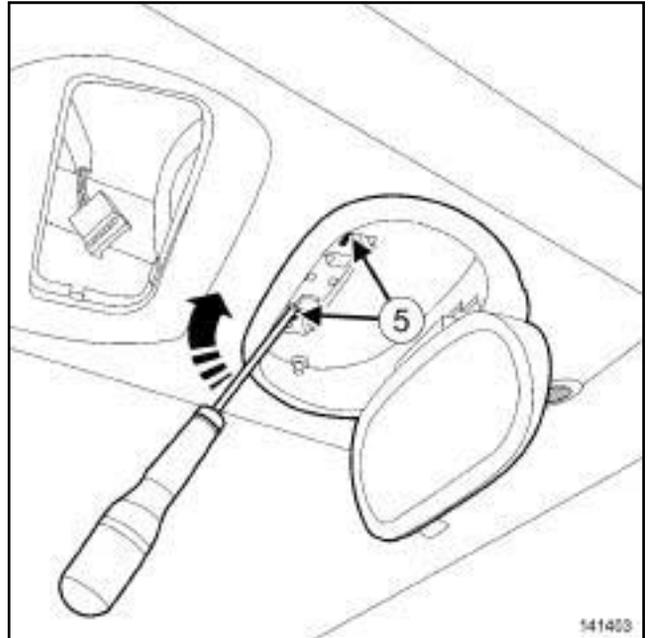

141403

141403

- Unclip the additional rear view mirror mounting at (5) using a small flat-blade screwdriver.

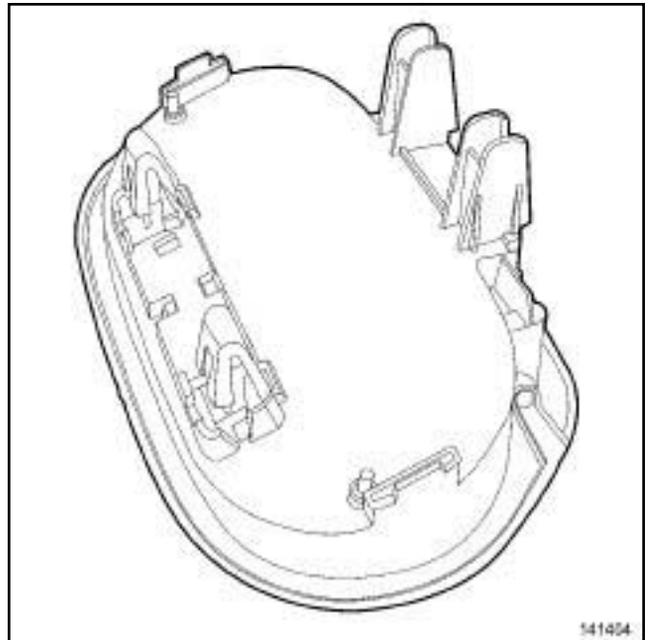

141404

141404

- Remove the additional rear view mirror.

- Remove:

- the interior lights (see **Courtesy light: Removal - Refitting**) (81B, Interior lighting),
- the sun visors (see **Sun visor: Removal - Refitting**) (57A, Interior equipment),

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

J95


- the courtesy lights (see **Vanity light: Removal - Refitting**) (81B, Interior lighting),
- the grab handles (see **Grab handle: Removal - Refitting**) (57A, Interior equipment),
- the windscreen pillar trims (see **71A, Body internal trim, A-pillar trim: Removal - Refitting**, page 71A-37) .

NORMAL ROOF




- Disconnect the connector (6) from the headlining wiring.

PANORAMIC SUNROOF

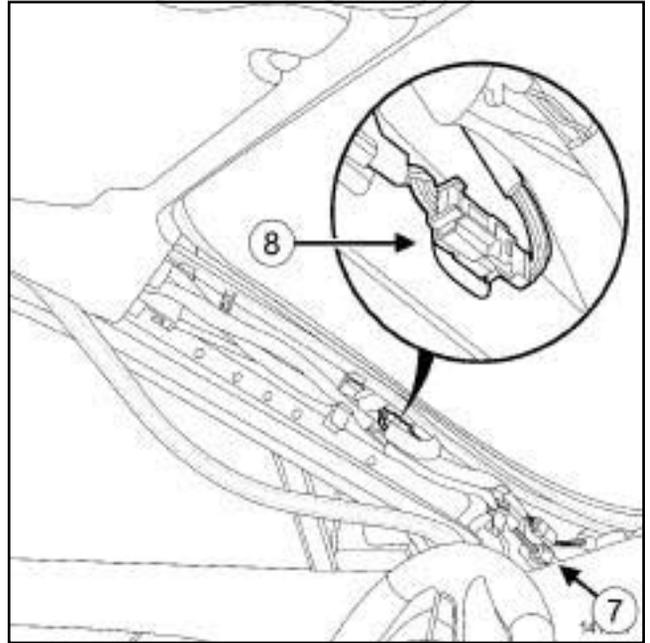

- Disconnect:
 - the headlining wiring connector (7) ,
 - the connector (8) of the sunroof wiring.

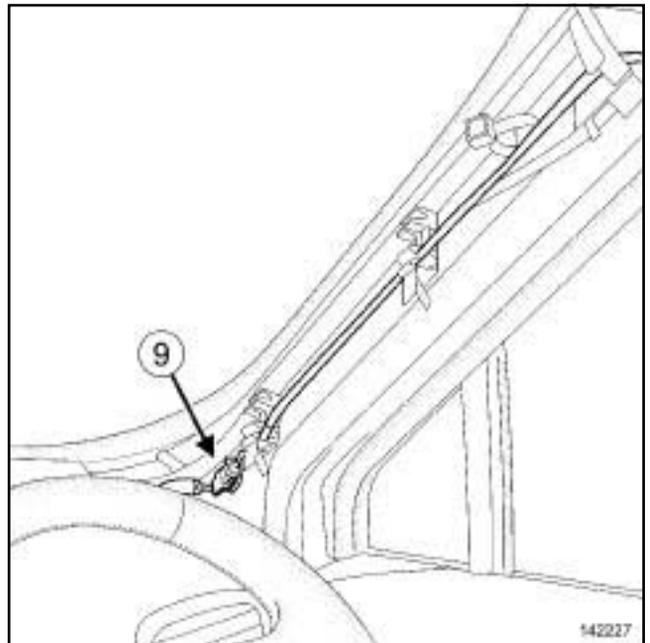

- Disconnect the connector (9) from the headlining wiring.


BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

J95

- ❑ Unclip the casings of the interior rear view mirror using the tool (Car. 1363).

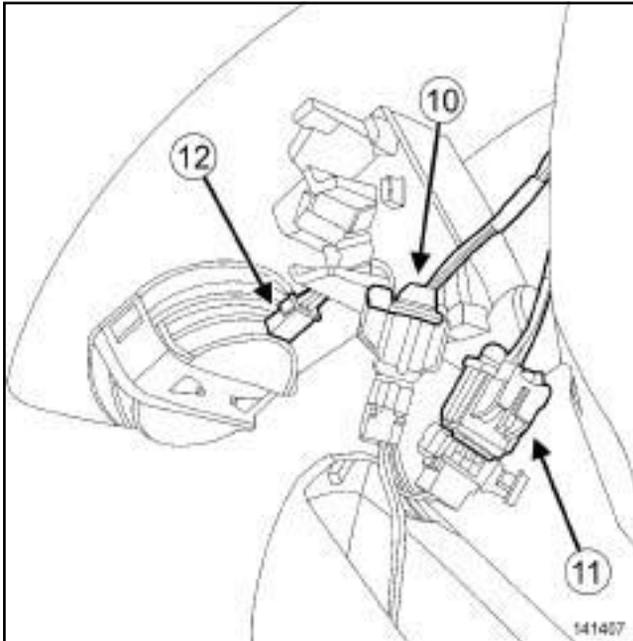

141407

- ❑ Disconnect the following connectors :
 - of the interior temperature sensor (10) ,
 - of the rear view mirror (11) .

AUTO LIGHTS+WIPER

- ❑ Disconnect the connector from the rain and light sensor (12) .

- ❑ Remove:

- the rear end panel lining (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) ,
- the luggage compartment floor trims (see 71A, **Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page 71A-62) ,
- the rear inner sill upper trims (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
- the rear parcel shelf side trim panels (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
- the rear wheel arch trims (see 71A, **Body internal trim, Rear wheel arch lining: Removal - Refitting**, page 71A-33) ,

- the rear quarter panel trims (see 71A, **Body internal trim, Rear quarter panel trim: Removal - Refitting**, page 71A-48) ,
- the B-pillar lower trims (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) ,
- the B-pillar upper trims (see 71A, **Body internal trim, B-pillar upper trim: Removal - Refitting**, page 71A-39) ,


BODY INTERNAL TRIM

Headlining: Removal - Refitting


71A

J95

II - OPERATION FOR REMOVAL OF PART CONCERNED

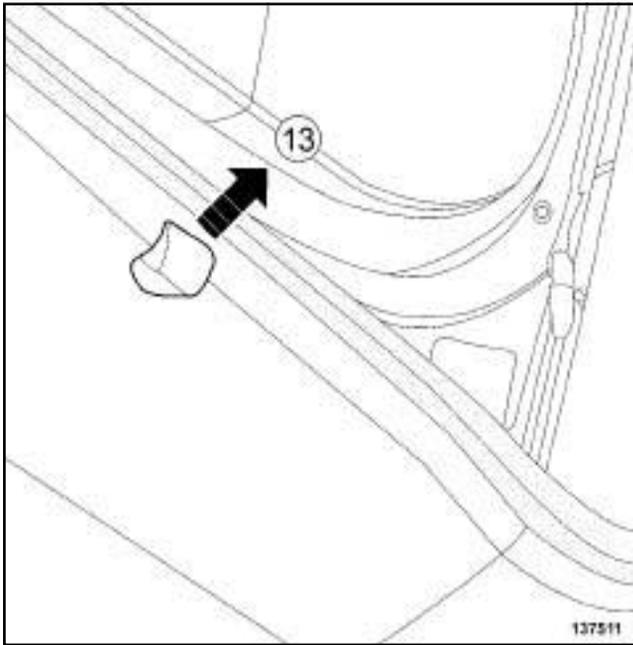


137511

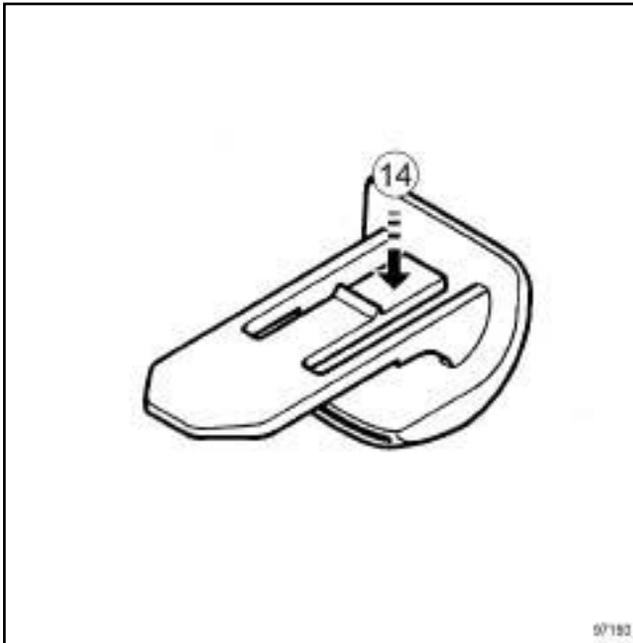


97193

- ❑ Remove the rear clips at (13) by pressing on the clip (14) using a small flat-blade screwdriver.

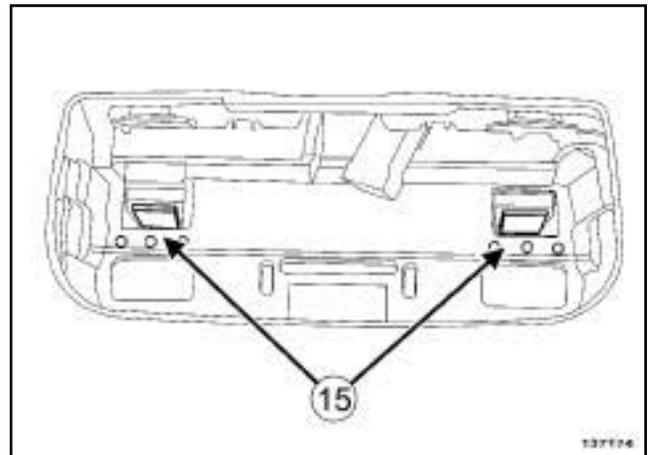

137174

- ❑ Unclip the headlining front section at (15) .

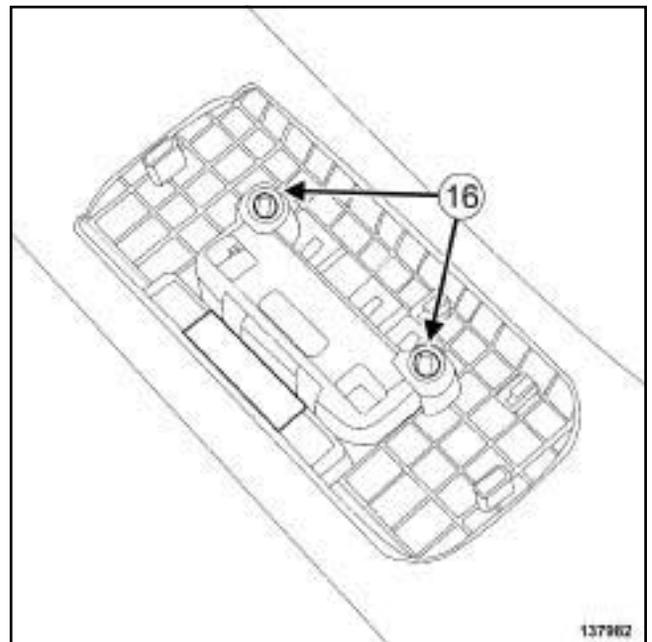

137482


- ❑ Unclip the headlining central section at (16) .
- ❑ Pass the rear central seat belt inside the headlining.

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

J95

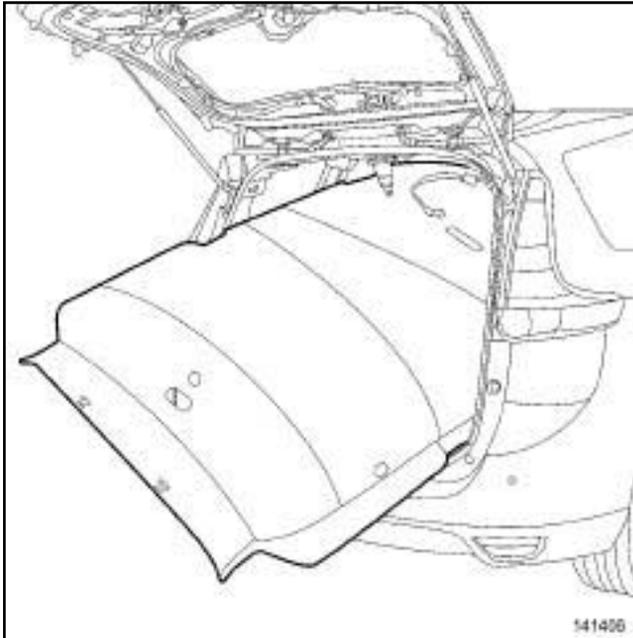

- Remove the headlining (this operation requires two people).


PANORAMIC SUNROOF

Note:

For vehicles equipped with a sunroof, the headlining must be handled with care. The side edges are weakened by the design of the sunroof.

REFITTING

I - REFITTING PREPARATION OPERATION

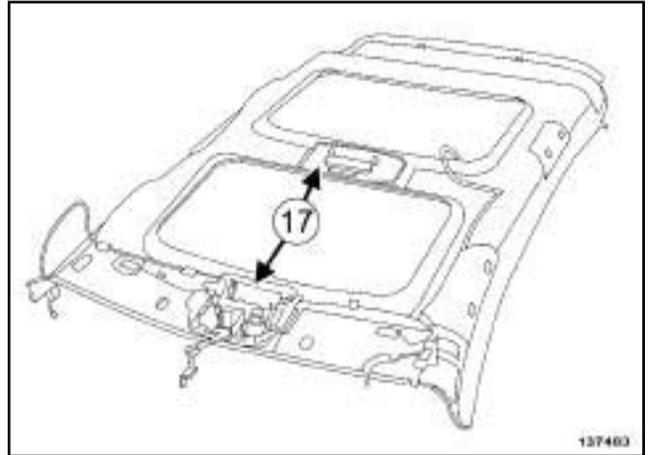

- Check the presence and the condition of the velcro strips at (17) .

II - REFITTING OPERATION FOR PART CONCERNED

PANORAMIC SUNROOF

Note:

For vehicles equipped with a sunroof, the headlining must be handled with care. The side edges are weakened by the design of the sunroof.

- Fit the headlining (this operation requires two people).
- Clip on:
 - the headlining central section,
 - the headlining front section,
 - the rear clips.

III - FINAL OPERATION

- Refit:
 - the B-pillar upper trims (see **71A, Body internal trim, B-pillar upper trim: Removal - Refitting, page 71A-39**) ,
 - the B-pillar lower trims (see **71A, Body internal trim, B-pillar lower trim: Removal - Refitting, page 71A-29**) ,

BODY INTERNAL TRIM

Headlining: Removal - Refitting

71A

J95

- the rear quarter panel trims (see **71A, Body internal trim, Rear quarter panel trim: Removal - Refitting**, page **71A-48**),
- the rear wheel arch trims (see **71A, Body internal trim, Rear wheel arch lining: Removal - Refitting**, page **71A-33**),
- the rear parcel shelf side trim panels (see **71A, Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page **71A-56**),
- the rear inner sill upper trims (see **71A, Body internal trim, Rear door sill upper lining: Removal - Refitting**, page **71A-45**),
- the luggage compartment floor trims (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page **71A-62**),
- the rear end panel lining (see **71A, Body internal trim, Rear end panel lining: Removal - Refitting**, page **71A-60**),

- Connect the connectors of:
 - of the rear view mirror,
 - of the interior temperature sensor.

AUTO LIGHTS+WIPER

- Connect the rain and light sensor connector.

- Clip on the casings of the interior rear view mirror.
- Connect the headlining wiring connectors.

PANORAMIC SUNROOF

- Connect the sunroof wiring connector.

- Refit:
 - the windscreen pillar trims (see **71A, Body internal trim, A-pillar trim: Removal - Refitting**, page **71A-37**),
 - the grab handles (see **Grab handle: Removal - Refitting**) (57A, Interior equipment),
 - the courtesy lights (see **Vanity light: Removal - Refitting**) (81B, Interior lighting),
 - the sun visors (see **Sun visor: Removal - Refitting**) (57A, Interior equipment),
 - the interior lights (see **Courtesy light: Removal - Refitting**) (81B, Interior lighting).

NORMAL ROOF

- Refit the additional rear view mirror.

PANORAMIC SUNROOF

- Refit:
 - the front and rear finishing seals,
 - the sunroof switch (see **Sunroof switch: Removal - Refitting**) (87D, Electric windows - Sunroof).
- Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

BODY INTERNAL TRIM


Door sill lining: Removal - Refitting

71A

D95

REMOVAL



I - REMOVAL PREPARATION OPERATION

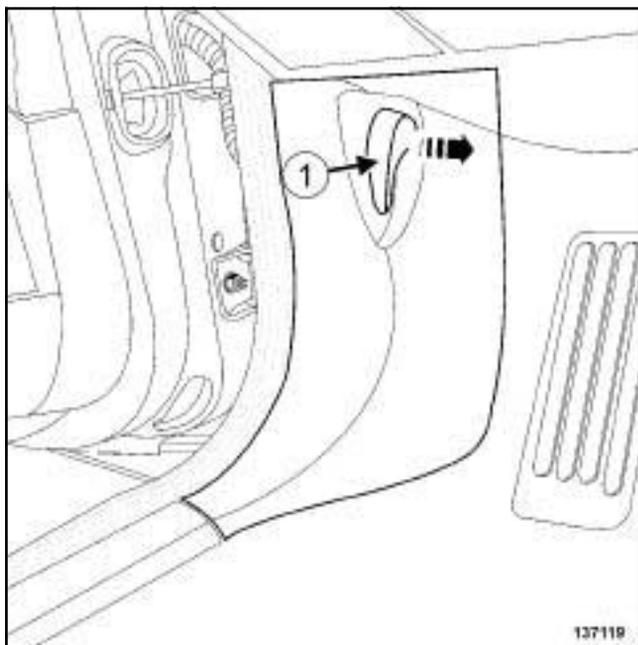

□ Remove:

- the front side door seal partially,
- the bonnet release handle (1) ,
- the B-pillar lower trim (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting, page 71A-29**) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

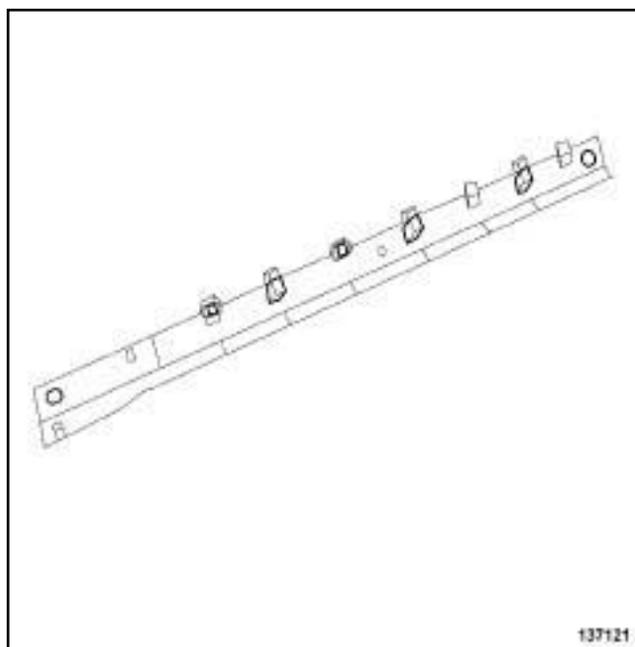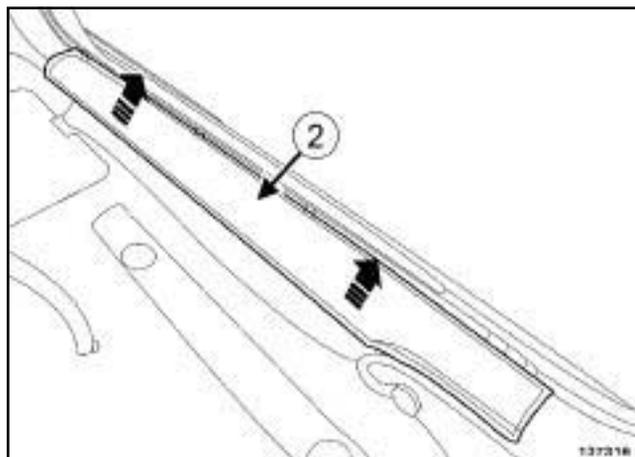


- Remove the door sill lining (2) .

BODY INTERNAL TRIM


Door sill lining: Removal - Refitting

71A

D95

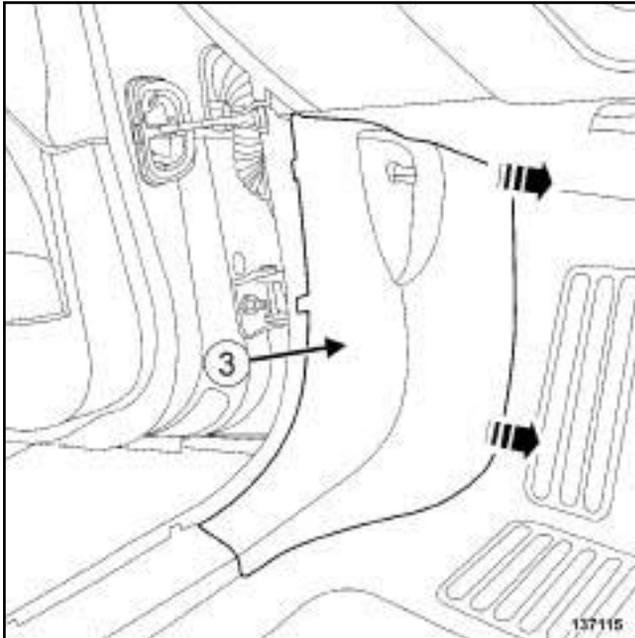

137115

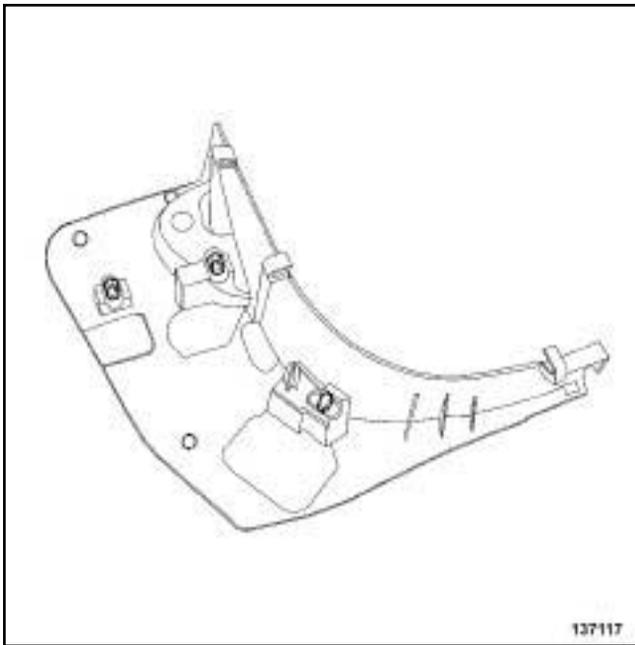

137117

- Remove the door sill lining (3) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
 - the door sill lining (3) ,
 - the door sill lining (2) .

II - FINAL OPERATION

- Refit:
 - the B-pillar lower trim (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting, page 71A-29**) ,
 - the bonnet release handle,
 - the front side door seal.


B95 or J95 or K95

Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL


I - REMOVAL PREPARATION OPERATION

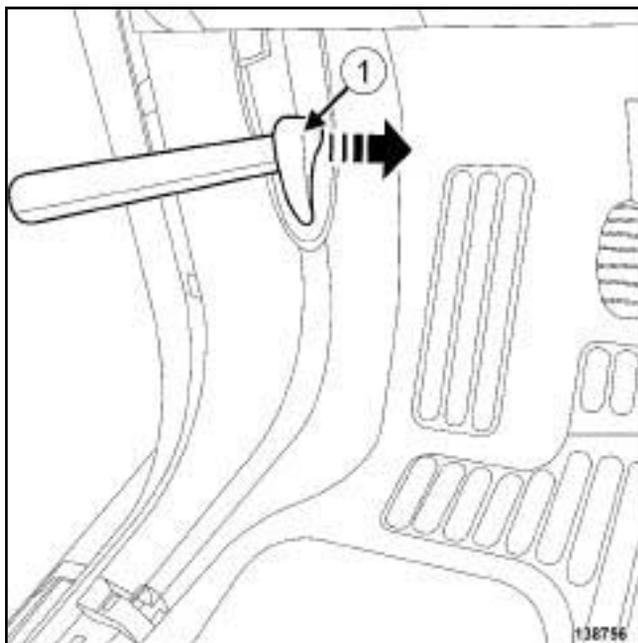

138756

- Remove:
 - the front side door seal partially,
 - the bonnet release control (1) from the left-hand side, using the tool (**Car. 1363**)
 - the B-pillar lower trim (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) .


J95

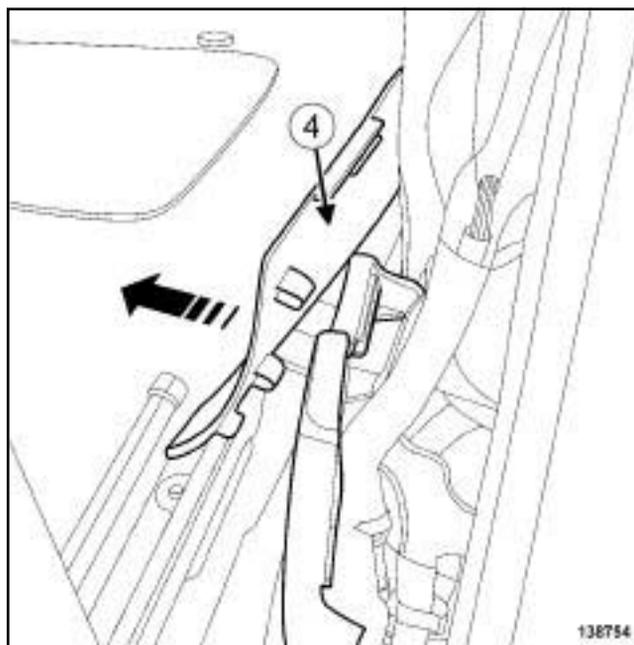

138754

- Partially remove the rear door sill lining (4) .


II - OPERATION FOR REMOVAL OF PART CONCERNED

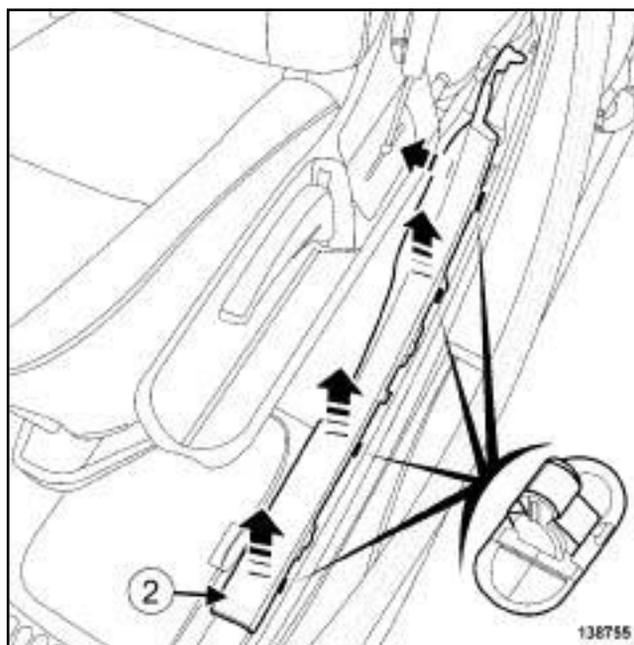


138755

- Remove the front door sill lining (2) , using the tool (**Car. 1363**).

B95 or J95 or K95

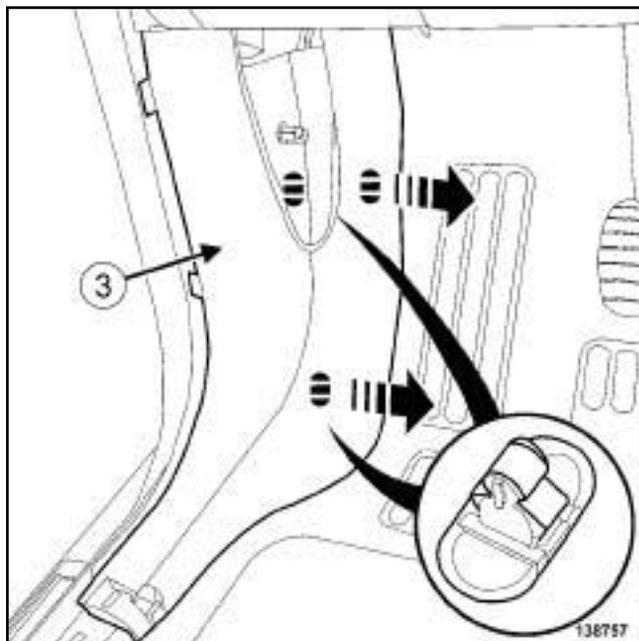

138757

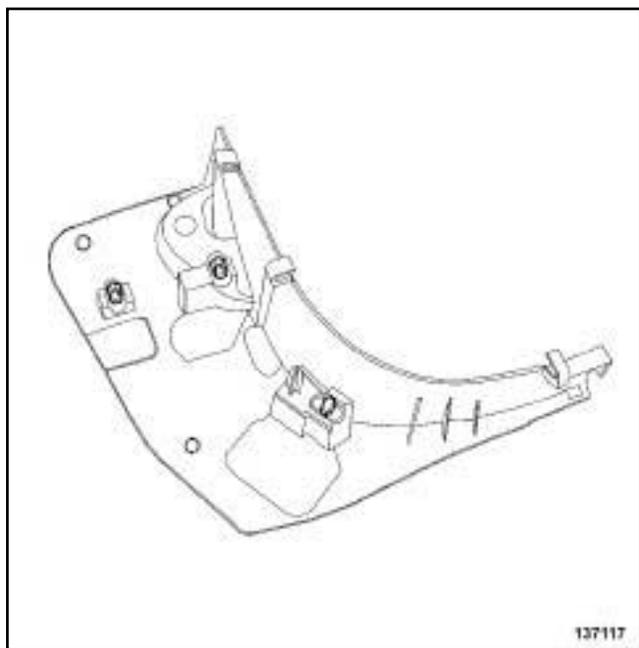

137117

- Remove the A-pillar lower trim (3) using the tool (Car. 1363).

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
 - the A-pillar lower trim (3) ,
 - the front door sill lining (2) .

II - FINAL OPERATION

- Refit:
 - the B-pillar lower trim (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting, page 71A-29**) ,
 - the bonnet release control (1) from the left-hand side,
 - the front side door seal.

BODY INTERNAL TRIM

B-pillar lower trim: Removal - Refitting

71A

B95 or J95 or K95


REMOVAL

I - REMOVAL PREPARATION OPERATION

- Partially remove the front and rear side door seals.


II - OPERATION FOR REMOVAL OF PART CONCERNED

B95

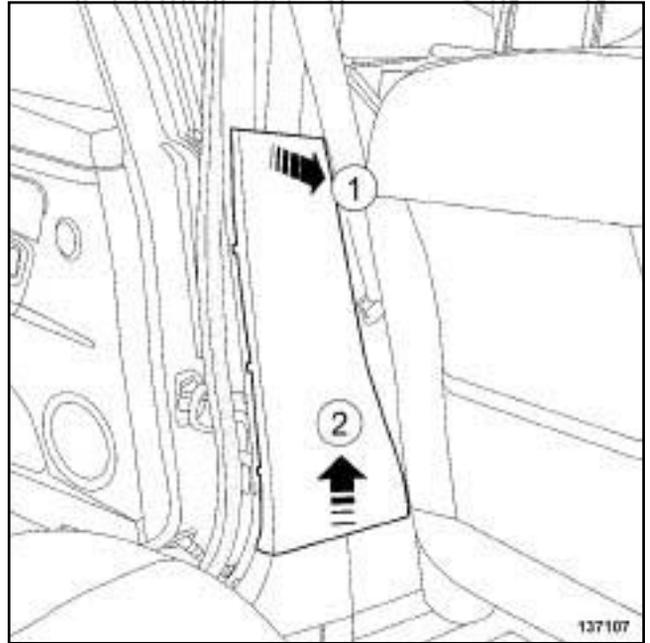

137107

137107

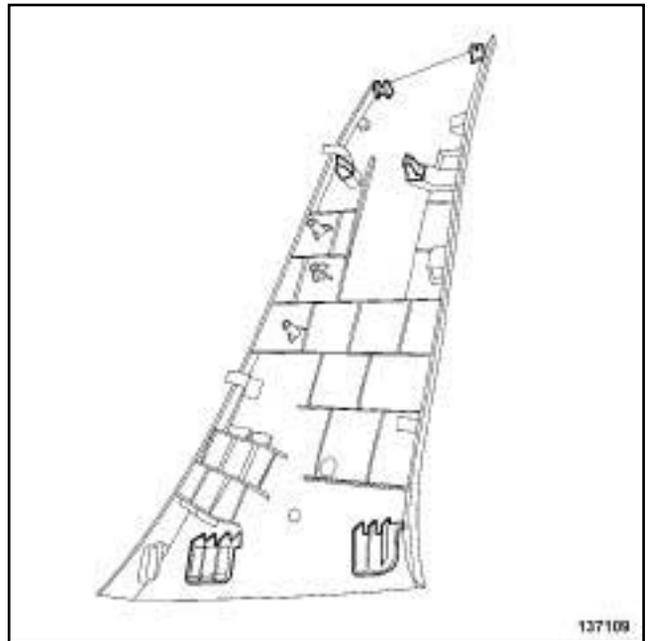


137109

137109


- Remove the B-pillar lower trim at (1) and (2) .

B95 or J95 or K95

J95

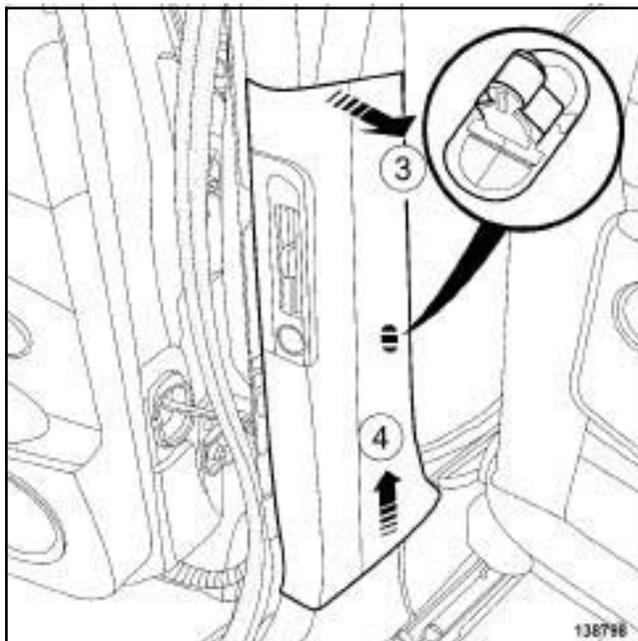

138798

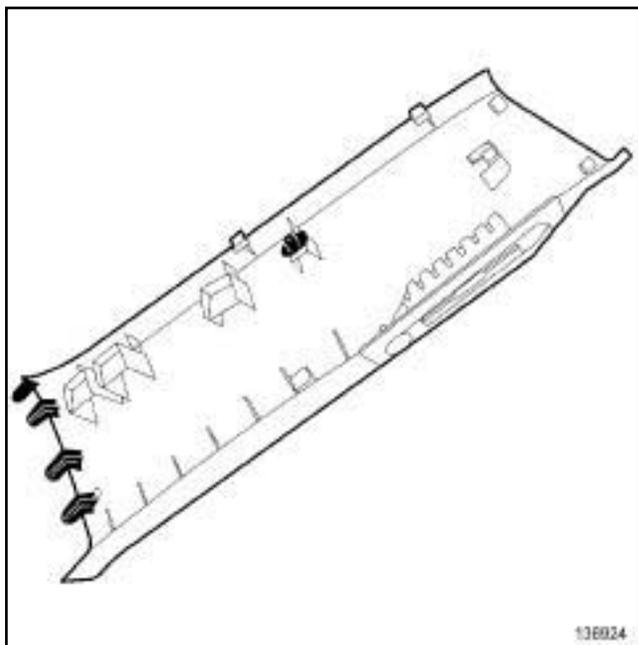

138924

- Remove the B-pillar lower trim at (3) and (4) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the B-pillar lower trim.

II - FINAL OPERATION

- Refit the front and rear side door seals.

B95 or J95 or K95

REMOVAL


I - REMOVAL PREPARATION OPERATION

❑ Remove:


- the B-pillar lower trim (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) ,
- the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

B95

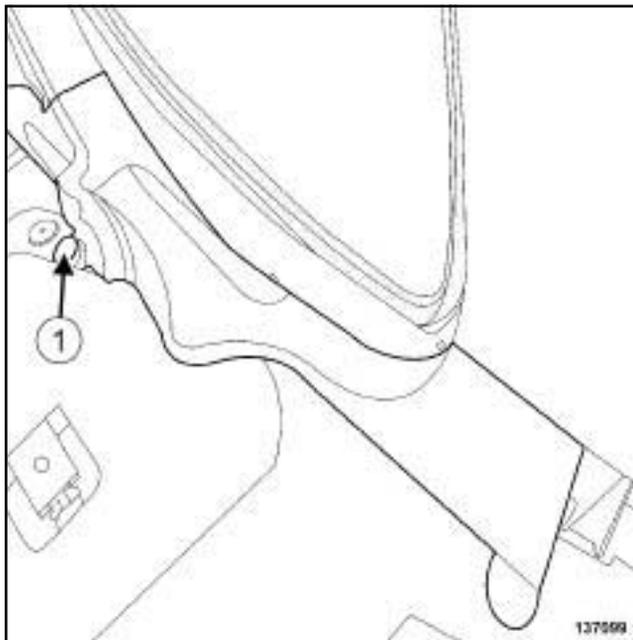

137099

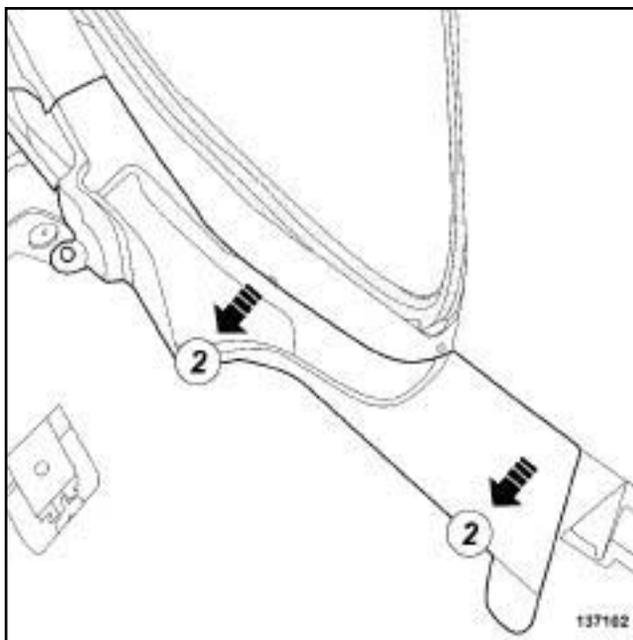


137102

❑ Remove:

- the clip (1) ,
- the rear door sill lining at (2) .

B95 or J95 or K95

J95

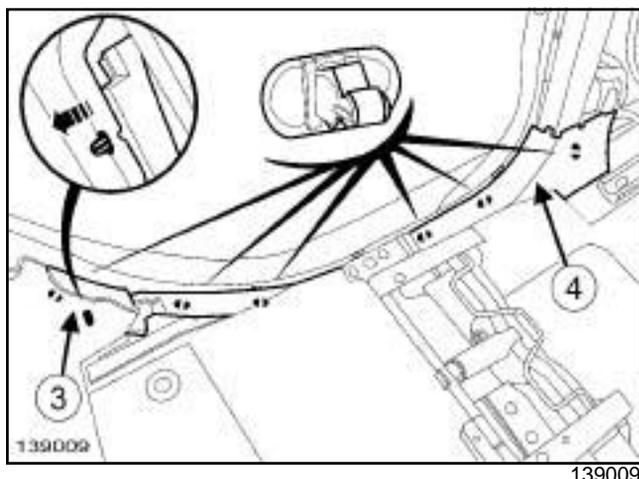

- Separate the rear wheel arch trim at (3) .
- Remove the rear door sill lining (4) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
 - the rear door sill lining,
 - the clip (1) .

II - FINAL OPERATION

- Refit:
 - the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
 - the B-pillar lower trim (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) .

Rear wheel arch lining: Removal - Refitting

B95 or D95 or K95

REMOVAL

I - REMOVAL PREPARATION OPERATION

B95 or K95

Remove:

- the rear end panel lining (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) ,
- the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) .

D95


Remove:

- the side roof rail rear trim (see 71A, **Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page 71A-38) ,
- the rear panel trim (see 71A, **Body internal trim, Rear panel trim: Removal - Refitting**, page 71A-54) ,
- the rear end panel trim (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) .

- Remove the rear parcel shelf side trim (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) .

II - OPERATION FOR REMOVAL OF PART CONCERNED


B95

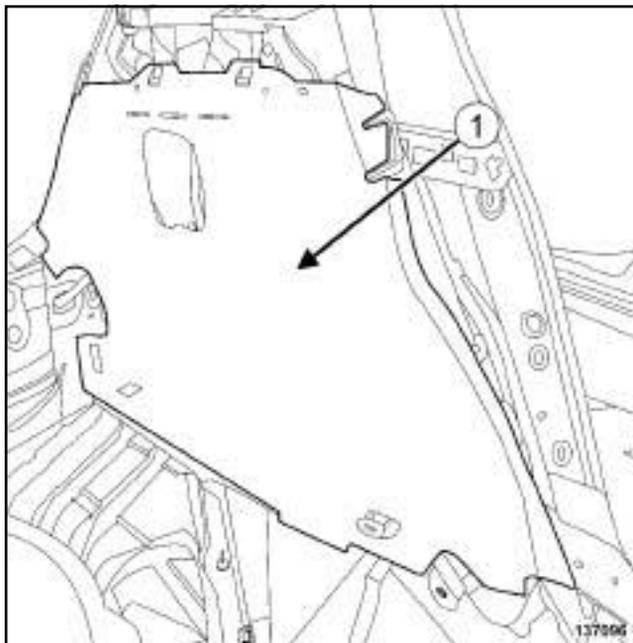

137096

- Remove the rear wheel arch trim (1) .

D95

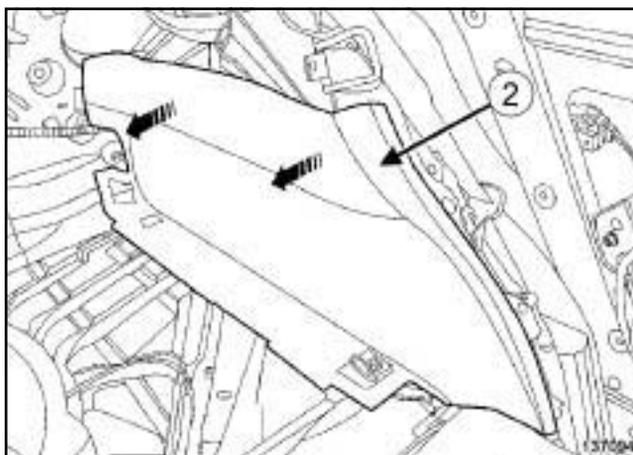


137094

- Remove the rear wheel arch trim (2) .

B95 or D95 or K95

K95

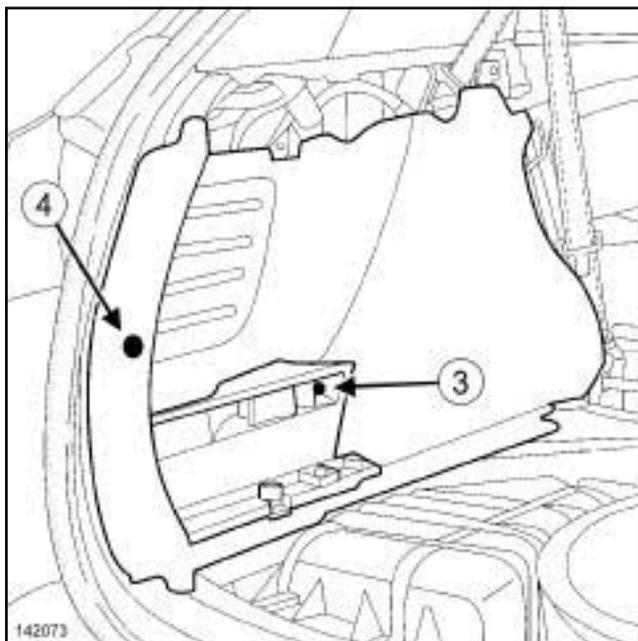

Remove:

- the rear wheel arch trim bolt (3) ,
- the rear wheel arch trim clip (4) ,
- the rear wheel arch trim.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

Refit the rear wheel arch trim.

II - FINAL OPERATION

Refit the rear parcel shelf side trim (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) .

D95

Refit:

- the rear end panel lining (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) ,
- the rear panel trim (see 71A, **Body internal trim, Rear panel trim: Removal - Refitting**, page 71A-54) ,

- the side roof rail rear trim (see 71A, **Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page 71A-38) .

B95 or K95

Refit:

- the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
- the rear end panel trim (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) .

Rear wheel arch lining: Removal - Refitting

J95

REMOVAL

I - REMOVAL PREPARATION OPERATION

Remove:

- the rear end panel lining (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) ,
- the luggage compartment floor lining (see 71A, **Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page 71A-62) ,
- the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) .


LONG CHASSIS

Remove the rear inner sill trim (see 71A, **Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-31) .

Remove the rear parcel shelf side trim (see **Rear parcel shelf trim: Removal - Refitting**) .


II - OPERATION FOR REMOVAL OF PART CONCERNED

LONG CHASSIS

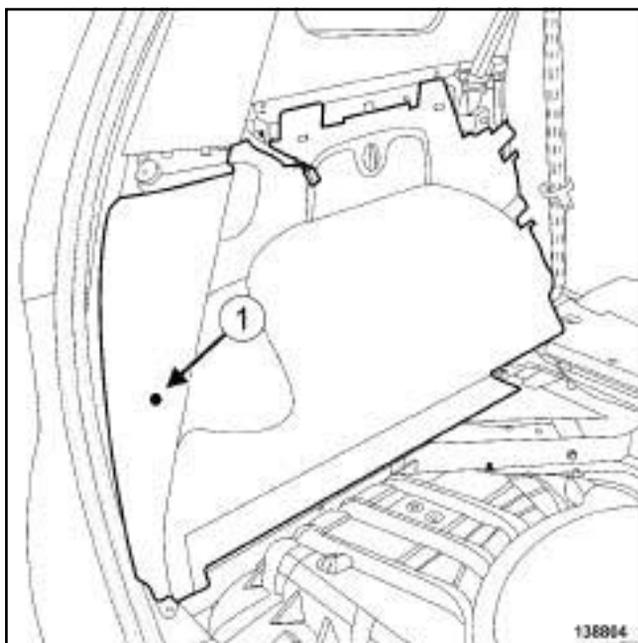

138804

Remove the wheel arch trim clip (1) .

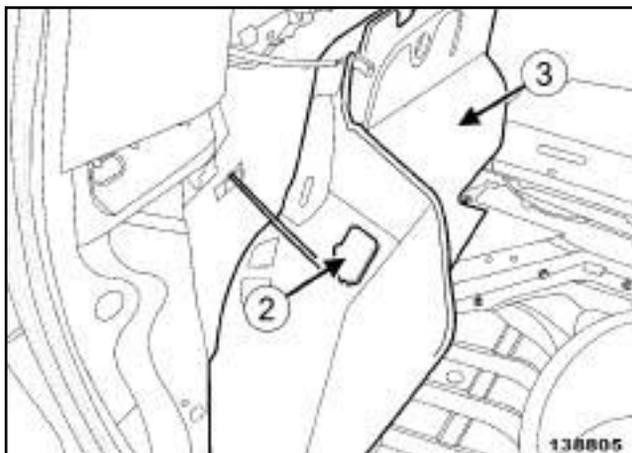


138805

Disconnect the connector (2) from the luggage compartment light.

Remove the rear wheel arch trim (3) .

STANDARD CHASSIS

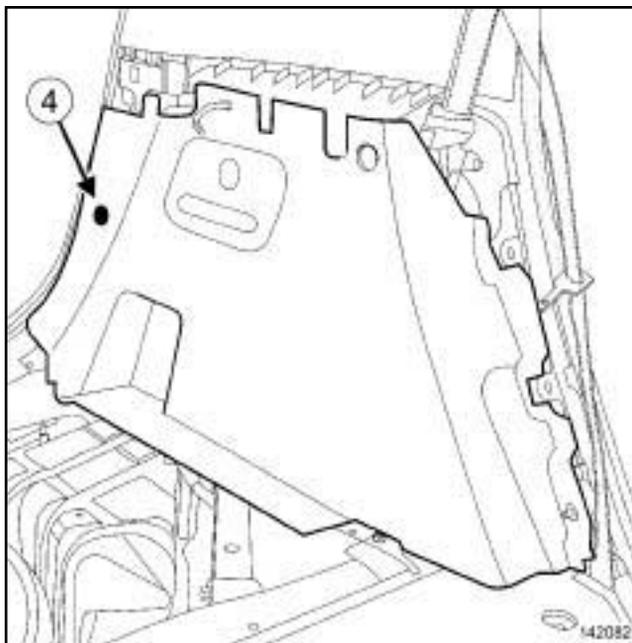

142082

Remove:

- the wheel arch trim clip (4) ,
- the rear wheel arch trim.

Rear wheel arch lining: Removal - Refitting

J95

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

LONG CHASSIS

- Connect the luggage compartment light connector (2) .

Refit:

- the rear wheel arch trim,
- the clip of the wheel arch trim.

II - FINAL OPERATION

- Refit the rear parcel shelf side trim (see **Rear parcel shelf trim: Removal - Refitting**) .

LONG CHASSIS

- Refit the rear door sill lining (see **71A, Body internal trim, Rear door sill lining: Removal - Refitting**, page **71A-31**) .

Refit:

- the rear inner sill upper trim (see **71A, Body internal trim, Rear door sill upper lining: Removal - Refitting**, page **71A-45**) ,
- the luggage compartment floor lining (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page **71A-62**) ,
- the rear end panel trim (see **71A, Body internal trim, Rear end panel lining: Removal - Refitting**, page **71A-60**) .

BODY INTERNAL TRIM

A-pillar trim: Removal - Refitting

71A

B95 or D95 or J95 or K95

Essential special tooling


Car. 1363 Set of trim removal levers.

REMOVAL


I - REMOVAL PREPARATION OPERATION

- Partially remove the front side door seal.

II - OPERATION FOR REMOVAL OF PART CONCERNED

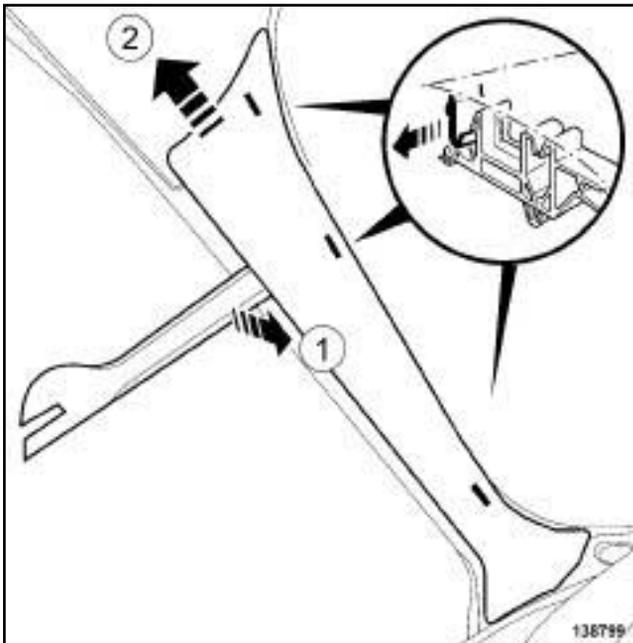

138799

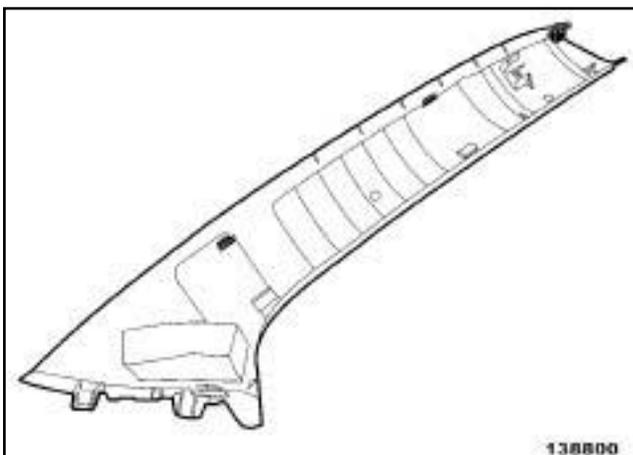

138800

- Partially unclip the windscreen pillar trim at (1) using the tool (Car. 1363).
- Remove the windscreen pillar trim at (2) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Insert the lower section of the windscreen pillar trim.
- Clip on the entire length of the A-pillar trim.

II - FINAL OPERATION

- Refit the front side door seal.

Rear roof drip moulding lining: Removal - Refitting


D95

REMOVAL


I - REMOVAL PREPARATION OPERATION

- Tilt the rear bench seatback.

II - OPERATION FOR REMOVAL OF PART CONCERNED

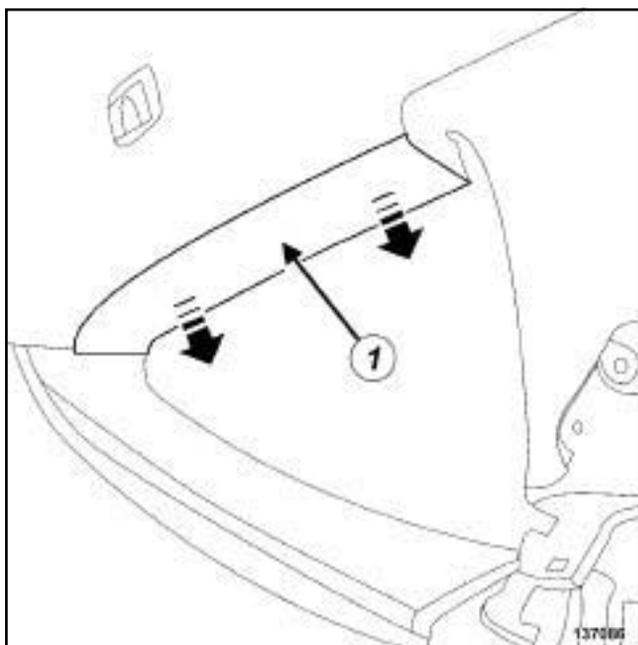

137086

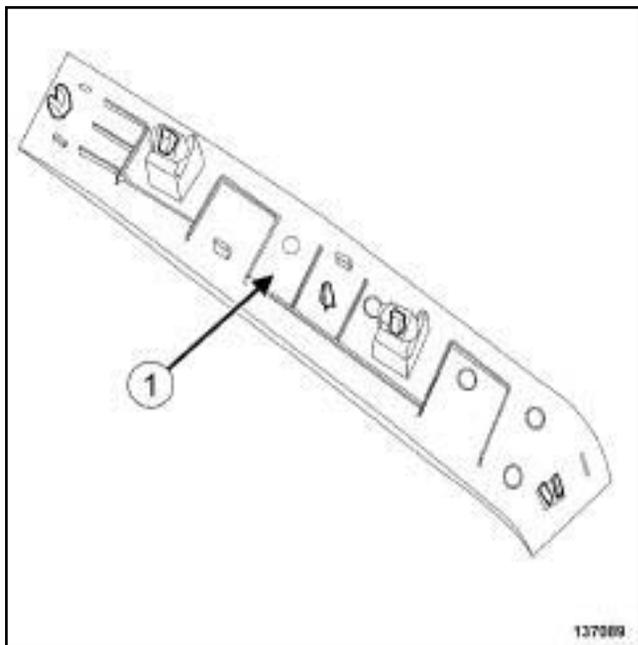

137089

- Remove the rear side roof rail (1) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the rear side roof rail.

II - FINAL OPERATION

- Position the rear bench seatback.

D95

Tightening torques

bolt of the front side seat belt return mechanism	21 N.m
---	---------------

REMOVAL

I - REMOVAL PREPARATION OPERATION


Remove:

- the side roof rail rear trim (see 71A, **Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page 71A-38) ,
- the rear bench seat base (see **Rear bench seat base: Removal - Refitting**) ,
- the door sill lining (see 71A, **Body internal trim, Door sill lining: Removal - Refitting**, page 71A-25) ,
- the rear panel trim (see 71A, **Body internal trim, Rear panel trim: Removal - Refitting**, page 71A-54) .



137792

- Remove the trim (1) of the front side seat belt return mechanism.

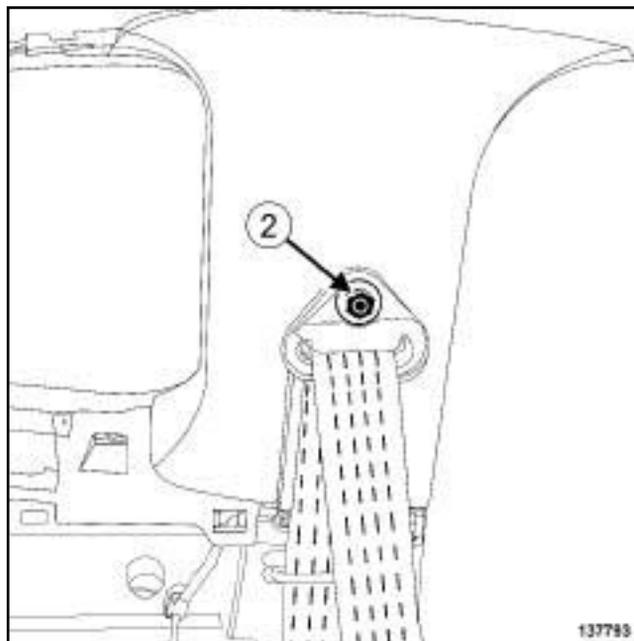


137793

137793

Remove:

- the bolt (2) of the front side seat belt return mechanism,
- the front side seat belt return mechanism.

II - OPERATION FOR REMOVAL OF PART CONCERNED

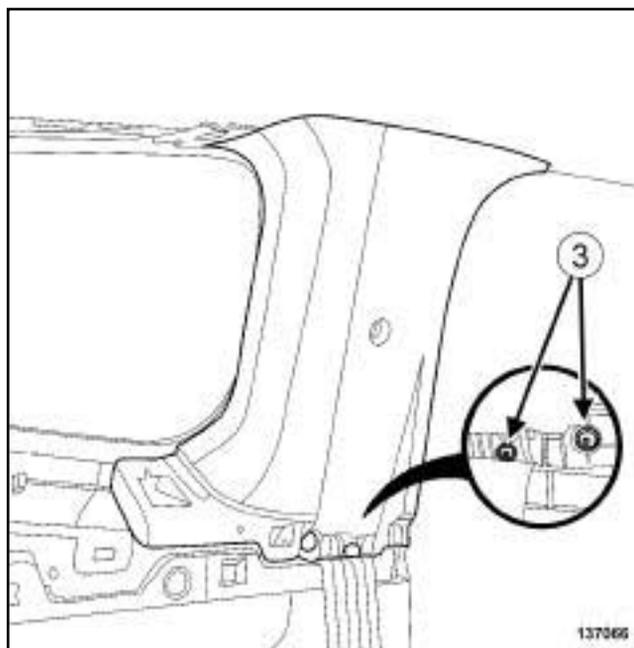

137066

137066


- Remove the bolts (3) of the B-pillar upper trim.

BODY INTERNAL TRIM

B-pillar upper trim: Removal - Refitting

71A

D95

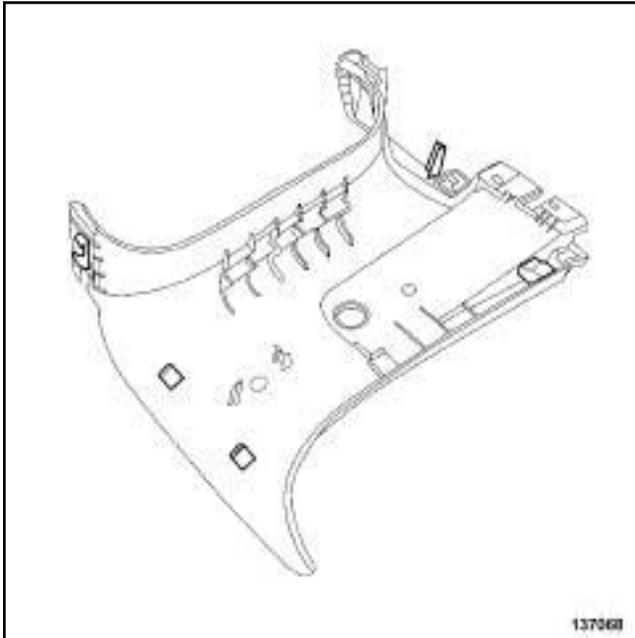

137068

- Remove the B-pillar upper trim.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the B-pillar upper trim.

II - FINAL OPERATION

- Refit the front side seat belt return mechanism.
- Torque tighten the **bolt of the front side seat belt return mechanism (21 N.m)**.
- Refit:
 - the trim of the front side seat belt return mechanism,
 - the rear panel trim (see **71A, Body internal trim, Rear panel trim: Removal - Refitting**, page **71A-54**) ,
 - the door sill lining (see **71A, Body internal trim, Door sill lining: Removal - Refitting**, page **71A-25**) ,
 - the rear bench seat base (see **Rear bench seat base: Removal - Refitting**) ,
 - the side roof rail rear trim (see **71A, Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page **71A-38**) .

BODY INTERNAL TRIM

B-pillar upper trim: Removal - Refitting

71A

B95 or J95 or K95

Tightening torques

bolt of the front side seat belt return mechanism	21 N.m
---	--------

REMOVAL


I - REMOVAL PREPARATION OPERATION

Remove:

- the B-pillar lower trim (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) ,
- the side door seals partially.



139020

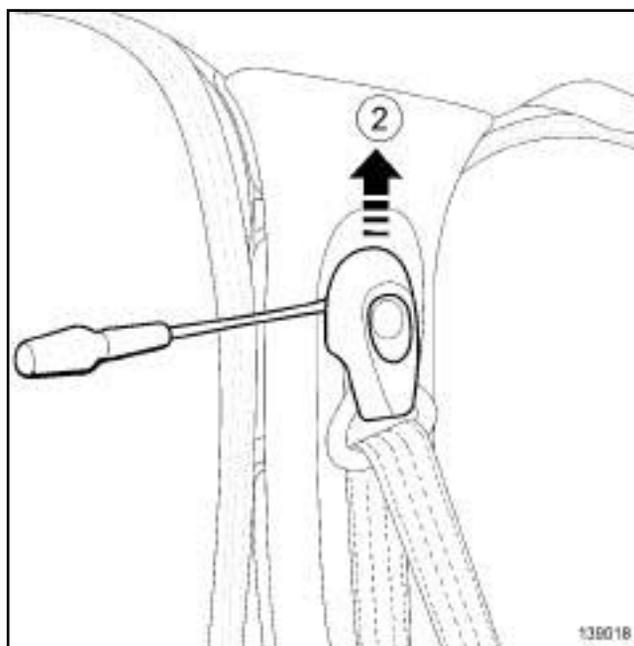


139018

- Unclip the trim by pressing on the locking clips (1) using a flat-blade screwdriver.
- Remove the trim (2) .

B-pillar upper trim: Removal - Refitting


B95 or J95 or K95

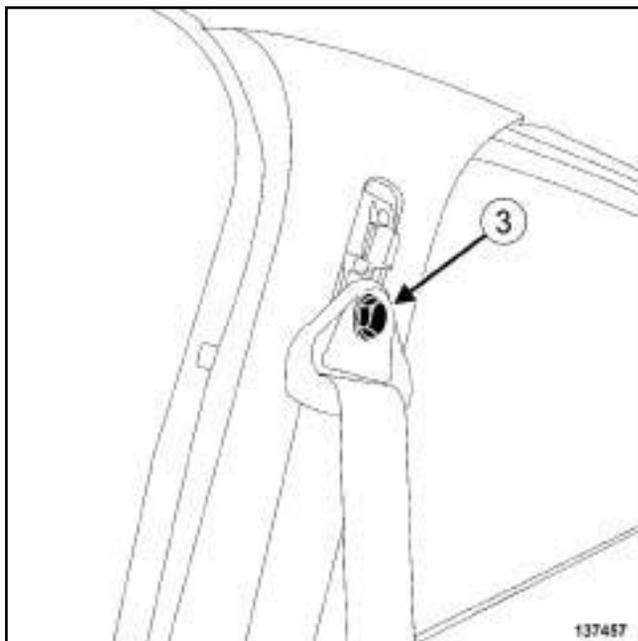

137457
137457

- Remove:
 - the bolt (3) ,
 - the front side seat belt return mechanism.

B95

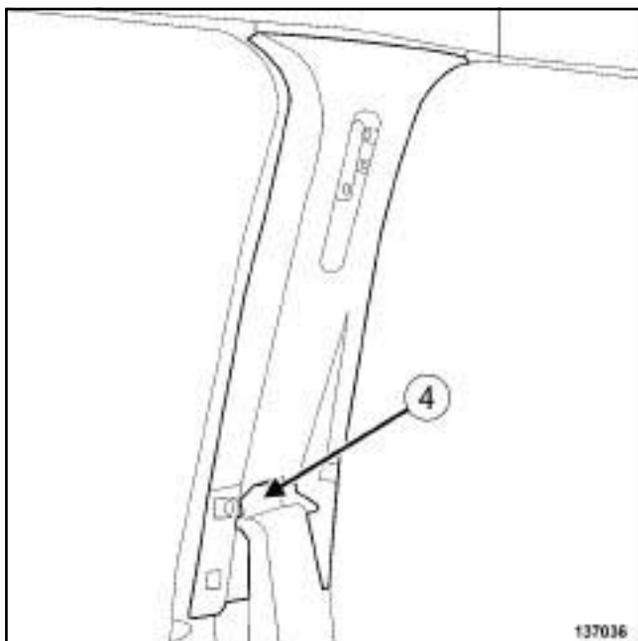


137036
137036

- Remove:
 - the bolt (4) ,

- the guide of the front side seat belt return mechanism.

J95

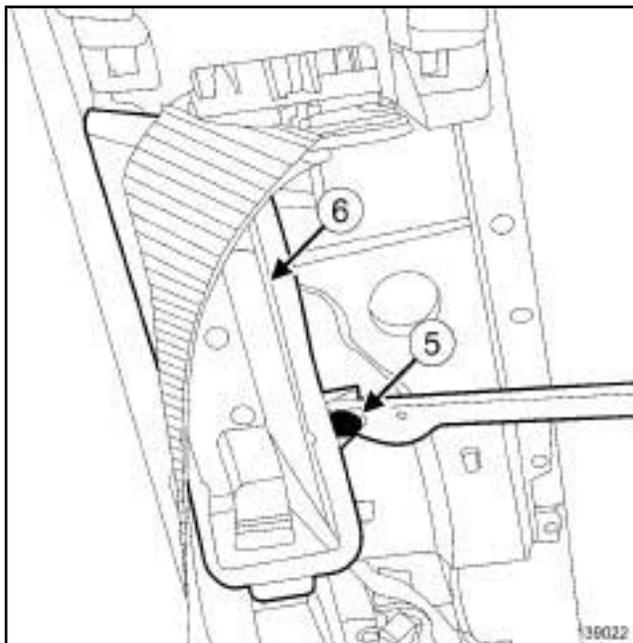


139022
139022

- Remove:
 - the clip (5) ,
 - the heating duct from the B-pillar (6) .

B-pillar upper trim: Removal - Refitting

B95 or J95 or K95


II - OPERATION FOR REMOVAL OF PART CONCERNED

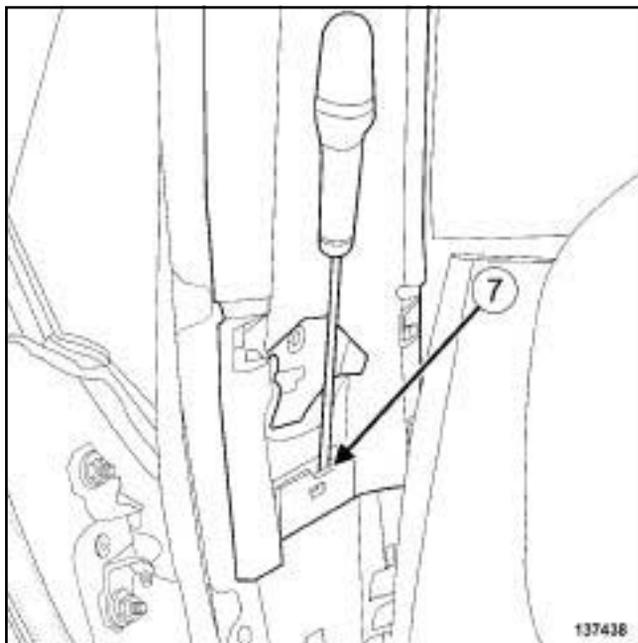

137438

- Use a flat-blade screwdriver to press at (7) to release the lower section of the trim.


B95

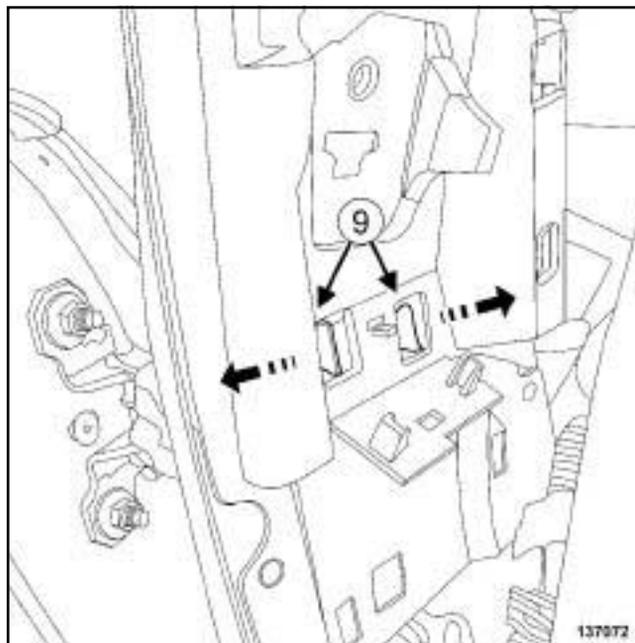

137072


- Remove the clips (9) .
- Unclip the lower section of the B-pillar upper trim.

J95

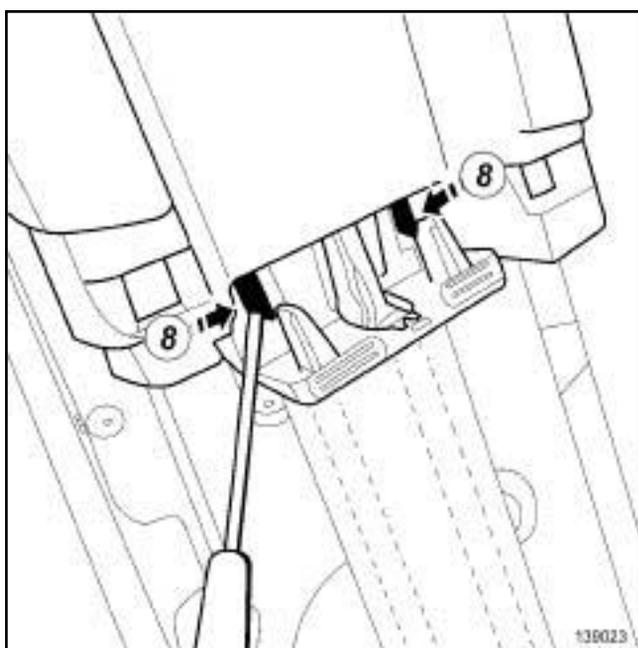

139023

- Apply pressure to (8) .

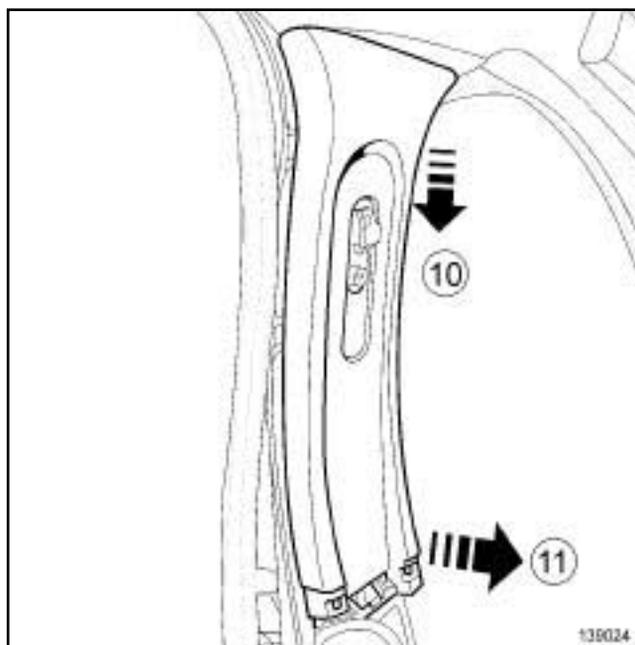

139024

- Remove the B-pillar upper trim at (10) and (11) .

B95 or J95 or K95

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the B-pillar upper trim.
- Clip on the lower section of the trim at **(7)** .

II - FINAL OPERATION

J95

- Refit:
 - the heating duct of the B-pillar **(6)** ,
 - the clip **(5)** .

B95

- Refit the guide of the front side seat belt return mechanism.
- Refit the front side seat belt return mechanism.
- Torque tighten the **bolt of the front side seat belt return mechanism (21 N.m)**.
- Refit:
 - the side door seals,
 - the trim of the front side seat belt return mechanism,
 - the B-pillar lower trim (see **71A, Body internal trim, B-pillar lower trim: Removal - Refitting, page 71A-29**) .

BODY INTERNAL TRIM

71A

Rear door sill upper lining: Removal - Refitting

B95 or J95 or K95

REMOVAL

I - REMOVAL PREPARATION OPERATION


- Partially remove the rear side door seal.

B95


- Pull down the rear seatback.

II - OPERATION FOR REMOVAL OF PART CONCERNED

B95 or K95

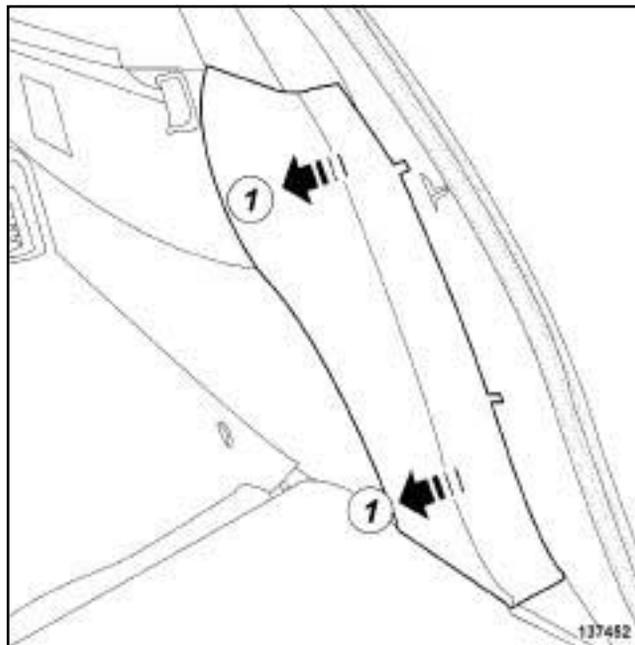

137452

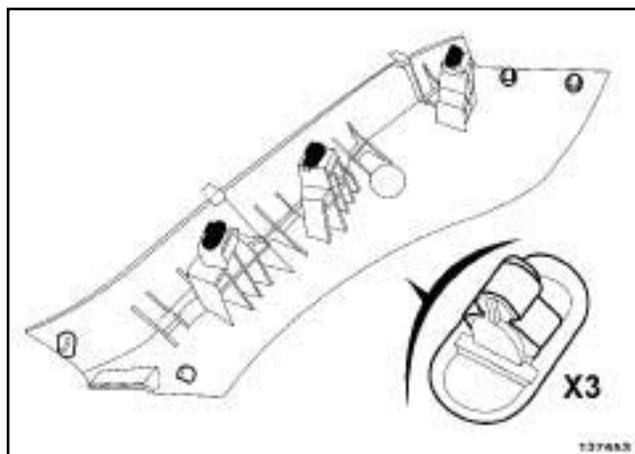


137453

- Remove the rear door sill upper trim at (1) .


Rear door sill upper lining: Removal - Refitting

B95 or J95 or K95

J95

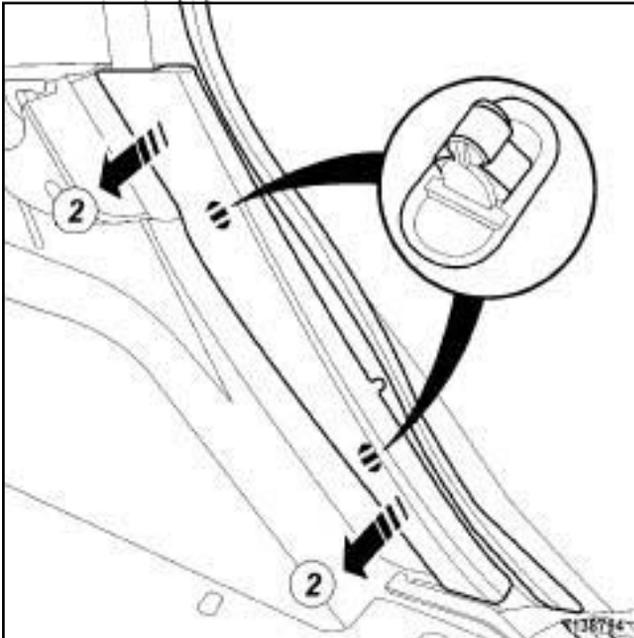

138794

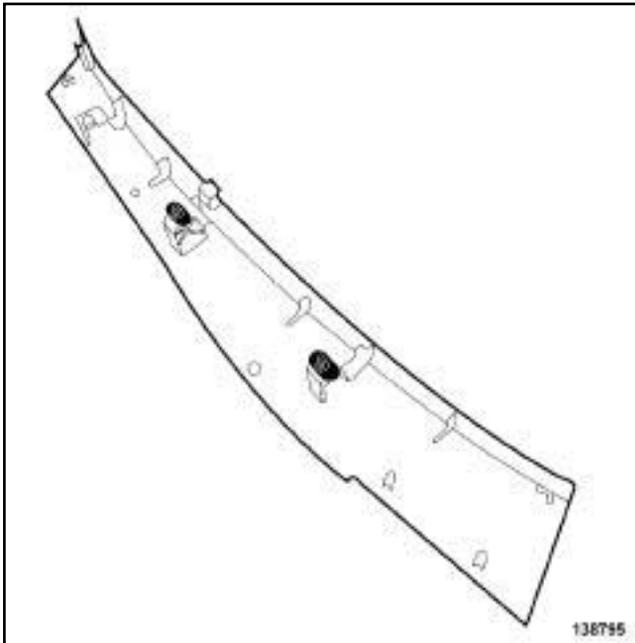

138795

- Remove the rear door sill upper trim at (2) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the rear inner sill upper trim.

II - FINAL OPERATION

- Refit the rear side door seal.

B95

- Lock the rear bench seatback.

BODY INTERNAL TRIM

C-pillar upper trim: Removal - Refitting

71A


D95

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Remove:
 - the rear parcel shelf side trim (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
 - the rear side roof rail (see 71A, **Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page 71A-38) .
- Tilt the rear bench seatback.

II - OPERATION FOR REMOVAL OF PART CONCERNED

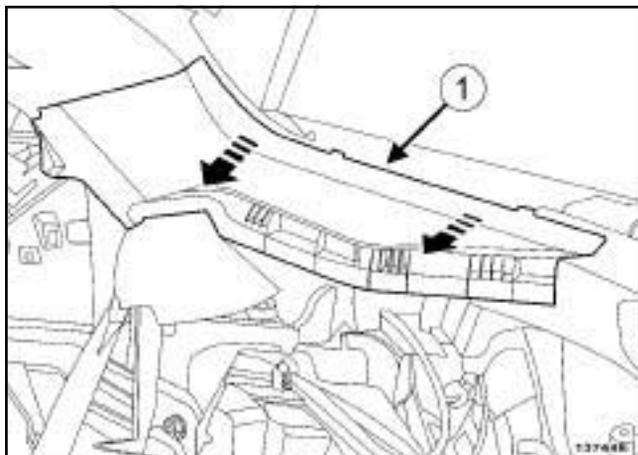

137448

- Remove the C-pillar upper trim (1) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the C-pillar upper trim.

II - FINAL OPERATION

- Refit:
 - the rear side roof rail (see 71A, **Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page 71A-38) ,
 - the rear parcel shelf side trim (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) .
- Tilt the seat into its initial position.

Rear quarter panel trim: Removal - Refitting

B95 or D95 or K95

Tightening torques 	
bolt of the rear side seat belt return mechanism	21 N.m
bolt of the rear side seat belt lower mounting	21 N.m

REMOVAL


I - REMOVAL PREPARATION OPERATION

B95 or K95

Remove:

- the rear parcel shelf side trim (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
- the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
- the bolt of the rear side seat belt lower mounting.

K95

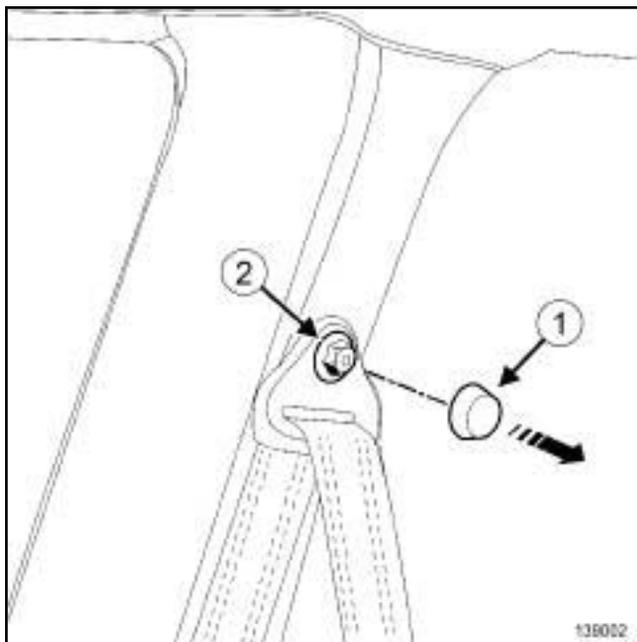

Remove:

- the trim (1) ,

- the bolt (2) of the rear side seat belt return mechanism,
- the rear side seatbelt return mechanism.

D95

Remove:


- the C-pillar upper trim (see 71A, **Body internal trim, C-pillar upper trim: Removal - Refitting**, page 71A-47) ,
- the rear panel trim (see 71A, **Body internal trim, Rear panel trim: Removal - Refitting**, page 71A-54) ,
- the rear parcel shelf side trim (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) .

Rear quarter panel trim: Removal - Refitting


B95 or D95 or K95

II - OPERATION FOR REMOVAL OF PART CONCERNED

B95

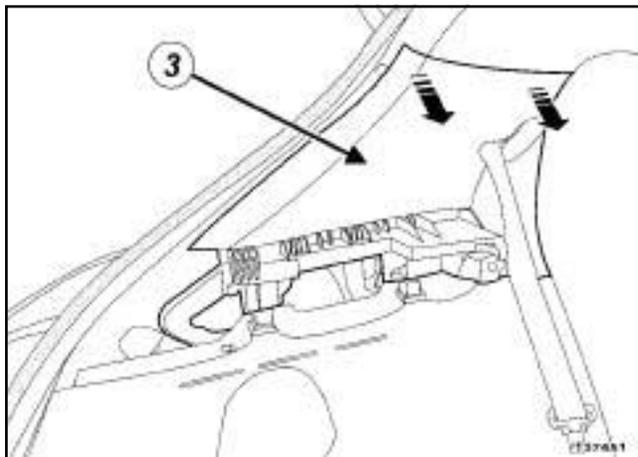


137451

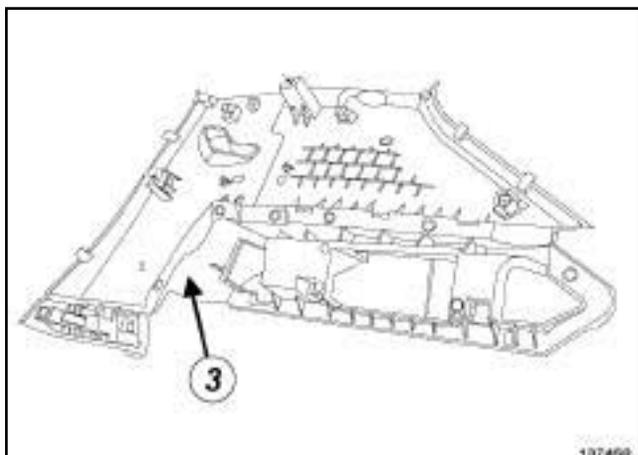


137450

- Remove the rear quarter panel trim (3) .

D95

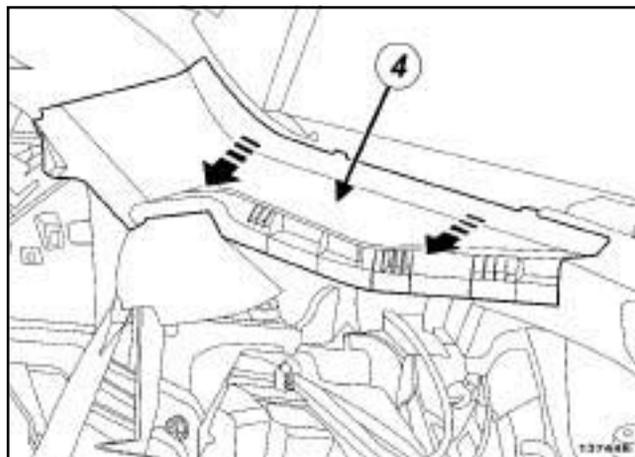

137448

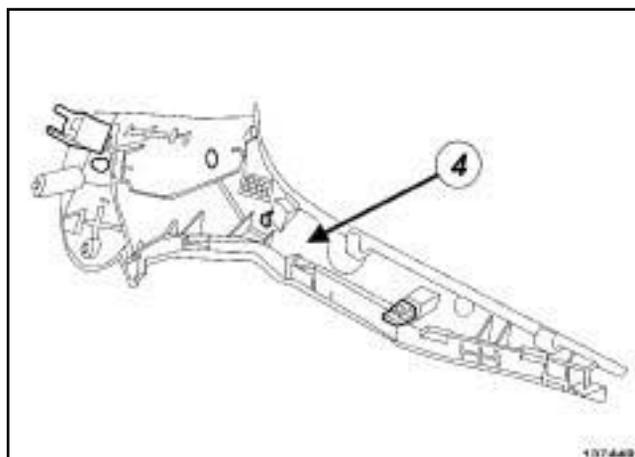


137449

- Remove the rear quarter panel trim (4) .


Rear quarter panel trim: Removal - Refitting

B95 or D95 or K95

K95

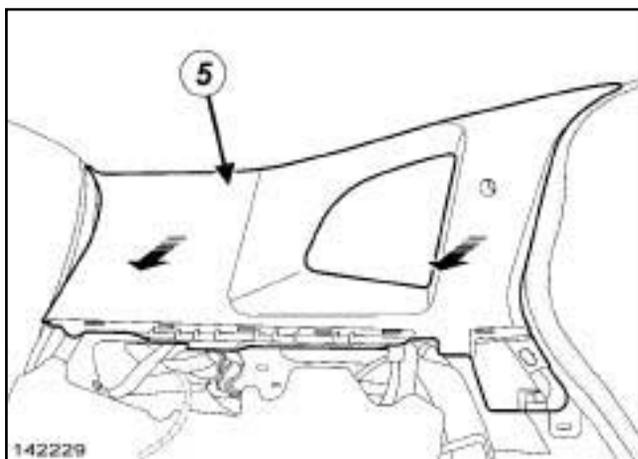

142229

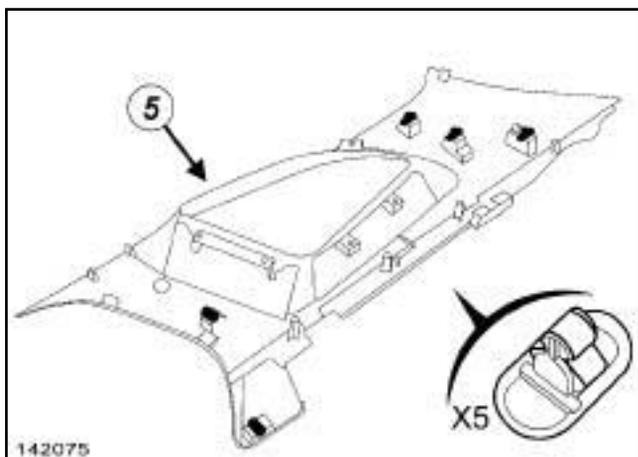

142075

- Remove the rear quarter panel trim (5) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the rear quarter panel trim.

II - FINAL OPERATION

K95

- Torque tighten the **bolt of the rear side seat belt return mechanism (21 N.m)**.
- Refit the trim (1)

B95 or K95

- Torque tighten the **bolt of the rear side seat belt lower mounting (21 N.m)**.
- Refit:
 - the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
 - the rear parcel shelf side trim (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) .

D95

- Refit:
 - the rear parcel shelf side trim (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
 - the rear panel trim (see 71A, **Body internal trim, Rear panel trim: Removal - Refitting**, page 71A-54) ,
 - the C-pillar upper trim (see 71A, **Body internal trim, C-pillar upper trim: Removal - Refitting**, page 71A-47) .

Rear quarter panel trim: Removal - Refitting

J95

Tightening torques

nut for the rear side seat belt lower mounting on the third row	21 N.m
bolt of the rear side seat belt return mechanism	21 N.m

REMOVAL


I - REMOVAL PREPARATION OPERATION

Remove:

- the rear end panel lining (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) ,
- the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
- the rear parcel shelf side trim (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
- the rear wheel arch trim (see 71A, **Body internal trim, Rear wheel arch lining: Removal - Refitting**, page 71A-33) .


LONG CHASSIS, and 2 SEATS 3RD ROW

- Remove the luggage compartment floor lining (see 71A, **Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page 71A-62) .

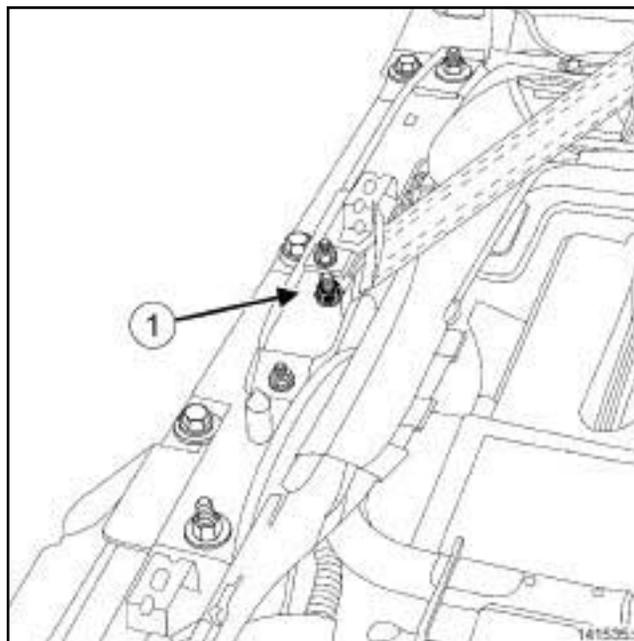

141535

- Remove the nut (1) from the rear side seat belt lower mounting on the third row.

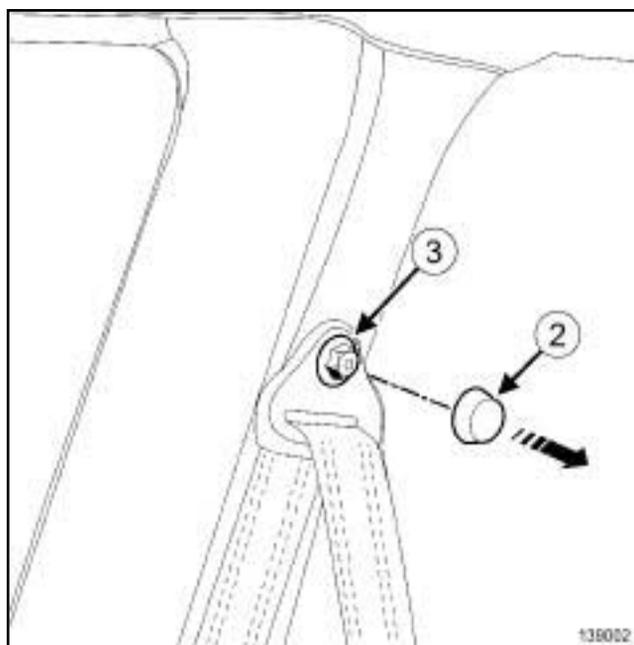

139002

139002

Remove:


- the trim (2) ,
- the bolt (3) ,
- the rear side seat belt return mechanism.

Rear quarter panel trim: Removal - Refitting


J95

II - OPERATION FOR REMOVAL OF PART CONCERNED

LONG CHASSIS

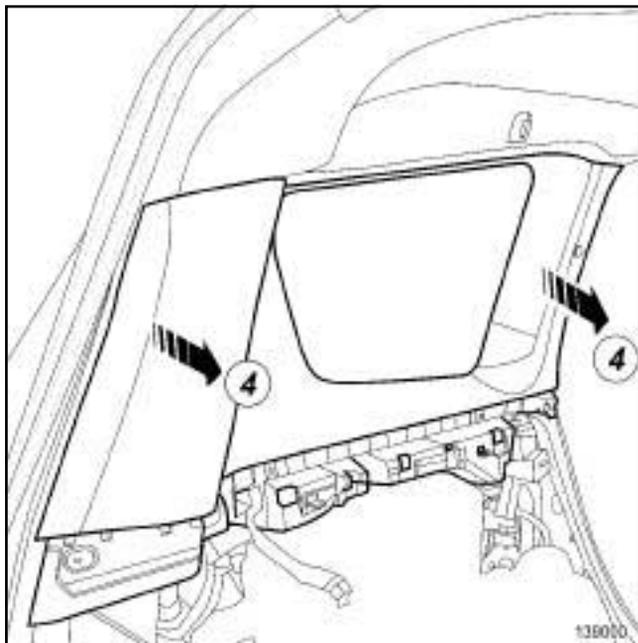


139000

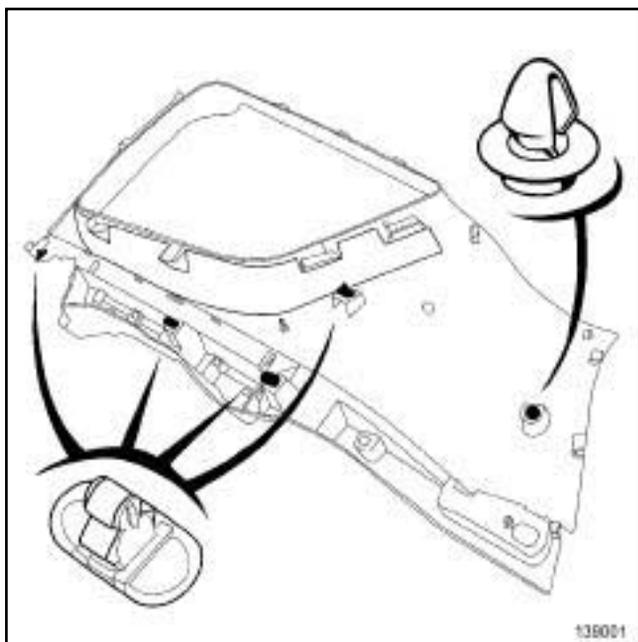


139001

- Remove the rear quarter panel trim at (4) .

STANDARD CHASSIS

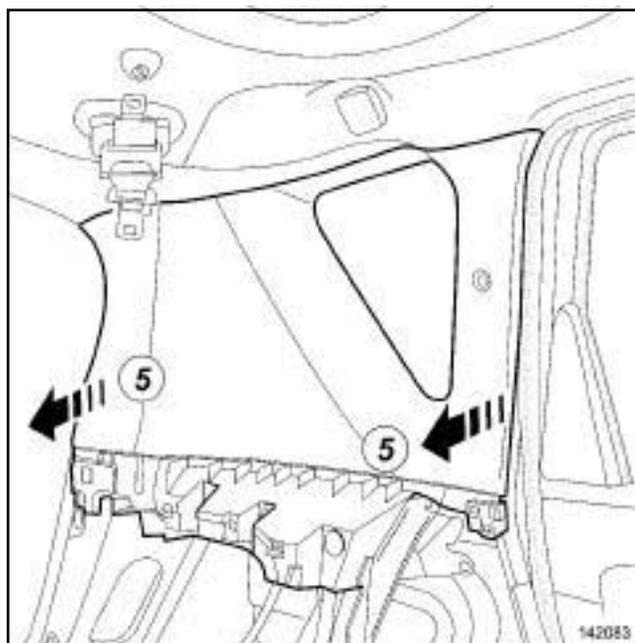

142083

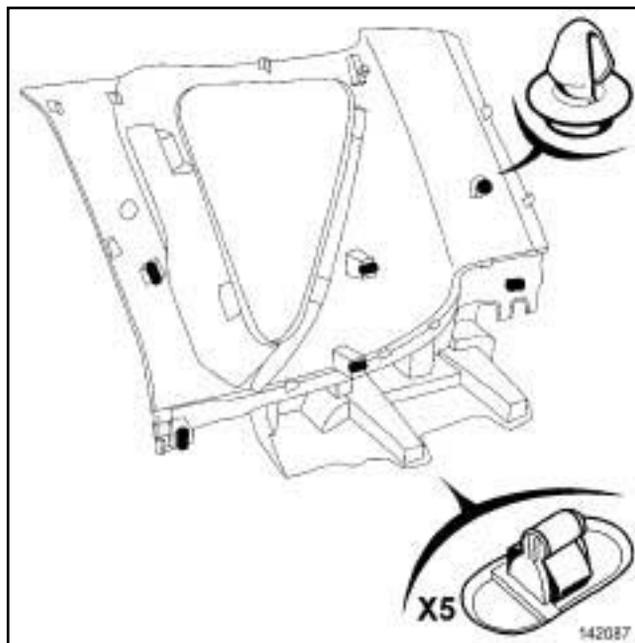

142087

- Remove the rear quarter panel trim at (5) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the rear quarter panel trim.

Rear quarter panel trim: Removal - Refitting

J95

II - FINAL OPERATION

LONG CHASSIS, and 2 SEATS 3RD ROW

- Torque tighten the **nut for the rear side seat belt lower mounting on the third row (21 N.m)**.
- Refit the luggage compartment floor lining (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page 71A-62) .

- Refit:
 - the rear side seatbelt return mechanism,
 - the bolt (3) .
- Torque tighten the **bolt of the rear side seat belt return mechanism (21 N.m)**.
- Refit:
 - the trim (2)
 - the rear wheel arch trim (see **71A, Body internal trim, Rear wheel arch lining: Removal - Refitting**, page 71A-33) ,
 - the rear parcel shelf side trim (see **71A, Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
 - the rear inner sill upper trim (see **71A, Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
 - the rear end panel trim (see **71A, Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) .

BODY INTERNAL TRIM

Rear panel trim: Removal - Refitting

71A

D95

Tightening torques

bolt of the guide rail of the front side seat belt return mechanism	21 N.m
---	--------

REMOVAL

I - REMOVAL PREPARATION OPERATION

REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK


- Remove the 1/3 and 2/3 rear bench seat base (see **1/3 and 2/3 rear bench seat: Removal - Refitting**) .

REAR BENCH SEAT

- Remove the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page **76A-6**) .

- Remove:

- the door sill lining (see **71A, Body internal trim, Door sill lining: Removal - Refitting**, page **71A-25**) ,
- the side roof rail rear trim (see **71A, Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page **71A-38**) .

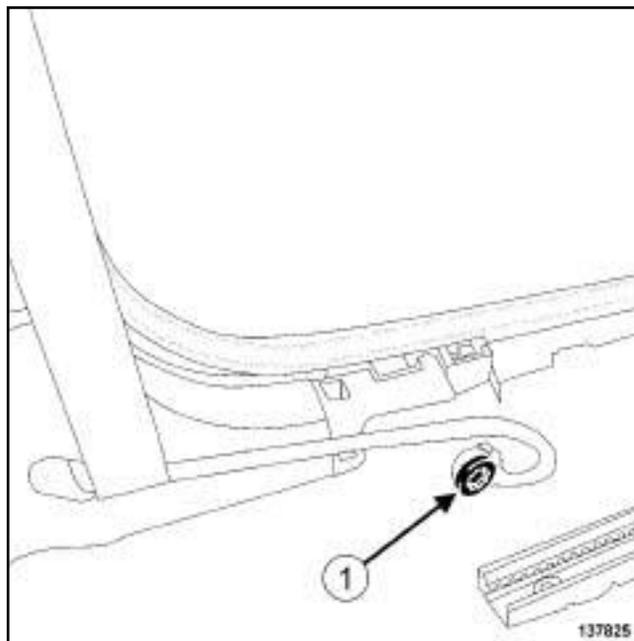


137825

- Remove:
 - the bolt (1) of the guide rail of the front side seat belt return mechanism,
 - the guide rail of the front side seat belt return mechanism.
- Tilt the rear bench seatback.
- Remove the rear panel upper trim.

Rear panel trim: Removal - Refitting


D95

II - OPERATION FOR REMOVAL OF PART CONCERNED

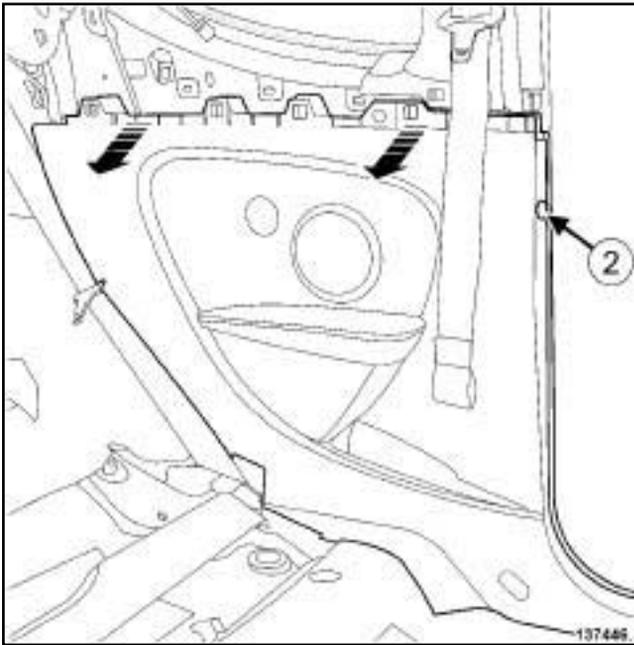

137446

- Remove:
 - the bolt (2) of the rear panel trim,
 - the rear panel trim partially.

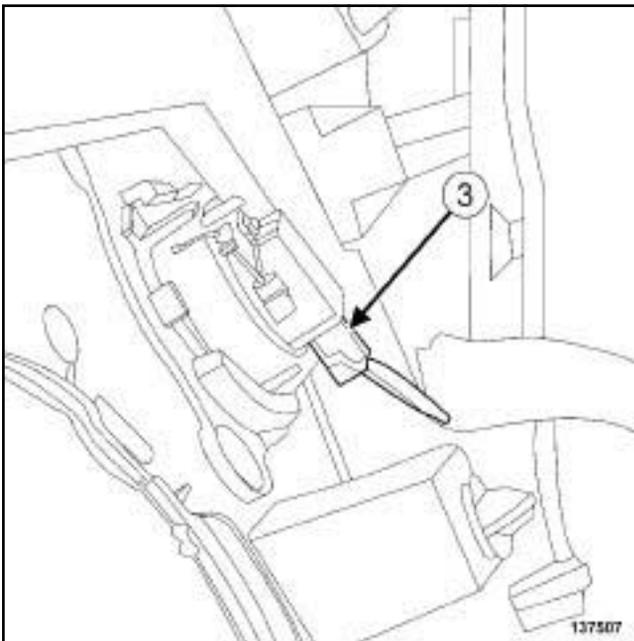

137507

- Disconnect the rear speaker connector (3) .
- Remove the rear panel trim.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Connect the rear speaker connector.
- Refit the rear panel trim.

II - FINAL OPERATION

- Refit the rear panel upper trim.
- Fit the rear bench seatback.
- Refit the guide rail of the front side seat belt return mechanism.
- Torque tighten the **bolt of the guide rail of the front side seat belt return mechanism (21 N.m)**.
- Refit:
 - the side roof rail rear trim (see 71A, **Body internal trim, Rear roof drip moulding lining: Removal - Refitting**, page 71A-38) ,
 - the door sill lining (see 71A, **Body internal trim, Door sill lining: Removal - Refitting**, page 71A-25) .

REAR BENCH SEAT

- Refit the single unit rear bench seat base (see 76A, **Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page 76A-6)

REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK

- Refit the 1/3 and 2/3 rear bench seat base (see 1/3 and 2/3 rear bench seat: Removal - Refitting) .

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Partially remove the tailgate seal.
- Pull down the rear bench seatback.
- Remove the rear parcel shelf.

D95

- Remove:
 - the rear end panel lining (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) ,
 - the rear panel upper trim,
 - the rear panel trim partially (see 71A, **Body internal trim, Rear panel trim: Removal - Refitting**, page 71A-54) .

B95 or D95 or K95 – J95, and STANDARD CHASSIS



- Remove the luggage compartment light (see **Luggage compartment light: Removal - Refitting**) (81B, Interior lighting).

J95 or K95

- Remove the rear door upper sill trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) .


II - OPERATION FOR REMOVAL OF PART CONCERNED

B95

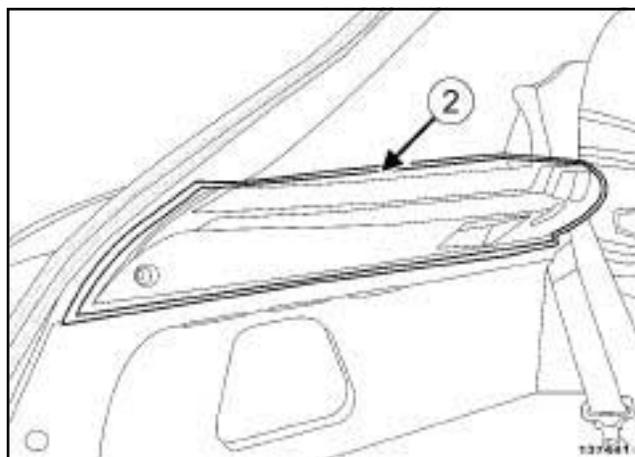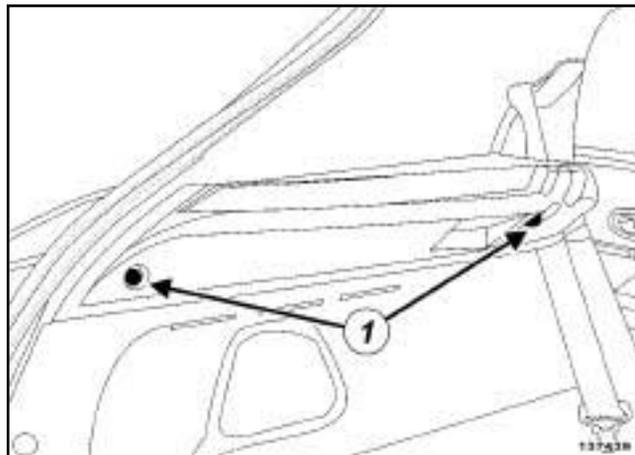


- Remove:
 - the bolts (1) ,
 - the rear parcel shelf side trim (2) .

D95

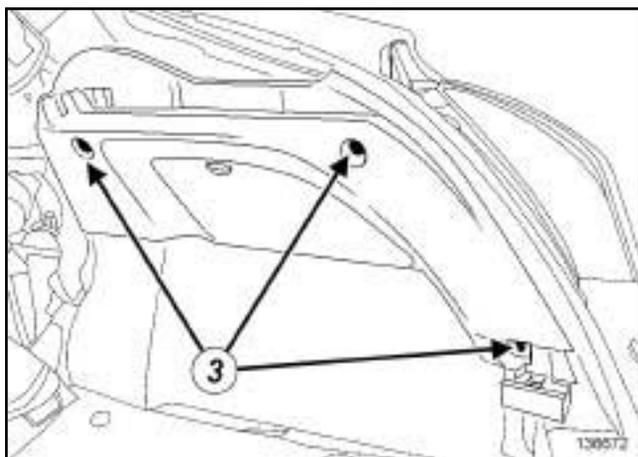

136672

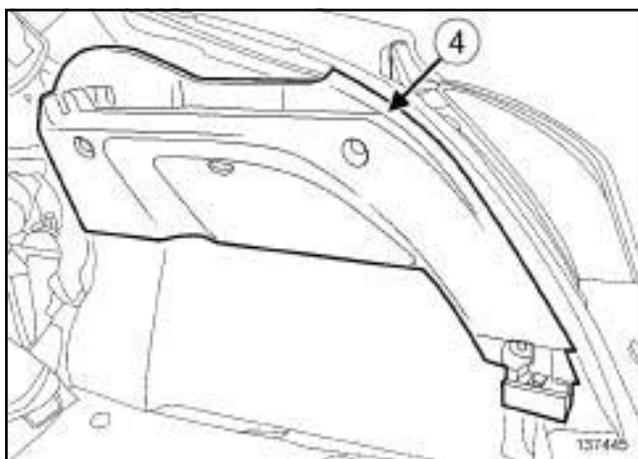


137445


□ Remove:

- the bolts (3) ,
- the rear parcel shelf side trim (4) .

J95, and STANDARD CHASSIS

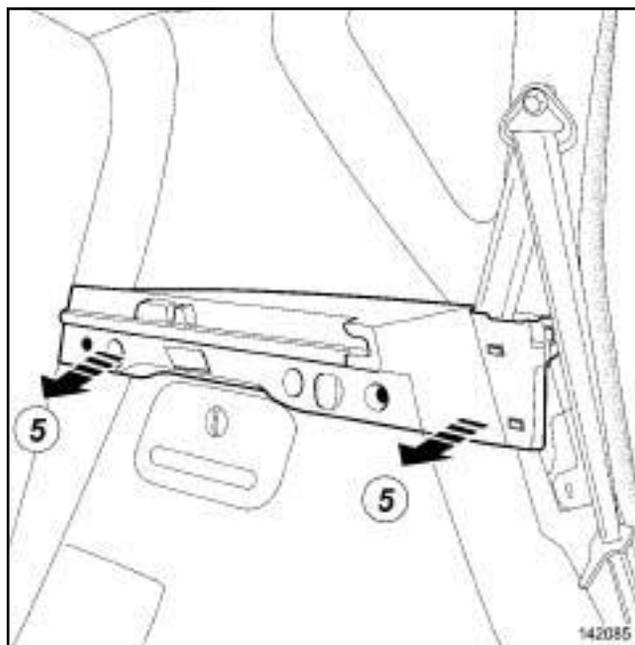

142085

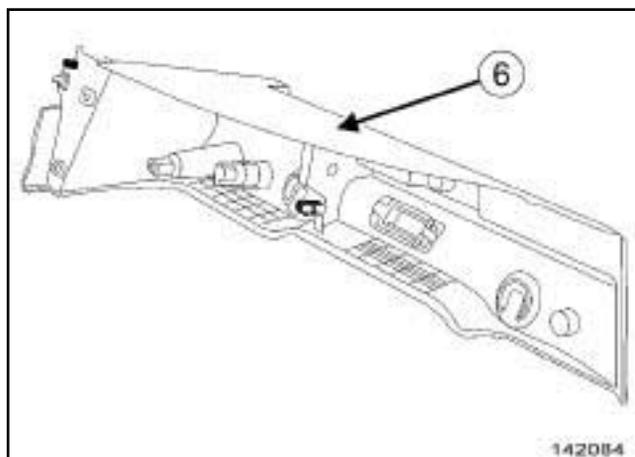


142084


□ Remove:

- the bolts (5) ,
- partially the side trim (6) of the rear parcel shelf,
- the electrical accessories socket (see **Electrical accessories socket: Removal - Refitting**) (88D, Driver's position),
- the rear parcel shelf side trim (6) .

J95, and LONG CHASSIS

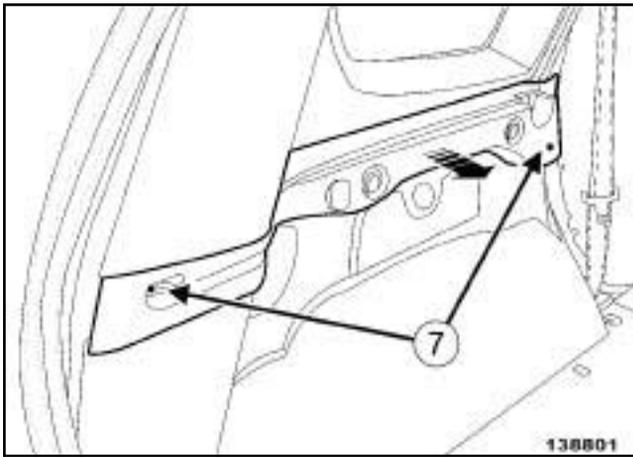

138801

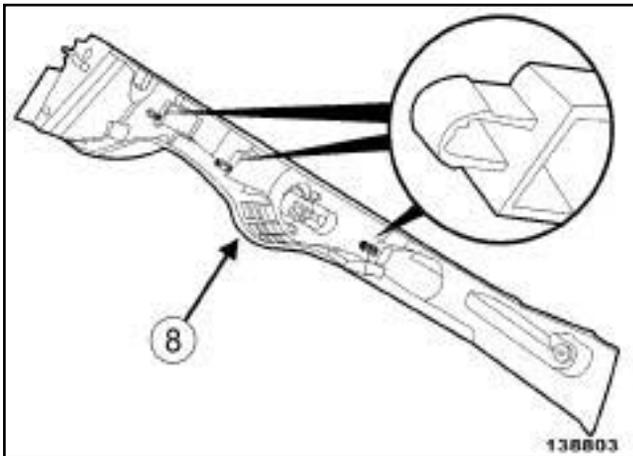


138803

□ Remove:


- the bolts (7) ,
- partially the side trim (8) of the rear parcel shelf,
- the electrical accessories socket (see **Electrical accessories socket: Removal - Refitting**) (88D, Driver's position),
- the rear parcel shelf side trim (8) .

K95

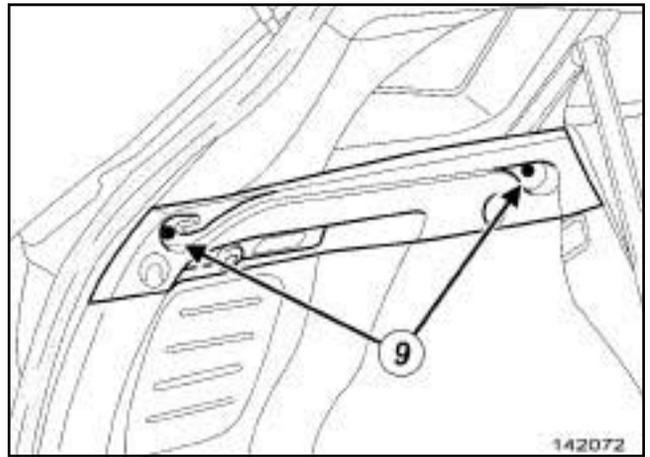

142072

142072

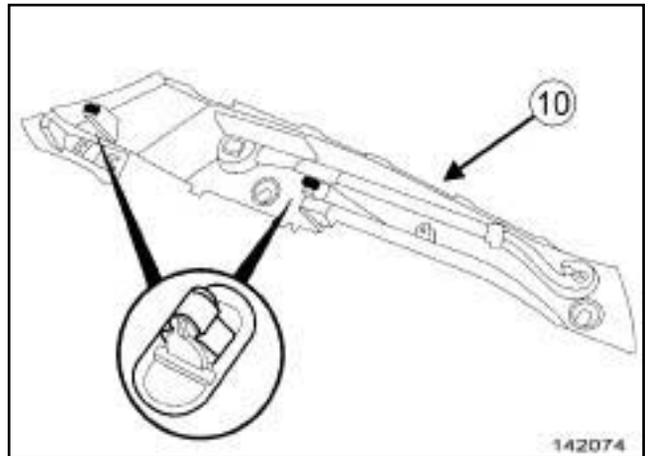

142074

142074

□ Remove:

- the bolts (9) ,
- partially the side trim (10) of the rear parcel shelf,
- the electrical accessories socket (see **Electrical accessories socket: Removal - Refitting**) (88D, Driver's position),
- the rear parcel shelf side trim (10) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

J95 or K95

- Refit the electrical accessories socket (see **Electrical accessories socket: Removal - Refitting**) (88D, Driver's position).

- Refit the rear parcel shelf side trim.

II - FINAL OPERATION

J95 or K95

- Refit the rear inner sill upper trim (see **71A, Body internal trim, Rear door sill upper lining: Removal - Refitting**, page **71A-45**).

D95

- Refit:
 - the rear panel trim (see **71A, Body internal trim, Rear panel trim: Removal - Refitting**, page **71A-54**),
 - the rear panel upper trim,
 - the rear end panel trim (see **71A, Body internal trim, Rear end panel lining: Removal - Refitting**, page **71A-60**).

B95 or D95 or K95 – J95, and STANDARD CHASSIS

- Refit the luggage compartment light (see **Luggage compartment light: Removal - Refitting**) (81B, Interior lighting).

- Refit the rear parcel shelf.
- Lock the rear bench seatback in place.
- Refit the tailgate seal.

B95 or D95 or J95 or K95

Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Partially remove the tailgate seal.

B95 or D95


- Partially remove the luggage compartment carpet.

J95


- Remove the luggage compartment floor lining (see 71A, **Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page 71A-62) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

B95 or D95

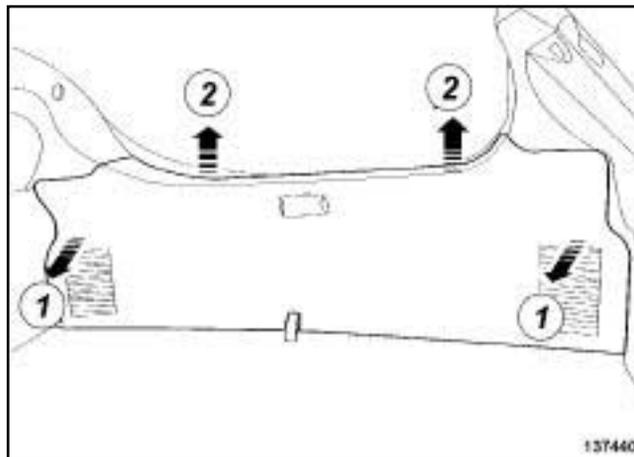

137440

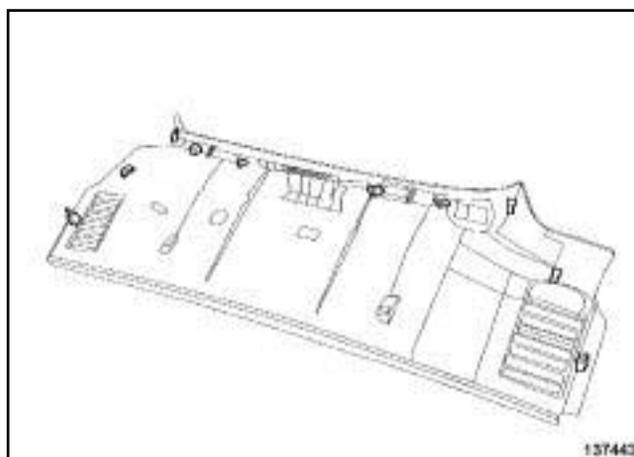


137443

- Unclip the rear end panel trim at (1) and (2) .
- Remove the rear end panel trim.

B95 or D95 or J95 or K95

J95

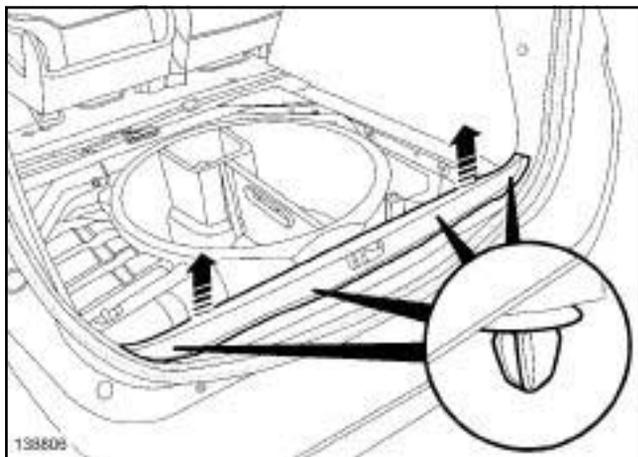

- Remove the rear end panel trim using the tool (**Car. 1363**).

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Clip on the rear end panel trim.

II - FINAL OPERATION

B95 or D95

- Refit the luggage compartment carpet.

J95

- Refit the luggage compartment floor lining (see **71A, Body internal trim, Luggage compartment floor lining: Removal - Refitting**, page **71A-62**).

- Refit the tailgate seal.

J95, and LONG CHASSIS, and 0 SEAT 3RD ROW or 2 SEATS 3RD ROW

REMOVAL

I - REMOVAL PREPARATION OPERATION


2 SEATS 3RD ROW

❑ Remove:

- the rear end panel lining (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) ,
- the rear inner sill upper trims (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
- the rear door sill linings (see 71A, **Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-31) ,
- the rear parcel shelf side trim panels (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
- the rear wheel arch trims (see 71A, **Body internal trim, Rear wheel arch lining: Removal - Refitting**, page 71A-33) .


II - OPERATION FOR REMOVAL OF PART CONCERNED

0 SEAT 3RD ROW

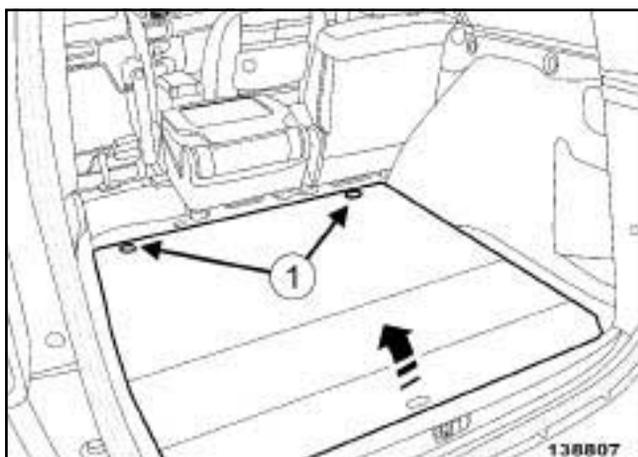


- ❑ Remove the clips (1) .
- ❑ Remove the luggage compartment floor lining.

2 SEATS 3RD ROW

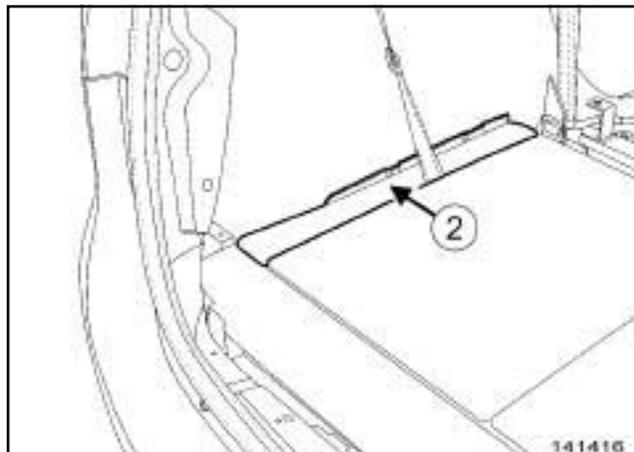

141416

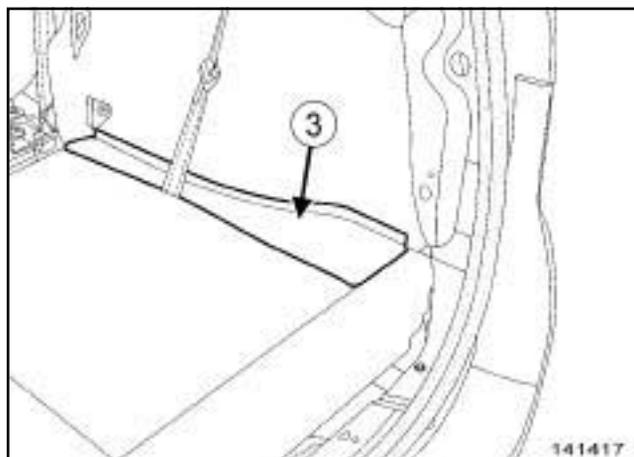

141417

- ❑ Remove the luggage compartment floor trims (2) and (3) .

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

0 SEAT 3RD ROW

❑ Refit:

- the luggage compartment floor lining,
- the clips (1) .

Luggage compartment floor lining: Removal - Refitting

J95, and LONG CHASSIS, and 0 SEAT 3RD ROW or 2 SEATS 3RD ROW

2 SEATS 3RD ROW

- Refit the luggage compartment floor trims (2) and (3)

II - FINAL OPERATION

2 SEATS 3RD ROW

- Refit:

- the rear wheel arch trims (see 71A, **Body internal trim, Rear wheel arch lining: Removal - Refitting**, page 71A-33) ,
- the rear parcel shelf side trim panels (see 71A, **Body internal trim, Rear parcel shelf side trim: Removal - Refitting**, page 71A-56) ,
- the rear door sill linings (see 71A, **Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-31) ,
- the rear inner sill upper trims (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
- the rear end panel trim (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) .

Rear load compartment lining: Removal - Refitting


B95, and UTILITY

REMOVAL

I - REMOVAL PREPARATION OPERATION


- Remove:
 - the lower section of the level luggage compartment seal,
 - the rear end panel trim (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

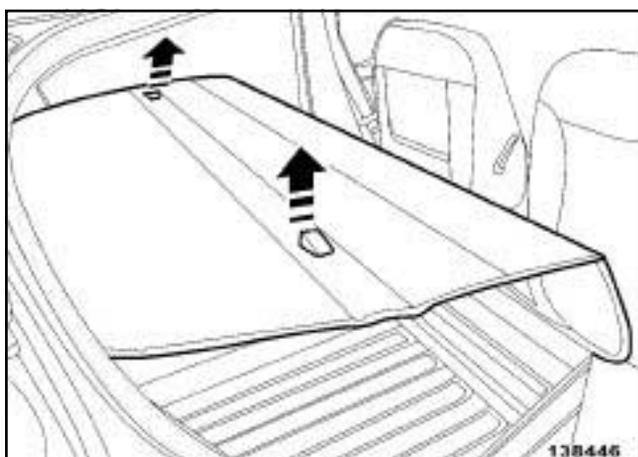


138446

- Unclip the quick releases.
- Remove the luggage cover shelf.

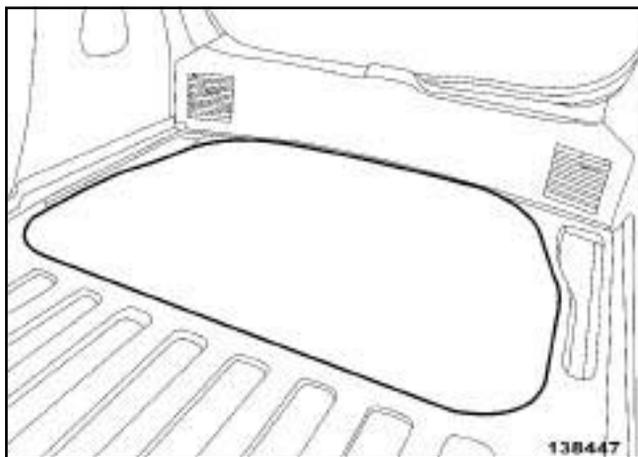


138447

- Remove the emergency spare wheel cover.

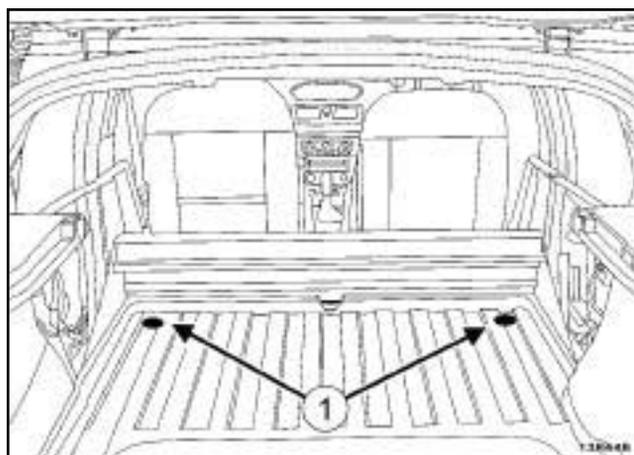

138448

- Remove:
 - the clips (1) ,
 - the loading tray,
 - the rear floor soundproofing.

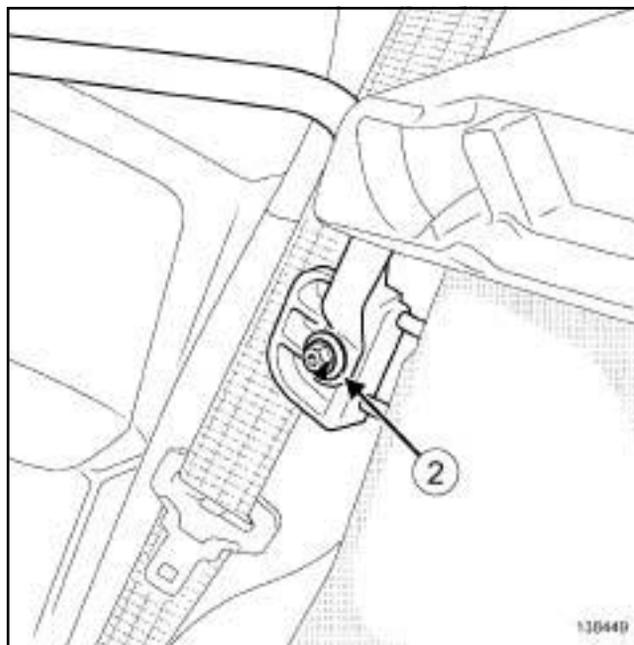


138449

138449

- Remove the bolts (2) .


Rear load compartment lining: Removal - Refitting

B95, and UTILITY

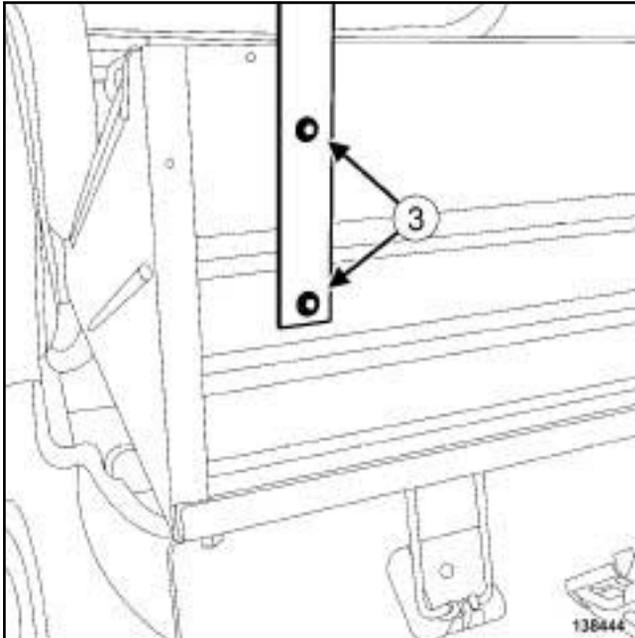

138444

- Remove:
 - the bolts (3) ,
 - the luggage cover frame.

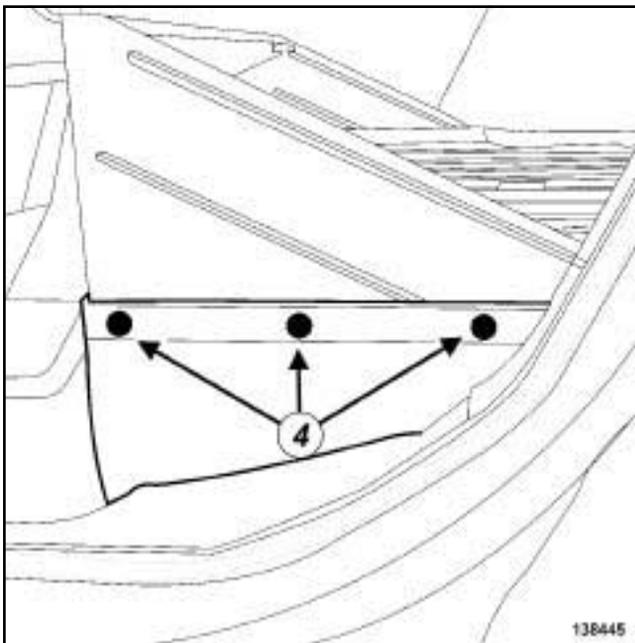

138445

- Remove:
 - the clips (4) ,
 - the side trim of the load stop floor.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
 - the rear floor side trim,
 - the luggage cover frame,
 - the rear floor soundproofing,
 - the rear loading floor trim,
 - the emergency spare wheel cover,
 - the luggage cover shelf.

II - FINAL OPERATION

- Refit:
 - the rear end panel lining (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting, page 71A-60**) ,
 - the luggage compartment seal.

Luggage retaining assembly: Removal - Refitting

B95, and UTILITY


REMOVAL

I - REMOVAL PREPARATION OPERATION


❑ Remove:

- the rear loading trim (see 71A, **Body internal trim, Rear load compartment lining: Removal - Refitting**, page 71A-64) ,
- the B-pillar lower trim (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) ,
- the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
- the rear door sill lining (see 71A, **Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-31) .


II - OPERATION FOR REMOVAL OF PART CONCERNED

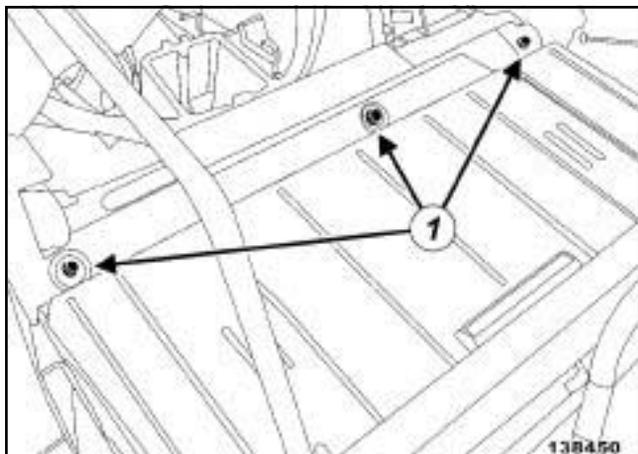

❑ Remove the bolts (1) .

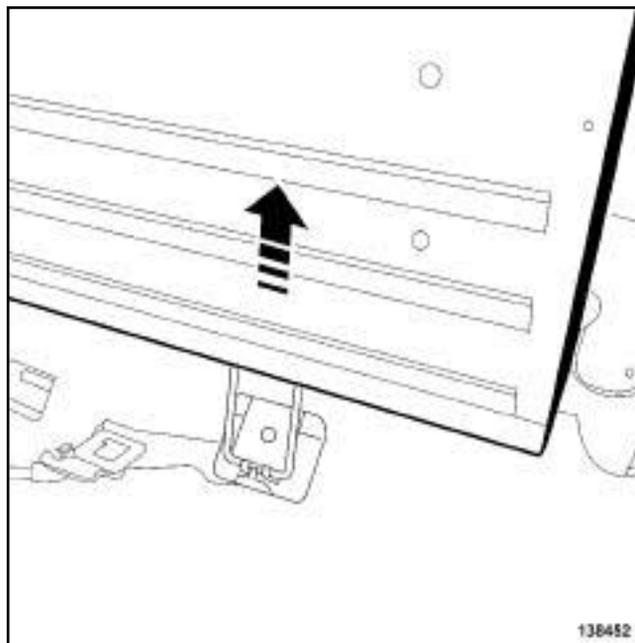


❑ Unclip the load stop floor at the retaining hooks.

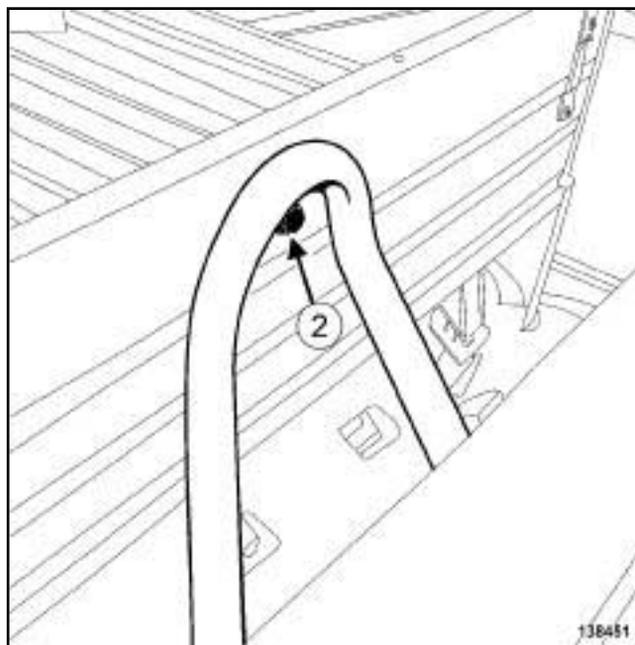


❑ Remove the bolt of the load stop bracket (2) .

Luggage retaining assembly: Removal - Refitting

B95, and UTILITY

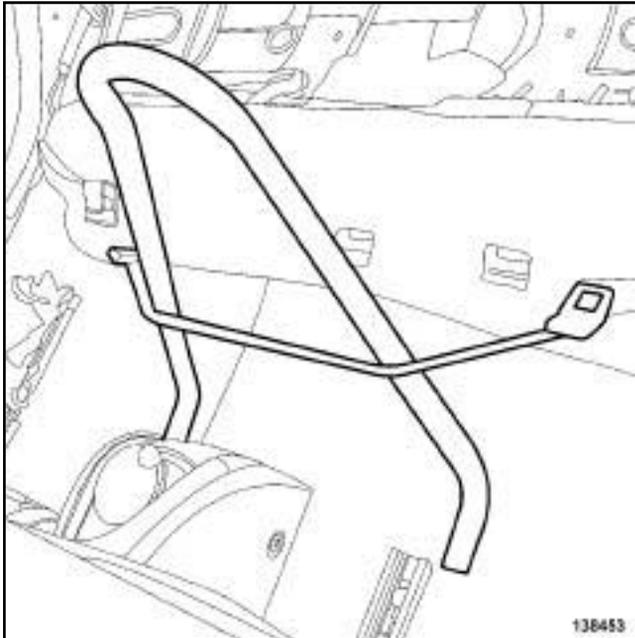

138453
138453

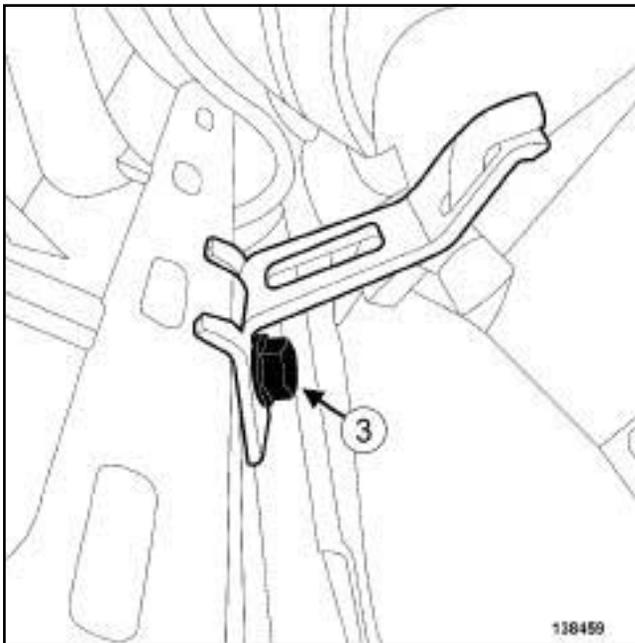

138459
138459

- Remove:
- partially remove the floor carpet,
 - the bolts (3) ,
 - the « bracket supports - load stop bracket » assembly.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
- the « bracket supports - load stop bracket » assembly,
 - the floor carpet,
 - the load stop floor.

II - FINAL OPERATION

- Refit:
- the rear loading trim (see 71A, **Body internal trim, Rear load compartment lining: Removal - Refitting**, page 71A-64) .
 - the rear door sill lining (see 71A, **Body internal trim, Rear door sill lining: Removal - Refitting**, page 71A-31) ,
 - the rear inner sill upper trim (see 71A, **Body internal trim, Rear door sill upper lining: Removal - Refitting**, page 71A-45) ,
 - the B-pillar lower trim (see 71A, **Body internal trim, B-pillar lower trim: Removal - Refitting**, page 71A-29) .

SIDE OPENING ELEMENT TRIM

Front side door trim: Removal - Refitting

72A


Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL


I - REMOVAL PREPARATION OPERATION

B95 or D95, and EQT LEVEL EA3 or EQT LEVEL EA4

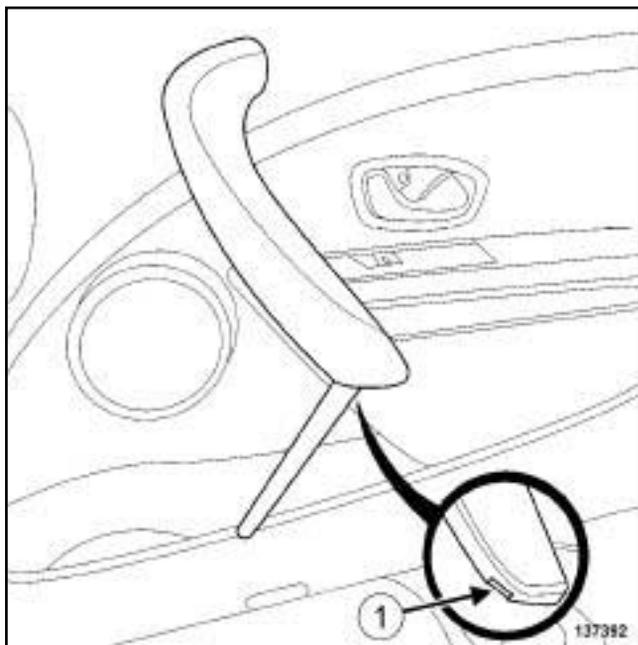


- Remove the trim of the front side door handle using the tool (Car. 1363) by inserting it at (1).

B95 or D95

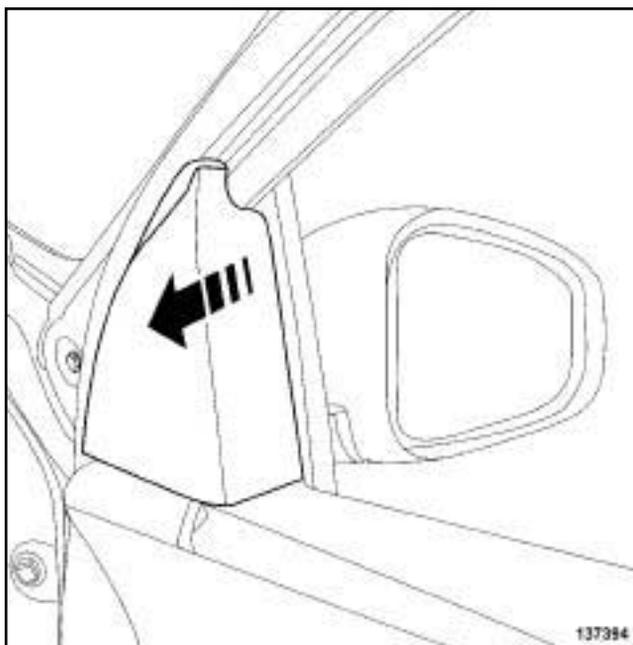

- Remove the rear view mirror interior trim.

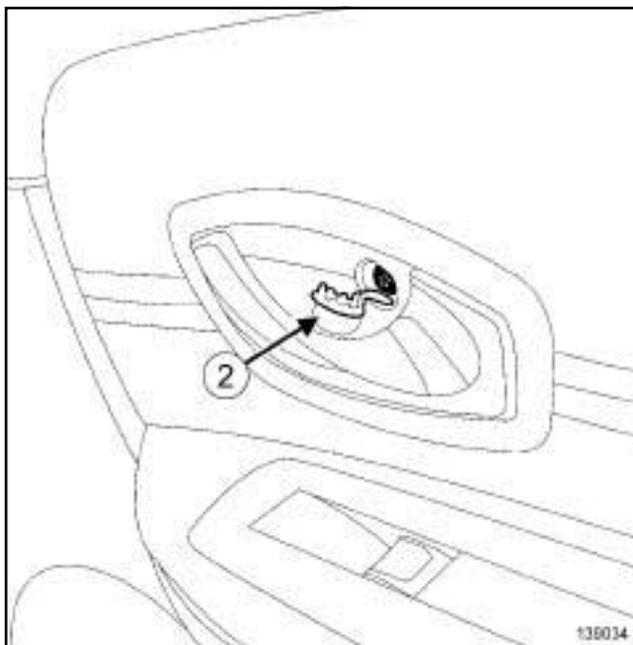

- Remove the blanking cover (2).


SIDE OPENING ELEMENT TRIM

Front side door trim: Removal - Refitting

72A


II - OPERATION FOR REMOVAL OF PART CONCERNED

B95 or D95, and EQT LEVEL EA3 or EQT LEVEL EA4

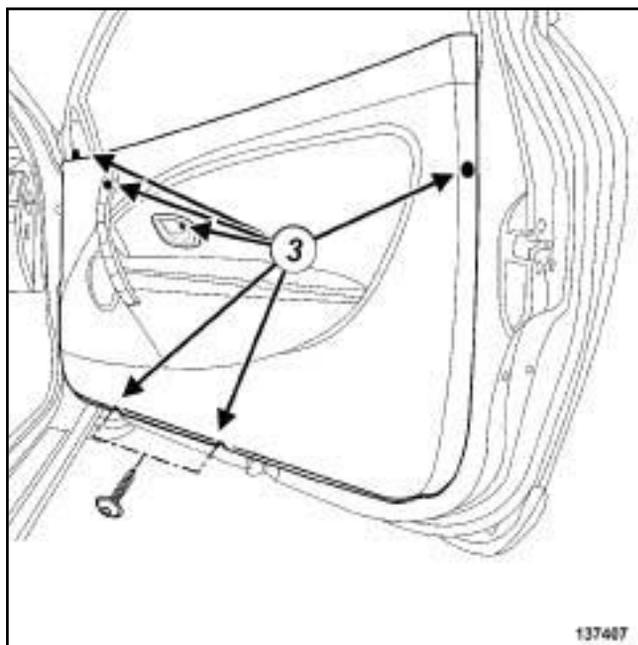


□ Remove the bolts (3) .

B95 or D95, and EQT LEVEL EA1 or EQT LEVEL EA2

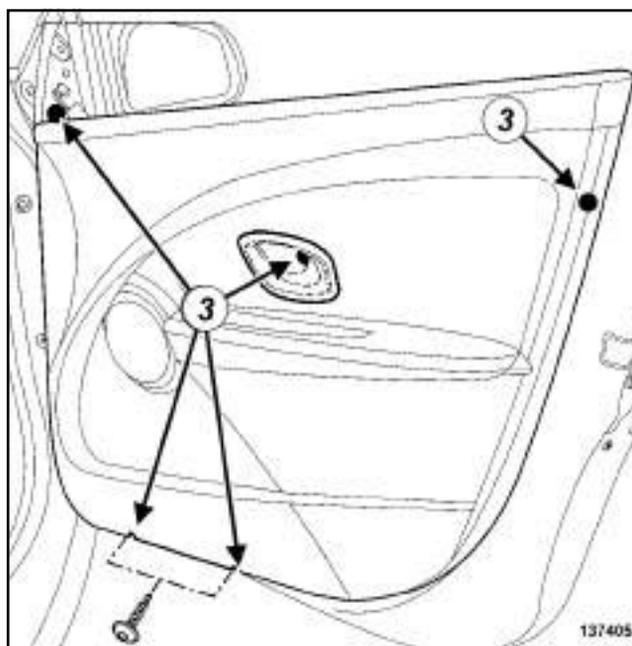

□ Remove the bolts (3) .

J95

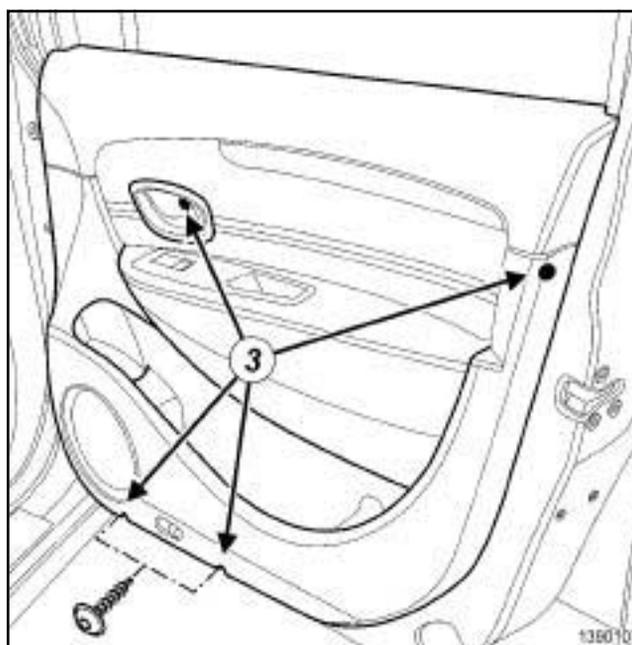


□ Remove the bolts (3) .

SIDE OPENING ELEMENT TRIM


Front side door trim: Removal - Refitting

72A

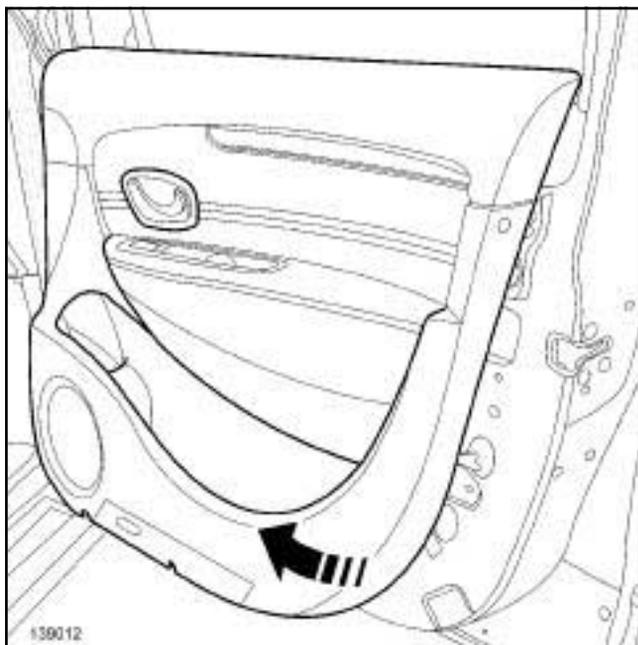

139012

- Unclip the front side door trim.
- Disconnect the front side door light.
- Unclip the front side door interior opening control cable.
- Disconnect the connectors from the front side door window control switch plate.

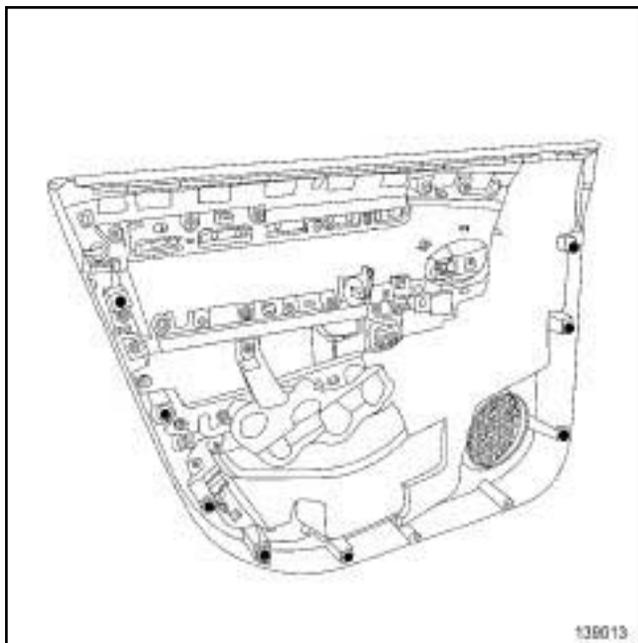

139013

- Remove the front side door trim.

REFITTING

I - REFITTING PREPARATION OPERATION

- parts always to be replaced: Front side opening element trim clip (70,03,02,22).

II - REFITTING OPERATION FOR PART CONCERNED

- Partially refit the front side door trim.
- Connect the connectors to the front side door window control switch plate.
- Clip on the front side door interior opening release cable.
- Connect the front side door light.
- Clip on the front side door trim.
- Refit the bolts **(3)**.

III - FINAL OPERATION

- Refit the blanking cover **(2)**.

B95 or D95

- Refit the door mirror interior trim.

B95 or D95, and EQT LEVEL EA3 or EQT LEVEL EA4

- Refit the front side door handle trim.

- Carry out a function test.

SIDE OPENING ELEMENT TRIM

Rear side door trim: Removal - Refitting

72A

B95 or J95 or K95


Essential special tooling

Car. 1363 Set of trim removal levers.


REMOVAL

I - REMOVAL PREPARATION OPERATION

MANUAL REAR WINDOW WINDER

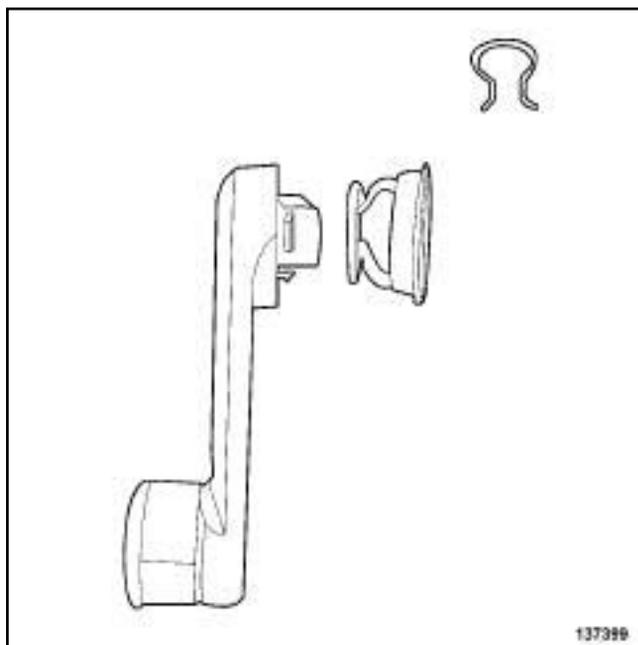


137399

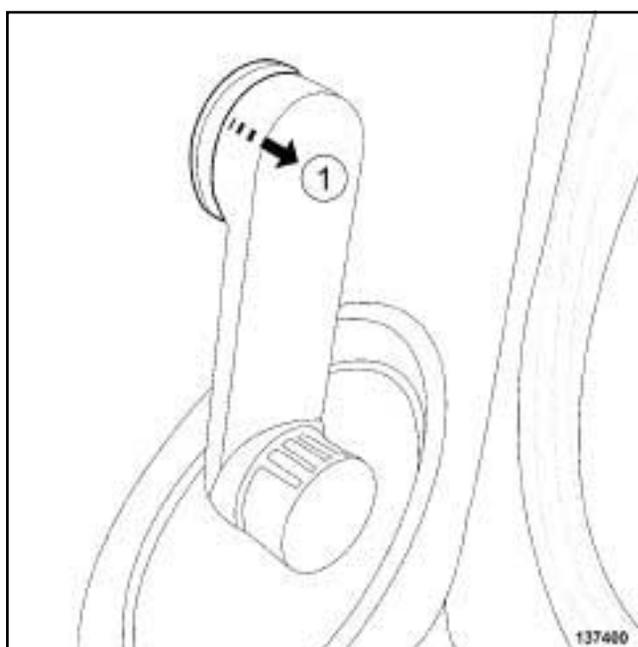


137400

- Pull the ring towards the vehicle interior (1) .

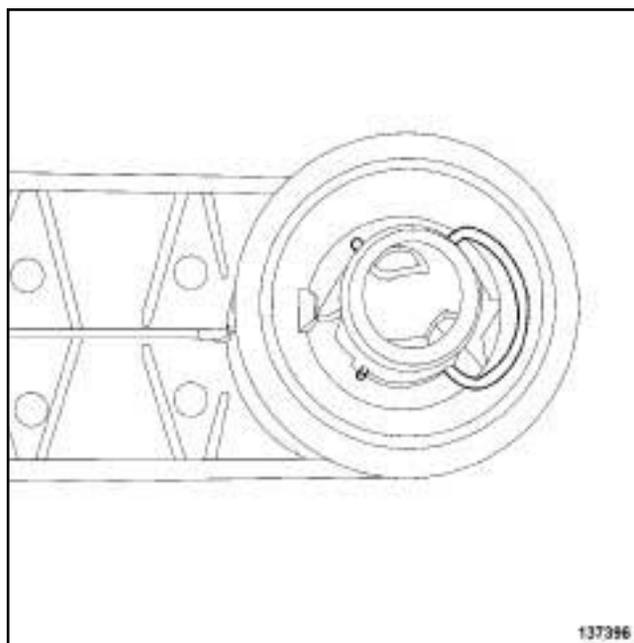

137396

137396

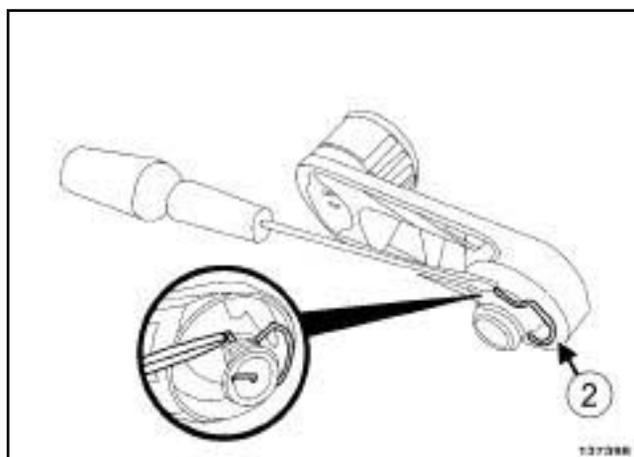

137398

137398

- Unclip the clip (2) .
- Remove the manual window winder control handle.


SIDE OPENING ELEMENT TRIM

Rear side door trim: Removal - Refitting

72A

B95 or J95 or K95

B95 or K95

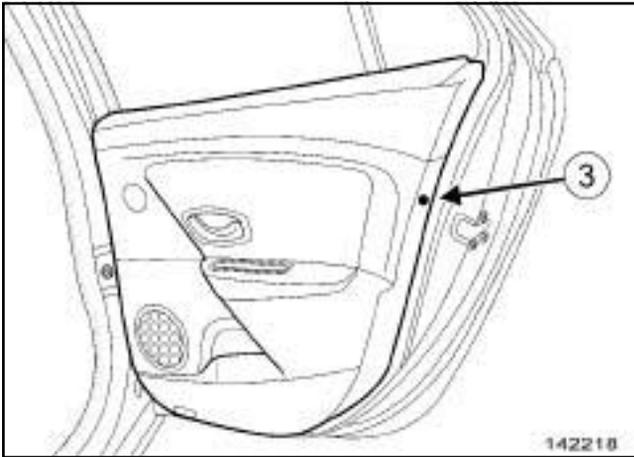


- ❑ Remove the bolt (3) from the rear side door trim.


J95



- ❑ Remove the bolt (3) from the rear side door trim.

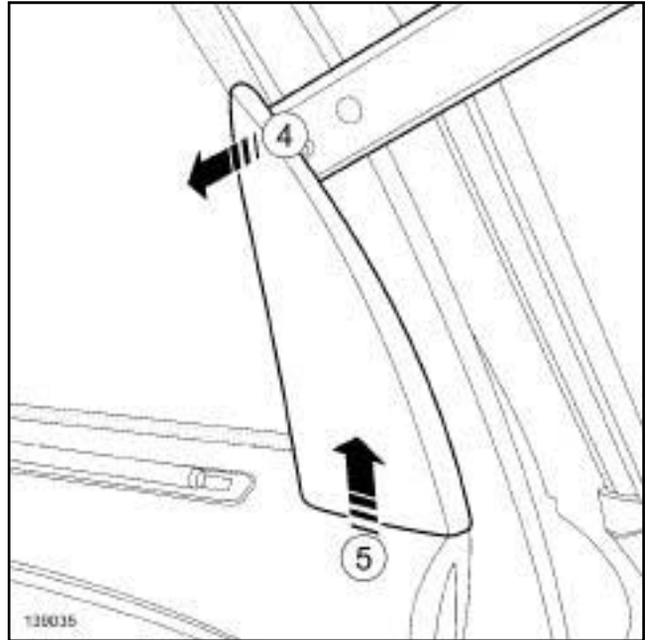

- ❑ Remove the trim at (4) and (5) using the tool (Car. 1363).

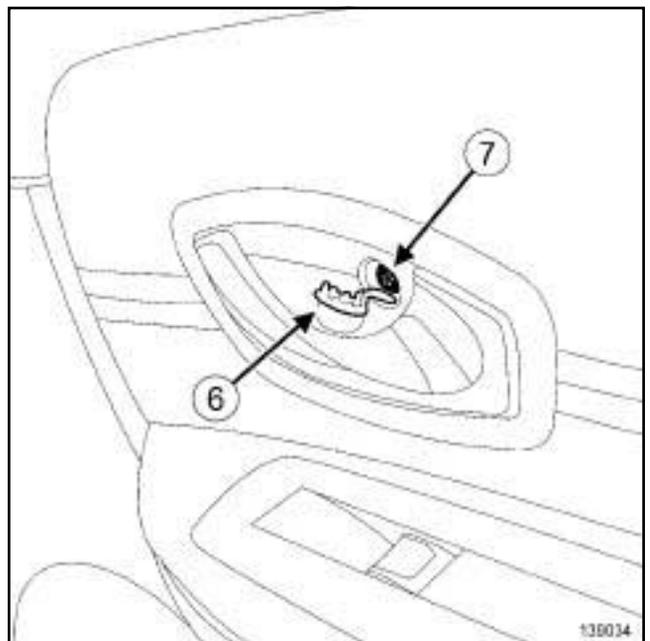

- ❑ Remove:
 - the blanking cover (6) ,
 - the bolt (7) .


SIDE OPENING ELEMENT TRIM

Rear side door trim: Removal - Refitting

72A

B95 or J95 or K95

II - OPERATION FOR REMOVAL OF PART CONCERNED

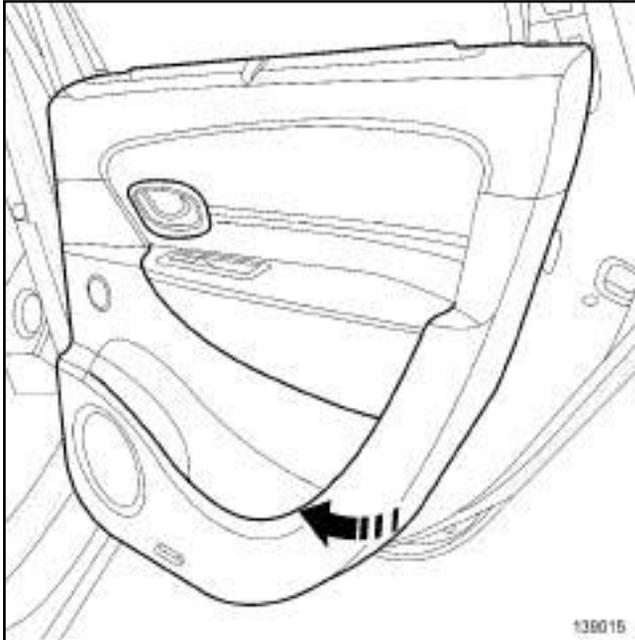

- Unclip:
 - the rear side door trim,
 - the interior opening release cable of the rear side door.

FRONT FOOTWELL LIGHT


- Disconnect the rear side door light.

REAR ELECTRIC WINDOW+ONE-TOUCH+ANTI-PINCH

- Disconnect the connectors from the rear side door window control switch plate.

RADIO NO 03 or RADIO NO 05 or RADIO NO 06 or RADIO NO 07

- Disconnect the tweeter speaker.

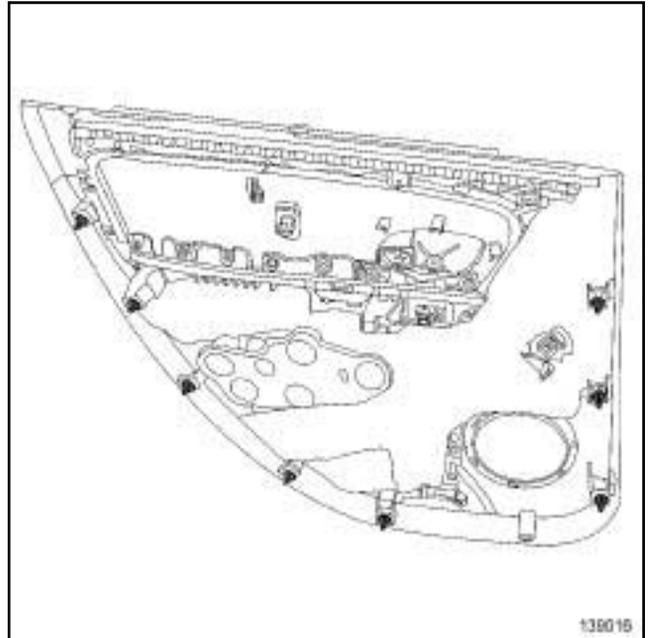

- Remove the rear side door trim.

REFITTING

I - REFITTING PREPARATION OPERATION

- parts always to be replaced: Rear side opening element trim clip (70,03,02,23).

II - REFITTING OPERATION FOR PART CONCERNED

- Partially refit the rear side door trim.

RADIO NO 03 or RADIO NO 05 or RADIO NO 06 or RADIO NO 07

- Connect the tweeter speaker.

REAR ELECTRIC WINDOW+ONE-TOUCH+ANTI-PINCH

- Connect the connectors to the rear side door window control switch plate.

SIDE OPENING ELEMENT TRIM

Rear side door trim: Removal - Refitting

72A

B95 or J95 or K95

FRONT FOOTWELL LIGHT

- Connect the rear side door light.

- Clip on:

- the interior opening release cable of the rear side door,
- the rear side door trim.

III - FINAL OPERATION

- Refit:

- the bolt **(7)**
- the blanking cover **(6)**.

J95

- Refit the trim piece.

- Refit the bolt **(3)** of the rear side door trim.

MANUAL REAR WINDOW WINDER

- Clip on the clip **(2)**.
- Refit the manual window winder control handle.

Note:


Refit the manual window winder handle for the rear side door in a vertical position with the button at the bottom.

- Carry out a function test.

REMOVAL


OPERATION FOR REMOVAL OF PART CONCERNED

B95 or K95

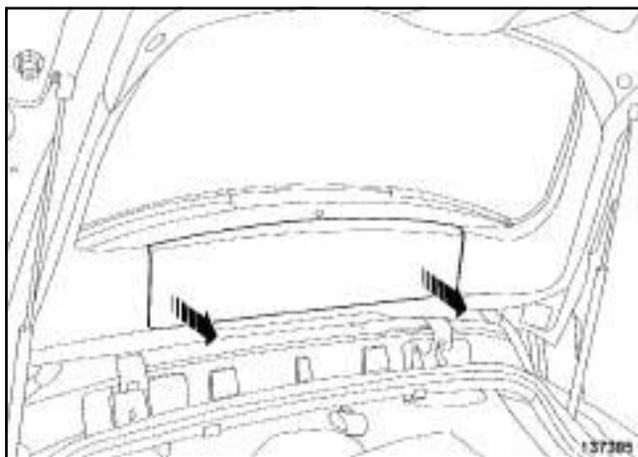

137385


- Remove the centre trim.

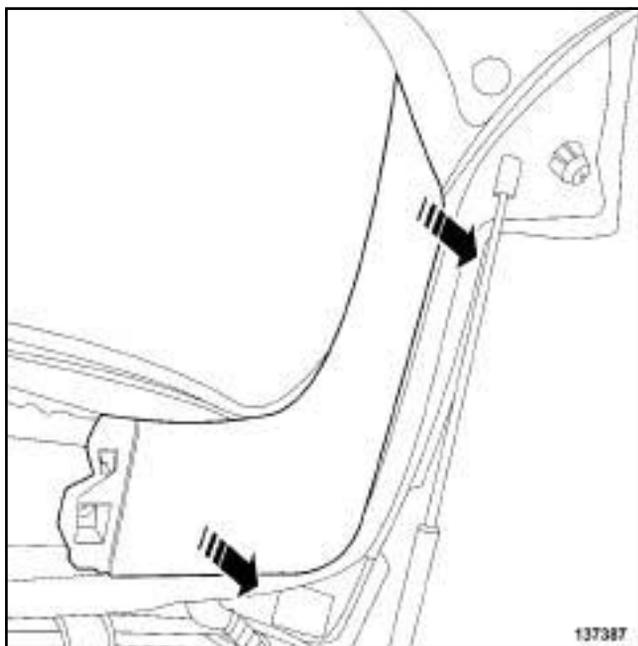

137387

- Remove the side trims.


B95

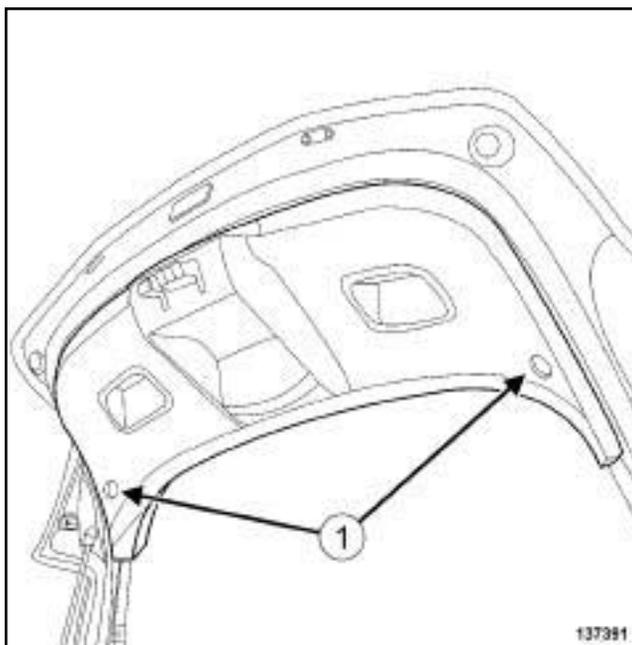


137391

- Remove:
 - the bolts (1) ,
 - the tailgate trim.


K95

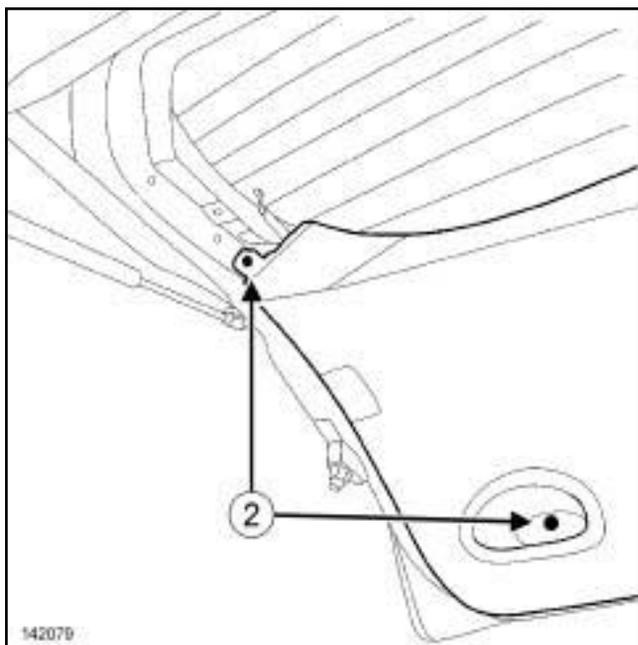

- Remove:
- the bolts (2) ,
- the tailgate trim.

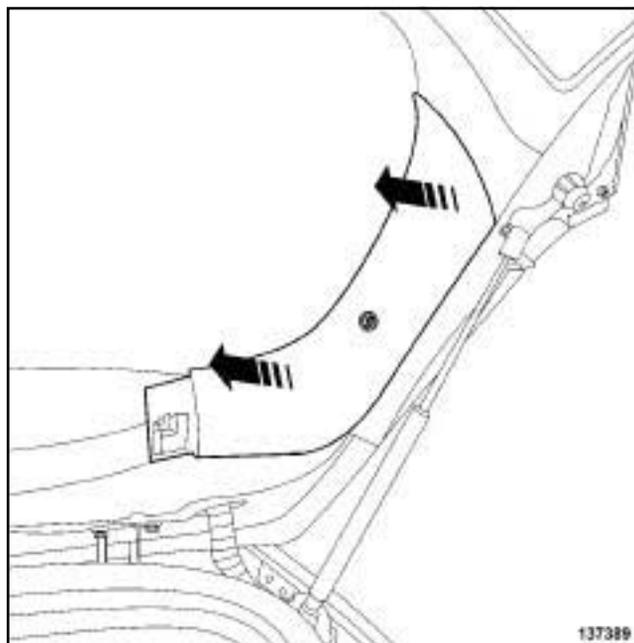


- Remove the side trims.

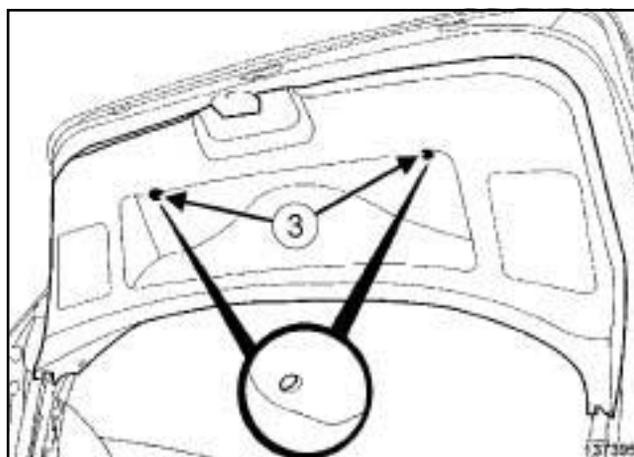


- Remove:
- the bolts (3) ,
- the tailgate trim.

D95

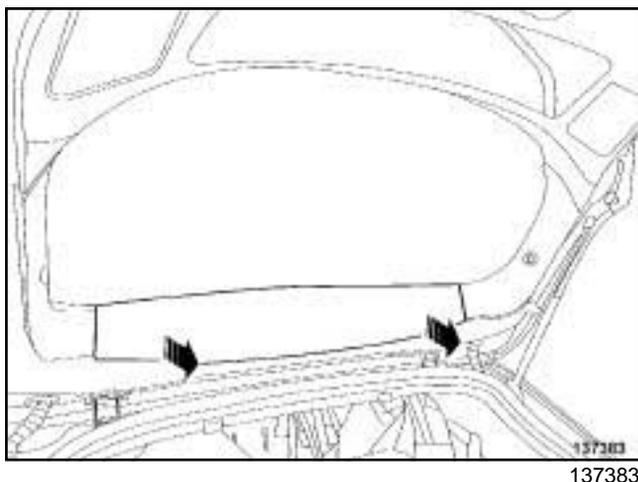


- Remove the centre trim.


J95

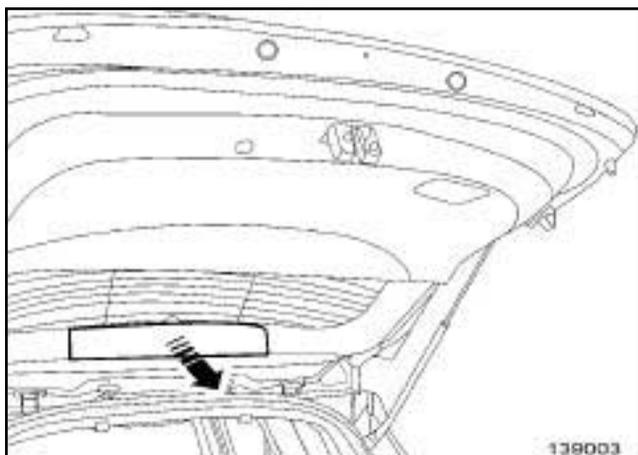



- ❑ Remove the central trim assembly.

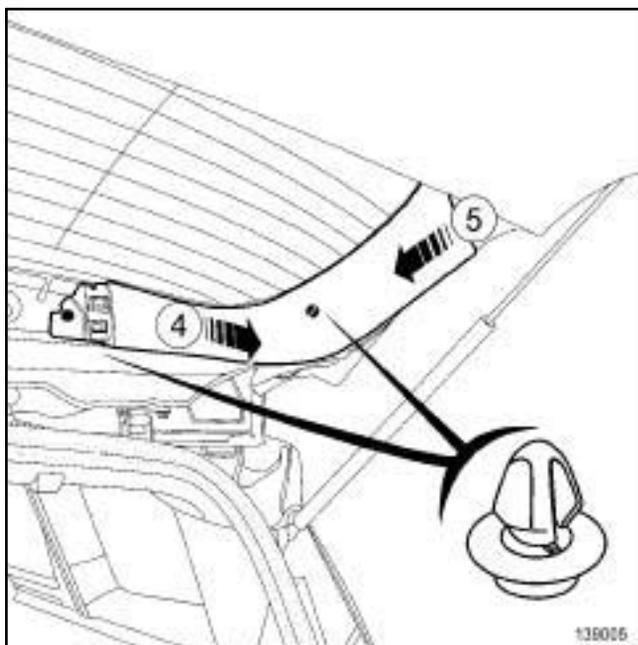

- ❑ Remove the side trims at (4) and (5) .

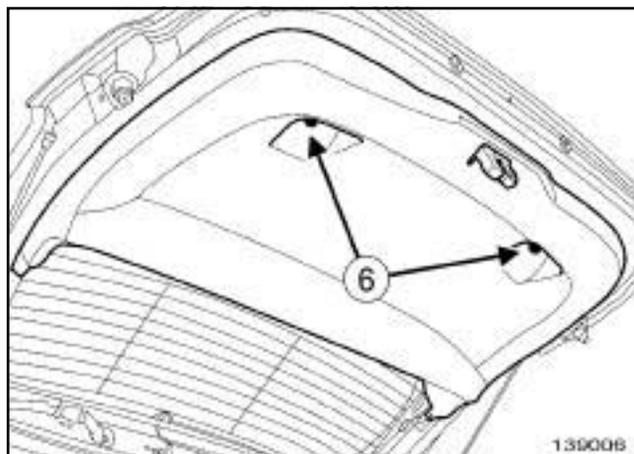

- ❑ Remove the bolts (6) .

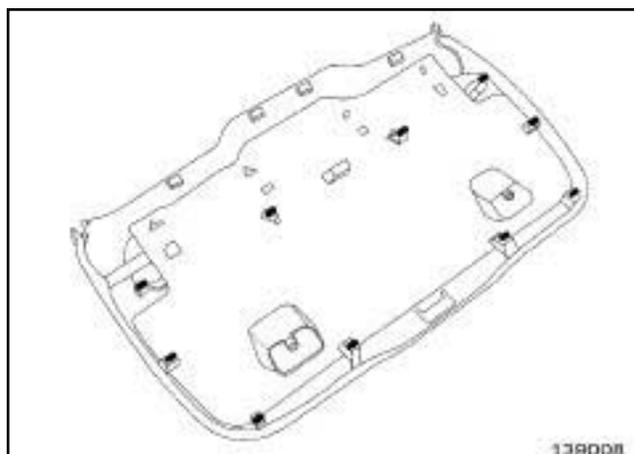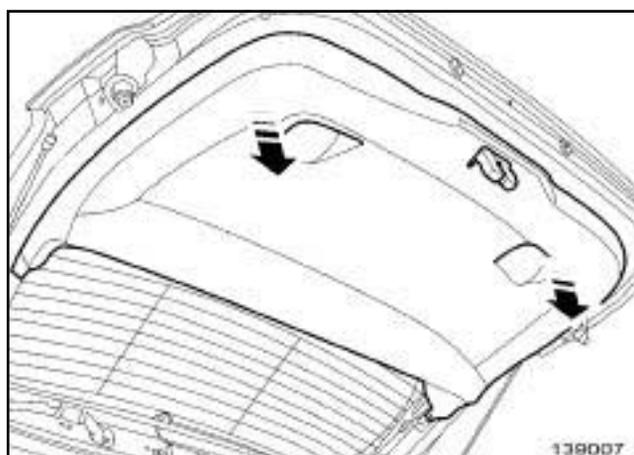

- ❑ Remove the tailgate trim.

REFITTING

I - REFITTING PREPARATION OPERATION

Note:

Always check the condition of the clips and replace them if necessary.

II - REFITTING OPERATION FOR PART CONCERNED

Refit:

- the tailgate trim,
- the side trims,
- the centre trim.

B95 or D95 or E95 or J95 or K95

Essential equipment

diagnostic tool

Tightening torques

new bolts for the « seatback - seat base » frame on the front seat	40 N.m
---	---------------

Note:

It is prohibited to carry out any welding operation on the frames of the seat and bench seat.

Note:

Depending on the method of sale defined by the Parts Department, adaptations can be made to the seat frames.

In this case, it is permitted to eliminate certain components (supports, wires, brackets, inserts, etc) depending on vehicle type.

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - the front headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page **79A-3**),
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**),
 - the front seat lower casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**),
 - the front seat base trim (see **77A, Front seat trim, Front seat base trim: Removal - Refitting**, page **77A-1**).
 - the front seat belt buckle stalk (see **Front seat belt buckle: Removal - Refitting**) (88C, Airbags and pretensioners).

D95 or E95

- Remove the anti-submarining airbag (see **Anti-submarining airbag: Removal - Refitting**) (88C, Airbags and pretensioners).

B95 or J95 or K95

- Remove the front seat lap belt pretensioner (see **Front seat lap belt pretensioner: Removal - Refitting**) (88C, Airbag and pretensioners).

- Remove:


- the front seat runners (see **75A, Front seat frames and mechanisms, Front seat runner: Removal - Refitting**, page **75A-8**),
- the electrical wiring,
- the front seat base pad.

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 08

- Remove the front seat height adjustment motor (see **75A, Front seat frames and mechanisms, Front seat height adjuster: Removal - Refitting**, page **75A-11**).

B95 or D95 or E95 or J95 or K95


II - OPERATION FOR REMOVAL OF PART CONCERNED

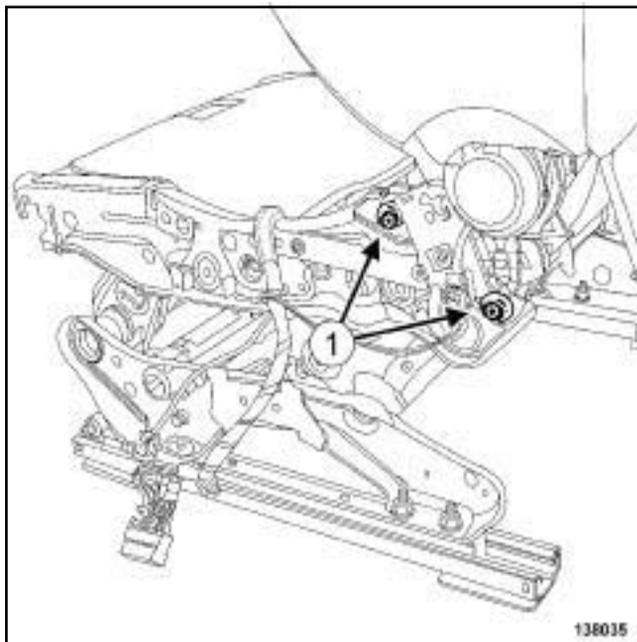

138035

- Remove the bolts (1) from the front seat « seatback - seat base » frame.

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

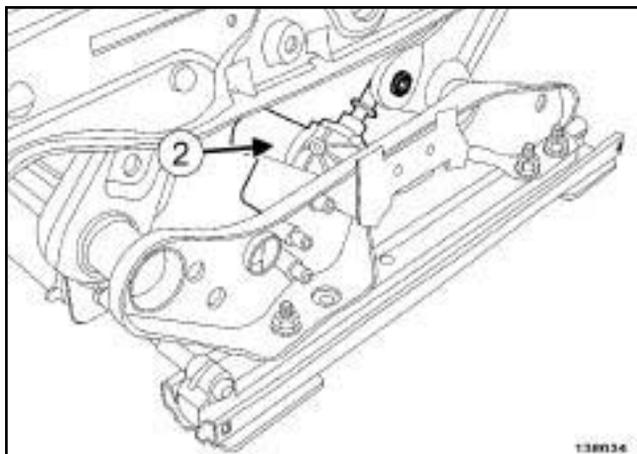

138034

Note:

The height adjustment motor mountings (2) cannot be removed.

The Parts Department supplies the front seat frame assembled with the front seat height adjustment motor.

REFITTING

I - REFITTING PREPARATION OPERATION

- parts always to be replaced: Front seatback frame mounting on front seat base frame (70,08,02,09).

II - REFITTING OPERATION FOR PART CONCERNED

- Refit the front seat base frame.
- Torque tighten the **new bolts for the « seatback - seat base » frame on the front seat (40 N.m)**.

III - FINAL OPERATION

- Refit:
 - the front seat base pad,
 - the electrical wiring,
 - the front seat runners (see **75A, Front seat frames and mechanisms, Front seat runner: Removal - Refitting, page 75A-8**).

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 08

- Refit the front seat height adjustment motor (see **75A, Front seat frames and mechanisms, Front seat height adjuster: Removal - Refitting, page 75A-11**).

D95 or E95

- Refit the anti-submarining airbag (see **Anti-submarining airbag: Removal - Refitting**) (88C, Airbags and pretensioners).

B95 or J95 or K95

- Refit the front seat lap belt pretensioner (see **Front seat lap belt pretensioner: Removal - Refitting**) (88C, Airbags and pretensioners).

B95 or D95 or E95 or J95 or K95

Refit:

- the front seat belt buckle stalk (see **Front seat belt buckle: Removal - Refitting**) (88C, Airbag and pretensioners),
- the front seat base trim (see **77A, Front seat trim, Front seat base trim: Removal - Refitting**, page **77A-1**),
- the front seat lower casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**),
- the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**),
- the front headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page **79A-3**).

Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

Apply the after repair procedure using the **diagnostic tool** :

- connect the **diagnostic tool**,
- select « seat position storage and adjustment computer » ,
- go to repair mode,
- display the « before/after repair procedure » for the computer selected,
- select « Front seat base height adjustment instrumented motor » ,
- carry out the operations described in the « After repair procedure » section.

Carry out a function test.

B95 or D95 or E95 or J95 or K95

Essential special tooling

Car. 1363 Set of trim removal levers.

Tightening torques

new bolts for the « seatback - seat base » frame on the front seat **40 N.m**

Note:

It is prohibited to carry out any welding operation on the frames of the seat and bench seat.

Note:

Depending on the method of sale defined by the Parts Department, adaptations can be made to the seat frames.

In this case, it is permitted to eliminate certain components (supports, wires, brackets, inserts, etc) depending on vehicle type.

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - the front seat headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page 79A-3) ,
 - the complete front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page 75A-28) ,
 - the front seat lower casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page 77A-9) .

D95 or E95

- Remove the rear seat access control (see **Rear seat access control: Removal - Refitting**) .

FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 04 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 07 or FRONT SEAT TYPE 08

- Remove the front seat lumbar adjustment control (see **Front seat lumbar adjustment control: Removal - Refitting**) .

J95

- Remove (see **79A, Seat components, Seatback tray: Removal - Refitting**, page 79A-1) .

- Remove:

- the front seat headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting**, page 79A-7) ,
- the front seatback « foam - cover » assembly (see **77A, Front seat trim, Front seatback trim: Removal - Refitting**, page 77A-4) ,
- the front side (chest-level) airbag (see **Front (chest) side airbag: Removal - Refitting**) (88C, Airbags and pretensioners).

FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 04 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 07 or FRONT SEAT TYPE 08

- Remove the front seat lumbar adjustment mechanism (see **75A, Front seat frames and mechanisms, Front lumbar adjustment: Removal - Refitting**, page 75A-14) .

FRONT SEAT TYPE 01


- Remove the front seat lumbar pad.

B95 or D95 or E95 or J95 or K95

D95 or E95


- ❑ Remove the control support assembly for access to the rear seats together with the seatback frame unlocking cables (see **Rear seat access mechanisms: Removal - Refitting**) .

D95 or E95, and FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

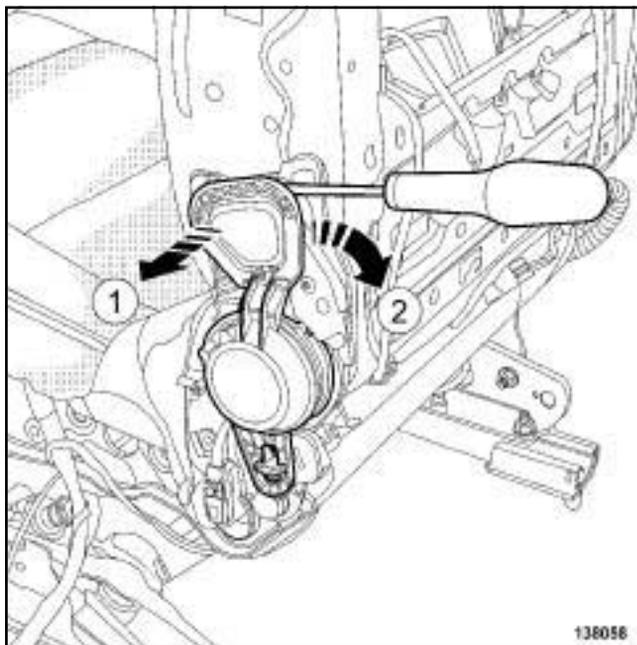

138058

- ❑ Unclip the rear seat access rotary switch at (1) and (2) .
- ❑ Disconnect the connector for the rear seat access rotary switch.
- ❑ Remove the rear seat access rotary switch.

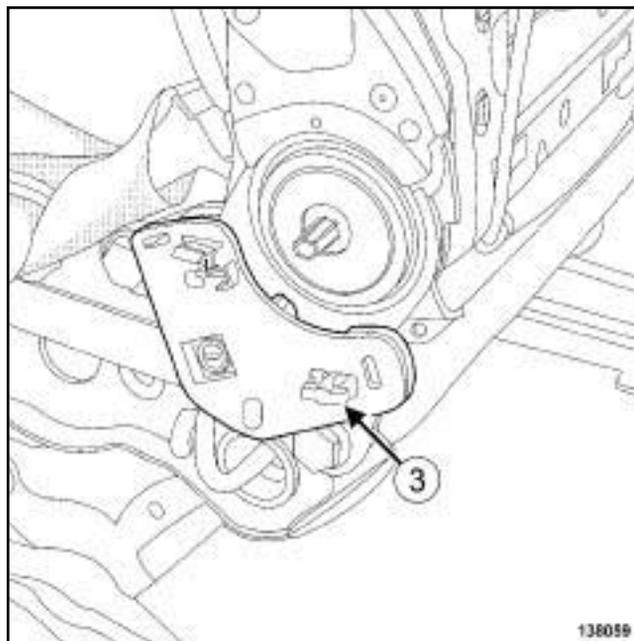

138059

138059


- ❑ Unclip the support (3) from the rear seat access rotary switch using the tool (**Car. 1363**).

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07


- ❑ Remove the front seatback tilt angle motor (see **75A, Front seat frames and mechanisms, Front seat backrest tilt motor: Removal - Refitting, page 75A-24**) .

B95 or D95 or E95 or J95 or K95

II - OPERATION FOR REMOVAL OF PART CONCERNED

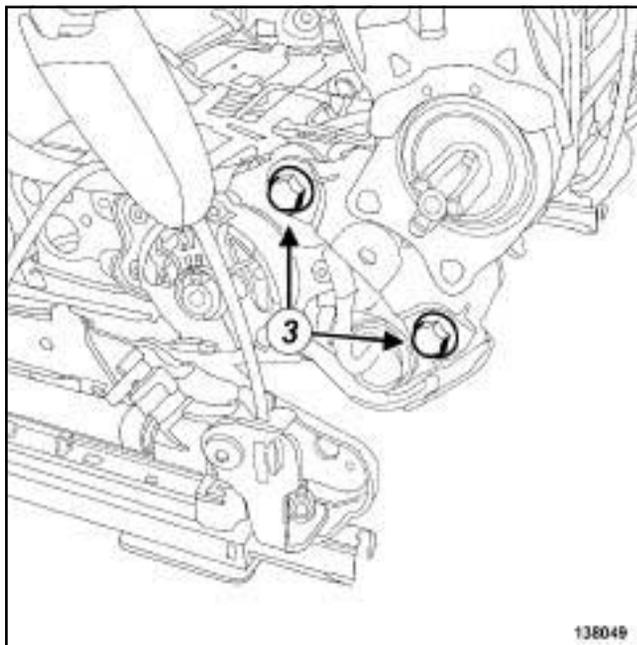

138049
138049

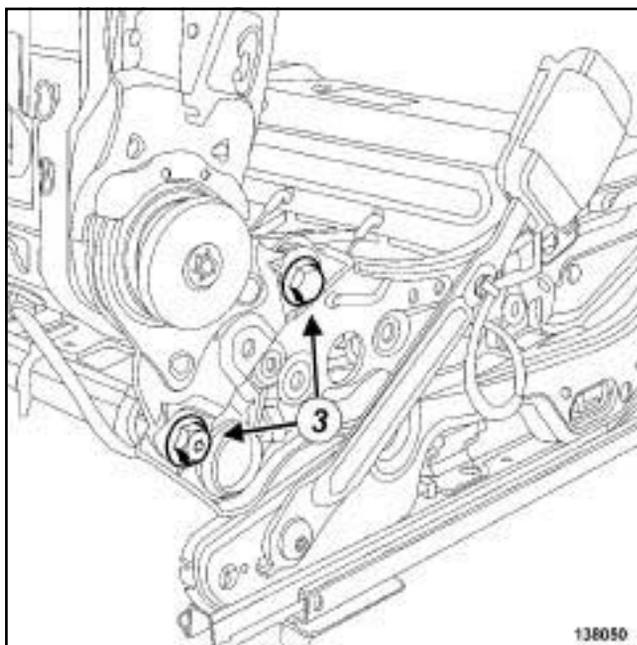

138050
138050

- Remove the bolts (3) from the front seat « seatback - seat base » frame.

REFITTING

I - REFITTING PREPARATION OPERATION

- parts always to be replaced: Front seatback frame mounting on front seat base frame (70,08,02, 09).

II - REFITTING OPERATION FOR PART CONCERNED

- Refit the front seatback frame.
- Torque tighten the **new bolts for the « seatback - seat base » frame on the front seat (40 N.m).**

III - FINAL OPERATION

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

- Refit the front seatback tilt angle motor (see 75A, **Front seat frames and mechanisms, Front seat backrest tilt motor: Removal - Refitting**, page 75A-24) .

D95 or E95, and FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

- Clip on the support for the rear seat access rotary switch.
- Refit the rear seat access switch.
- Connect the rear seat access switch connector.
- Clip on the rear seat access rotary switch.

D95 or E95

- Refit the control support assembly for access to the rear seats together with the seatback frame unlocking cables (see **Rear seat access mechanisms: Removal - Refitting**) .

FRONT SEAT TYPE 01

- Refit the front seat lumbar pad.

B95 or D95 or E95 or J95 or K95

FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03
or FRONT SEAT TYPE 04 or FRONT SEAT TYPE
05 or FRONT SEAT TYPE 06 or FRONT SEAT
TYPE 07 or FRONT SEAT TYPE 08

- Refit the front seat lumbar adjustment mechanism (see **75A, Front seat frames and mechanisms, Front seat lumbar adjustment: Removal - Refitting**, page **75A-14**) .

- Refit:

- the front side (chest-level) airbag (see **Front (chest) side airbag: Removal - Refitting**) (88C, Airbags and pretensioners),
- the front seatback « foam - cover » assembly (see **77A, Front seat trim, Front seatback trim: Removal - Refitting**, page **77A-4**) ,
- the front seat headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting**, page **79A-7**) .

J95

- Refit (see **79A, Seat components, Seatback tray: Removal - Refitting**, page **79A-1**) .

FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03
or FRONT SEAT TYPE 04 or FRONT SEAT TYPE
05 or FRONT SEAT TYPE 06 or FRONT SEAT
TYPE 07 or FRONT SEAT TYPE 08

- Refit the front seat lumbar adjustment control (see **Front seat lumbar adjustment control: Removal - Refitting**) .

D95 or E95

- Refit the rear seat access control (see **Rear seat access control: Removal - Refitting**) .

- Refit:

- the front seat lower casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**) ,

- the complete front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**) ,

- the front headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page **79A-3**) .

- Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

- Carry out a function test.

Front seat runner: Removal - Refitting

B95 or D95 or E95 or J95 or K95

Tightening torques

new nuts of the « seat base - runner » on the front seat	21 N.m
--	--------

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - the front headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page 79A-3) ,
 - the complete front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page 75A-28) ,
 - the front seat lower casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page 77A-9) .

B95

- Remove the front seat lap belt pretensioner (see **Front seat lap belt pretensioner: Removal - Refitting**) (88C, Airbag and pretensioners).


D95, and FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 08

- Partially unclip the unlocking cable for the front seat runners (see **Rear seat access mechanisms: Removal - Refitting**) .

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

- Remove the front seat slide motor (see **75A, Front seat frames and mechanisms, Front seat sliding motor: Removal - Refitting**, page 75A-17) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

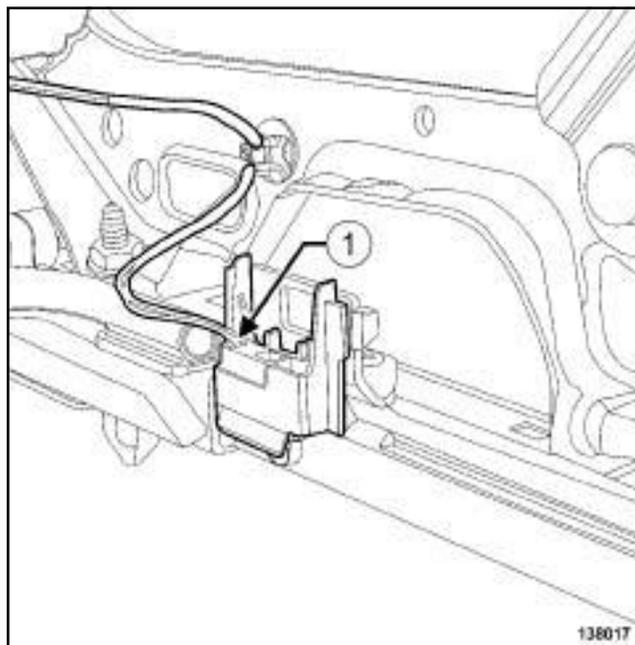

138017


138017

- Unclip the front seat runner switch. (1) .


Front seat runner: Removal - Refitting

B95 or D95 or E95 or J95 or K95

B95 or D95

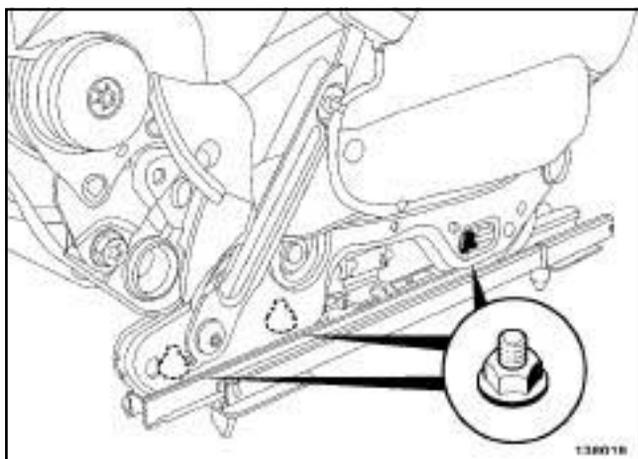

138018

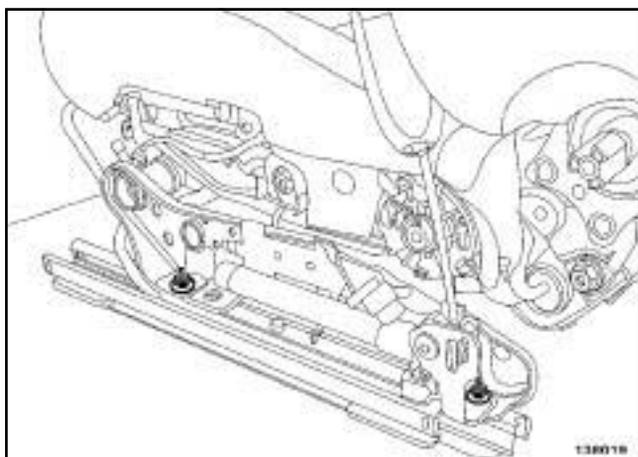


138019

Remove:


- the nuts from the front « seat base - runner » ,
- the front seat runners.

J95

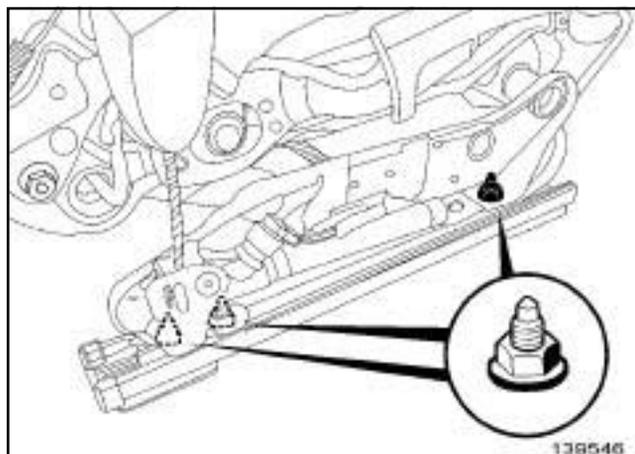

139546

139546

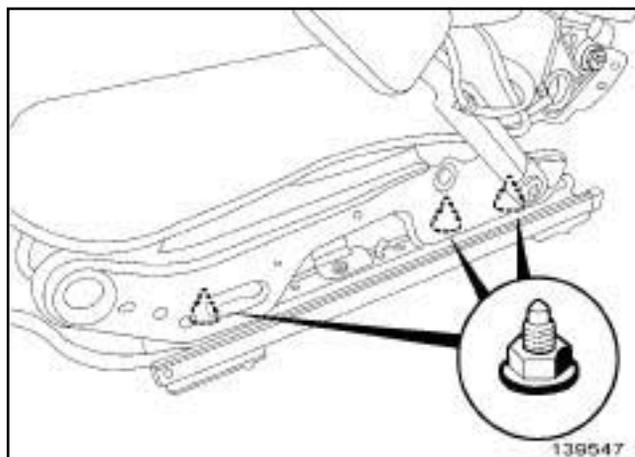

139547

139547

Remove:

- the nuts from the front « seat base - runner » ,
- the front seat runners.

REFITTING


I - REFITTING PREPARATION OPERATION

- parts always to be replaced: Front seat runner mounting on front seat frame (70,08,04,27).

II - REFITTING OPERATION FOR PART CONCERNED

- Refit the front seat runners.
- Finger tighten all the attachments.

B95 or D95 or E95 or J95 or K95

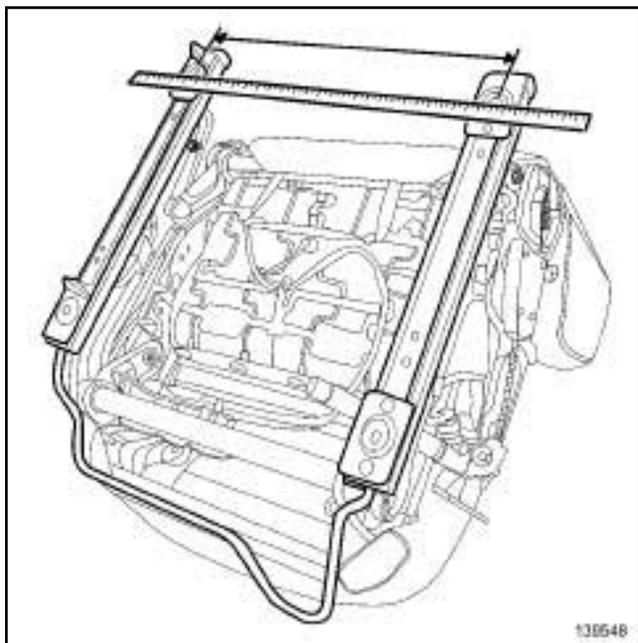

139548

- Position the runners so that there is a centre-to-centre distance of **428.5 mm** between the two rear mountings.
- Torque tighten the **new nuts of the « seat base - runner » on the front seat (21 N.m)**.

III - FINAL OPERATION

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

- Refit the front seat slide motor. (see **75A, Front seat frames and mechanisms, Front seat sliding motor: Removal - Refitting, page 75A-17**).

- Clip on the front seat runner switch **(1)**.

D95, and FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 08

- Clip the unlocking cable onto the front seat runners (see **Rear seat access mechanisms: Removal - Refitting**).

B95

- Refit the front seat lap belt pretensioner (see **Front seat lap belt pretensioner: Removal - Refitting**) (88C, Airbags and pretensioners).

Refit:

- the front seat lower casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting, page 77A-9**),
- the complete front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting, page 75A-28**),
- the front headrest (see **79A, Seat components, Front headrest: Removal - Refitting, page 79A-3**).

- Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

- Carry out a function test.

FRONT SEAT FRAMES AND MECHANISMS

Front seat height adjuster: Removal - Refitting

75A

J95

Essential special tooling


Car. 1922	Lever for removing/refitting the seat height adjustment torque rod
------------------	--

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**),
 - the outer lower seat housing (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**).

II - OPERATION FOR REMOVAL OF PART CONCERNED

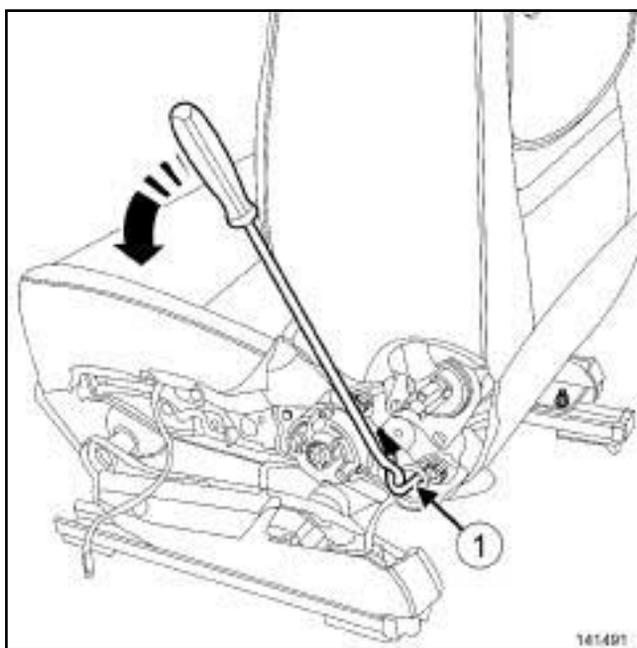


- Let down the spring (1) using the tool (**Car. 1922**).

FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06



Note:

To let down the spring, the seat must be placed in the shelf position.

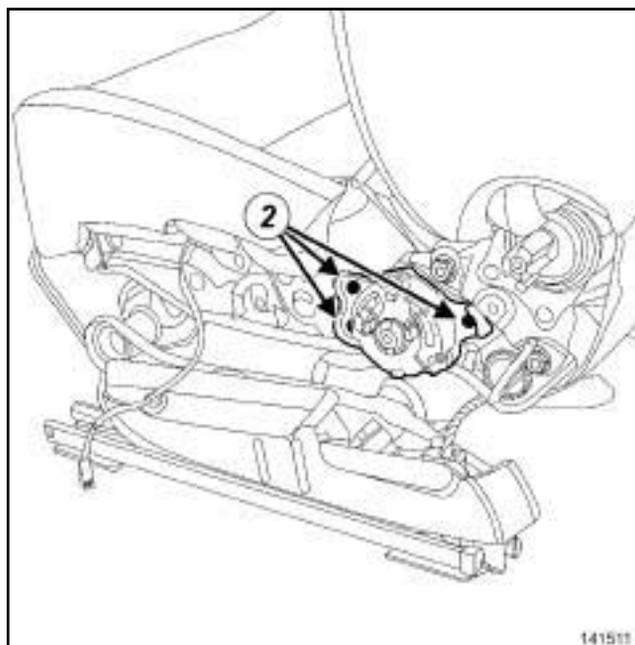

141511

- Remove:
 - the rivets (2) from the front seat height adjustment module,
 - the front seat height adjustment module.

REFITTING


I - REFITTING PREPARATION OPERATION

- parts always to be replaced: Front seat height adjustment mechanism rivet (70,08,04,28).

II - REFITTING OPERATION FOR PART CONCERNED

- Refit:
 - the front seat height adjustment module,
 - the new rivets (2) to the front seat height adjustment module.

J95

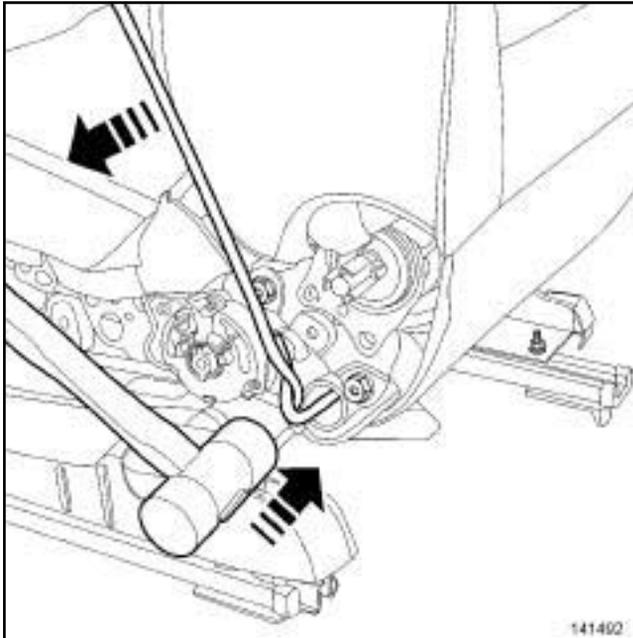


141492

- Refit the spring using the tool (**Car. 1922**) and a hammer.

III - FINAL OPERATION

- Refit:
 - the outer lower seat housing (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**),
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**).
- Connect the battery (see **Battery: Removal - Refitting**) (**80A, Battery**).
- Carry out a function test.

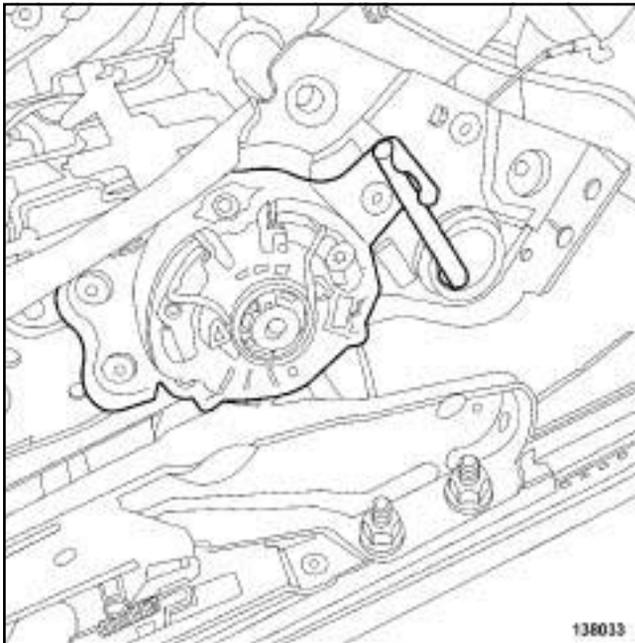

138033



Note:

The torsion bar is used again on the front seat height adjustment mechanism.

The front seat height adjustment mechanism cannot be removed.

The Parts Department supplies the front seat frame assembled with the front seat height adjustment motor.

- Whenever replacing a front seat height adjustment motor, refer to the replacement procedure for the front seat base frame.

FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 04 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 07 or FRONT SEAT TYPE 08

REMOVAL


I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - the front seat headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page **79A-3**),
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**),
 - the front seat base casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**),
- Remove the front seat headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting**, page **79A-7**).
- Remove the front seat lumbar adjustment control (see **75A, Front seat frames and mechanisms, Front seat lumbar adjustment: Removal - Refitting**, page **75A-14**).

D95

- Remove the rear seat access control (see **75A, Front seat frames and mechanisms, Front seat backrest tilt control: Removal - Refitting**, page **75A-21**).
- Remove the front seat foam and cover assembly (see **77A, Front seat trim, Front seatback trim: Removal - Refitting**, page **77A-4**).

II - OPERATION FOR REMOVAL OF PART CONCERNED

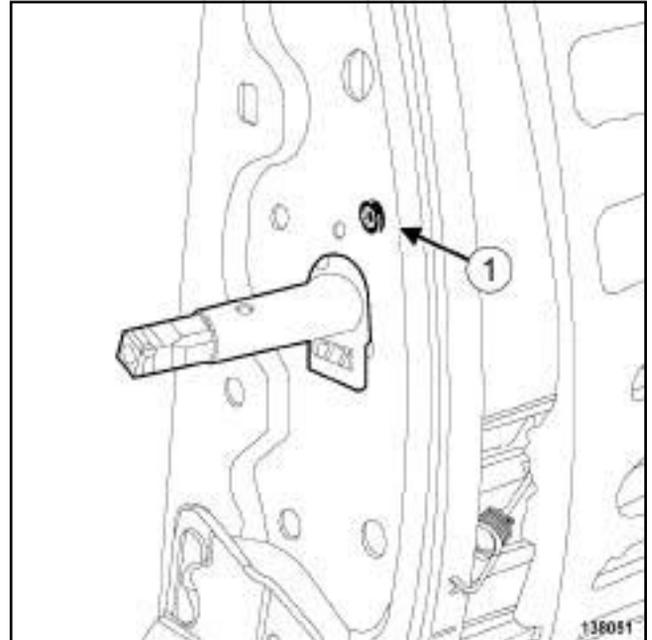


138051

- Remove the bolt (1) from the front seat lumbar adjustment mechanism.

Note:


For this operation, the lumbar pad must be loose.

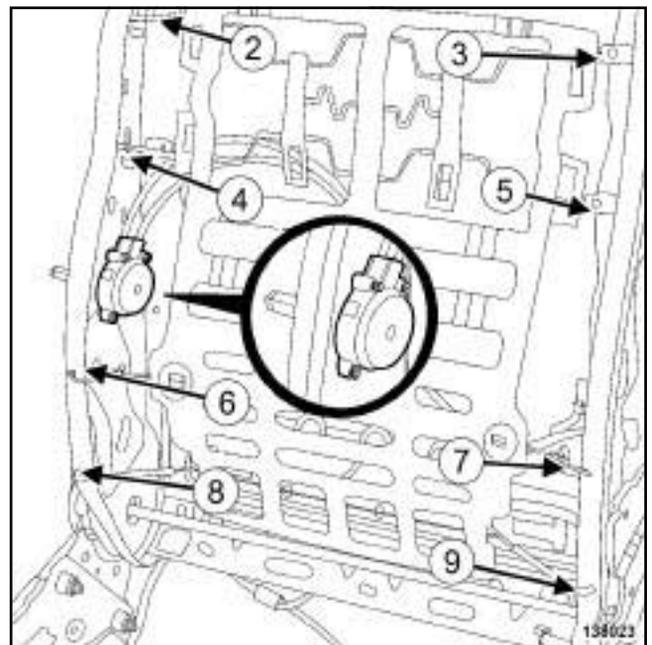

138023

- Unclip the front seat lumbar pad in the order shown.

FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 04 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 07 or FRONT SEAT TYPE 08

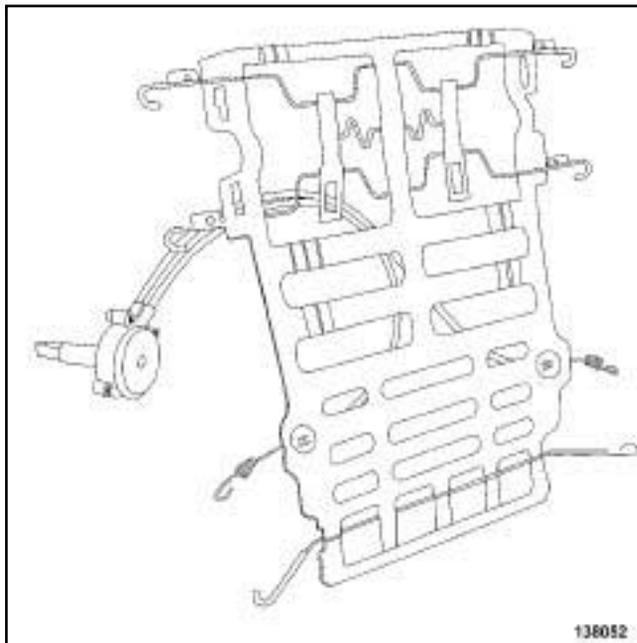

138052

- Remove the « lumbar adjustment mechanism - lumbar pad » assembly.


Note:

The Parts Department supplies the lumbar adjustment mechanism assembled with the lumbar pad.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the « lumbar adjustment mechanism - lumbar pad » assembly.

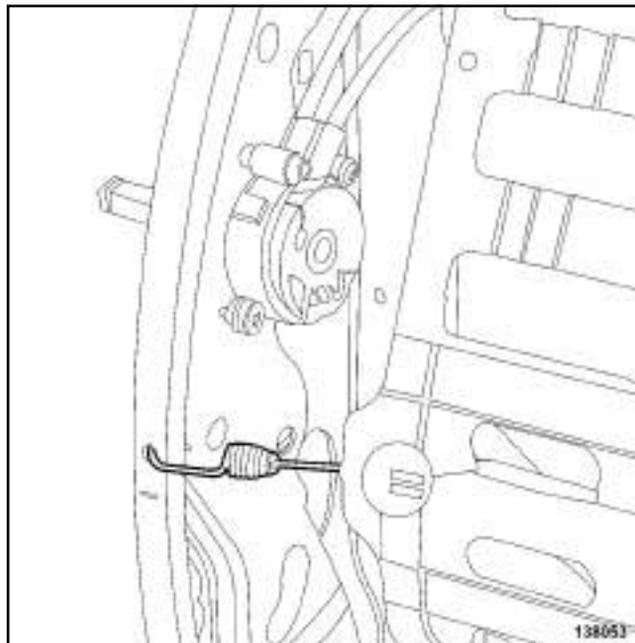

138053

- Clip on the front seat lumbar pad in the order shown.

Note:

The lumbar pad springs on the front seatback frame are positioned with the hook facing towards the rear.

- Carry out a function test.

II - FINAL OPERATION

- Refit the front seat foam and cover assembly (see **77A, Front seat trim, Front seatback trim: Removal - Refitting, page 77A-4**).

D95

- Refit the rear seat access control (see **75A, Front seat frames and mechanisms, Front seat backrest tilt control: Removal - Refitting, page 75A-21**).

- Refit the front seat lumbar adjustment control (see **75A, Front seat frames and mechanisms, Front seat lumbar adjustment: Removal - Refitting, page 75A-14**).

- Refit the headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting, page 79A-7**).

FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 04 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 07 or FRONT SEAT TYPE 08

- Refit:
 - the front seat base casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**),
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**),
 - the front seat headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page **79A-3**).
- Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

FRONT SEAT FRAMES AND MECHANISMS

Front seat sliding motor: Removal - Refitting

75A

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

Essential equipment

diagnostic tool

Note:


The front seat runner motor can be replaced without removing the front seat.

REMOVAL


I - OPERATION FOR REMOVAL OF PART CONCERNED

- Move the front seat to the highest position.
- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).


II - OPERATION FOR REMOVAL OF PART CONCERNED

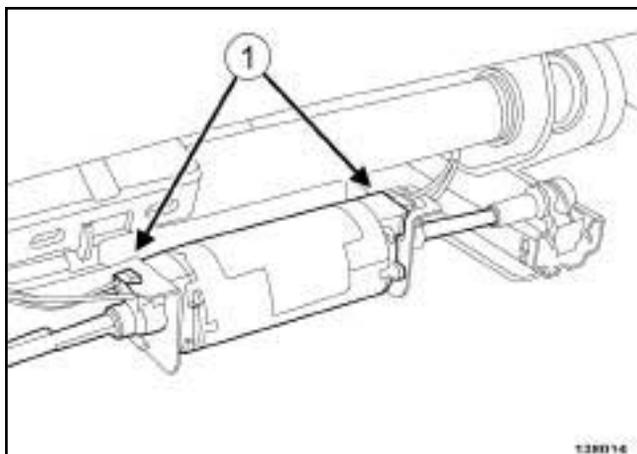

- Disconnect the connectors (1) from the front seat slide motor.

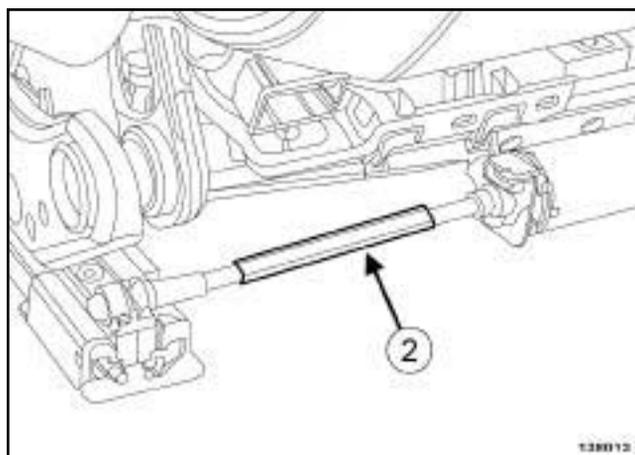

- Remove the rigid clip (2) .

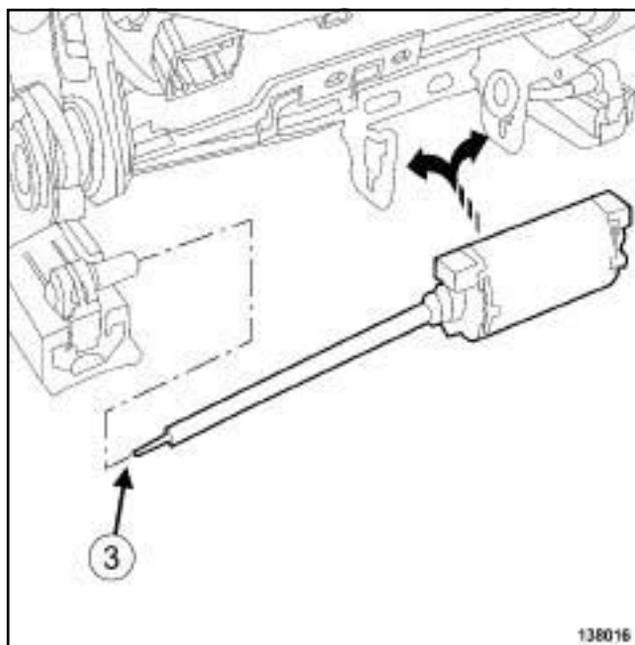


- Unclip the long cable (3) .
- Remove the « front seat slide motor - long cable » assembly.

FRONT SEAT FRAMES AND MECHANISMS

Front seat sliding motor: Removal - Refitting

75A


FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

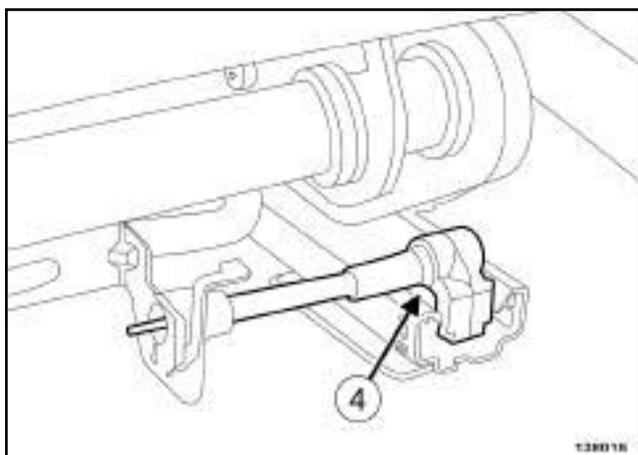


- Unclip the short cable at (4) .
- Remove the short cable.

REFITTING

I - REFITTING PREPARATION OPERATION

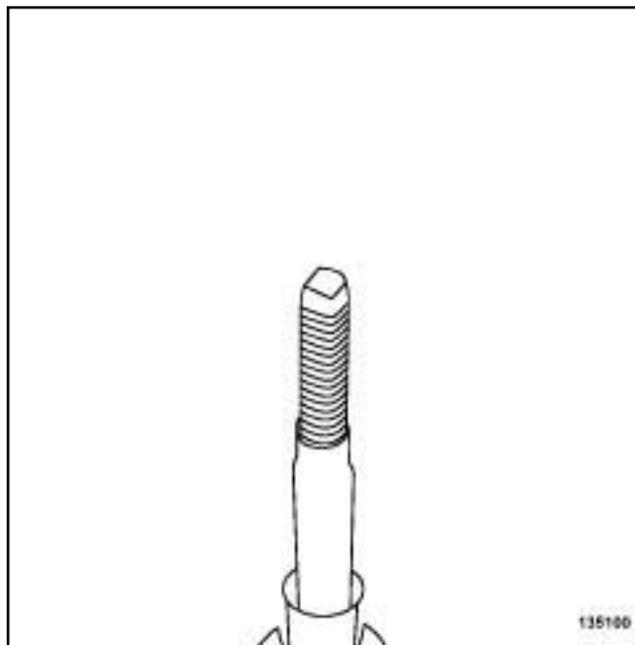

135100

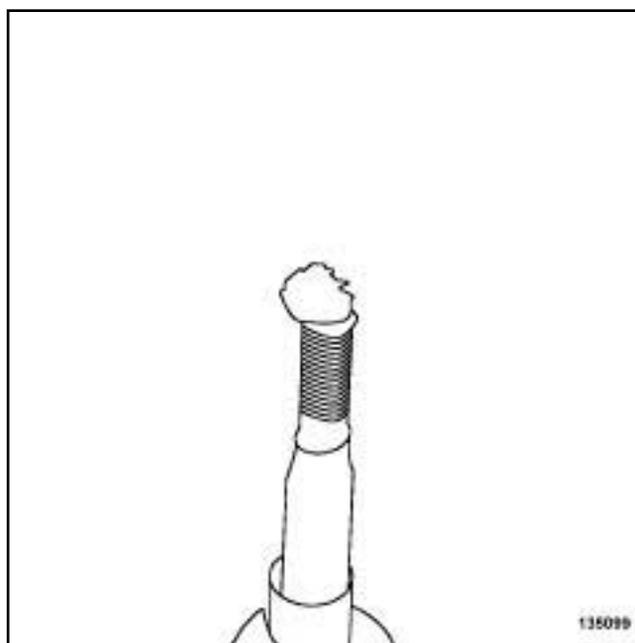

135099

- Check the condition of the ends of the cables.

WARNING

To prevent any risk of de-synchronisation or locking of the runners, check the condition of the ends of the drive cables.


Any damaged cable (frayed) must always be replaced.

FRONT SEAT FRAMES AND MECHANISMS

Front seat sliding motor: Removal - Refitting

75A

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

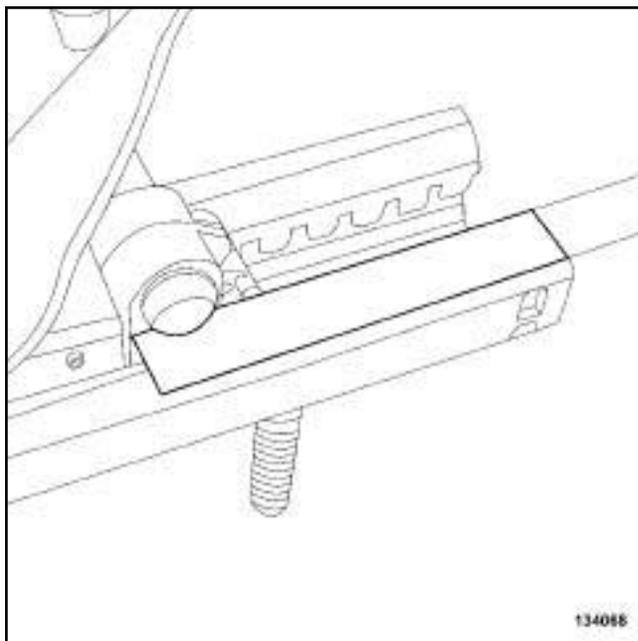

134068

- Check that the right-hand and left-hand runners are correctly synchronised using a ruler.
- Use the drive cable to synchronise the runners.

II - REFITTING OPERATION FOR PART CONCERNED

- Refit the short cable fully into the runner mechanism.

Note:

An incorrectly fitted cable risks causing de-synchronisation of the seat runners.

- Refit:
 - the front seat slide motor,
 - the long cable fully into the runner mechanism,
 - the rigid clip.
- Connect the connectors to the front seat slide motor.

III - FINAL OPERATION


- Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Apply the after repair procedure using the **diagnostic tool** :
 - connect the **diagnostic tool**,
 - select « Driver's seat position storage and adjustment computer » ,
 - go to repair mode,

- display the « Before/After repair procedure » for the computer selected,
- select « Driver's seat slide motor » ,
- carry out the operations described in the « After repair procedure » section.

- Carry out a function test.

FRONT SEAT TYPE 04

REMOVAL

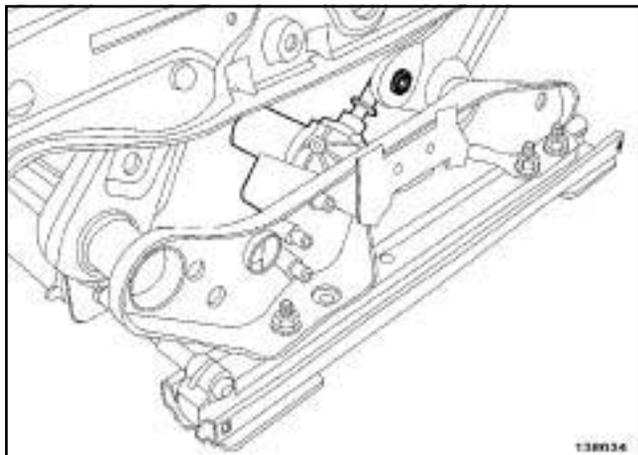

138034

□

Note:

The engine height adjustment mountings (self lock type) cannot be removed.

The Parts Department supplies the front seat frame assembled with the front seat height adjustment motor.

- Whenever replacing a front seat height adjustment motor, refer to the replacement procedure for the front seat base frame.

FRONT SEAT FRAMES AND MECHANISMS

Front seat backrest tilt control: Removal - Refitting

75A

B95 or D95 or E95 or J95 or K95


Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL

I - REMOVAL PREPARATION OPERATION

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02
or FRONT SEAT TYPE 03 or FRONT SEAT TYPE
05 or FRONT SEAT TYPE 06 or FRONT SEAT
TYPE 08

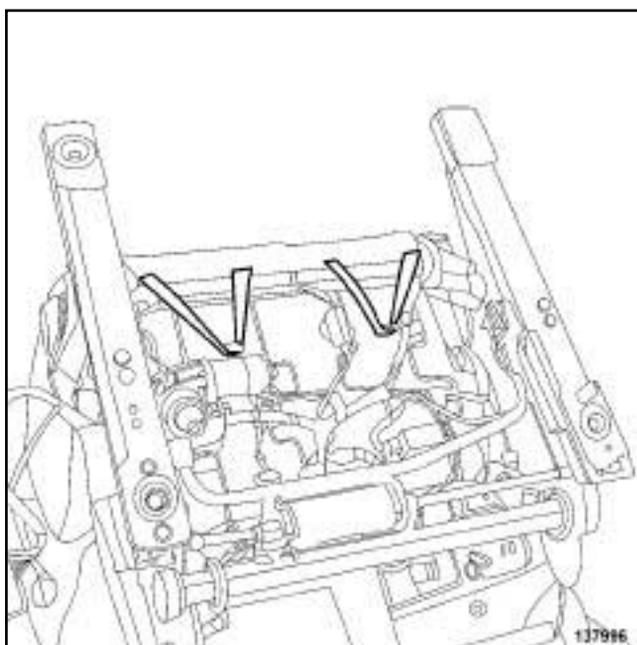

137996


- Remove the elastic securing straps of the front seat-back cover.

Front seat backrest tilt control: Removal - Refitting


B95 or D95 or E95 or J95 or K95

II - OPERATION FOR REMOVAL OF PART CONCERNED

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 08

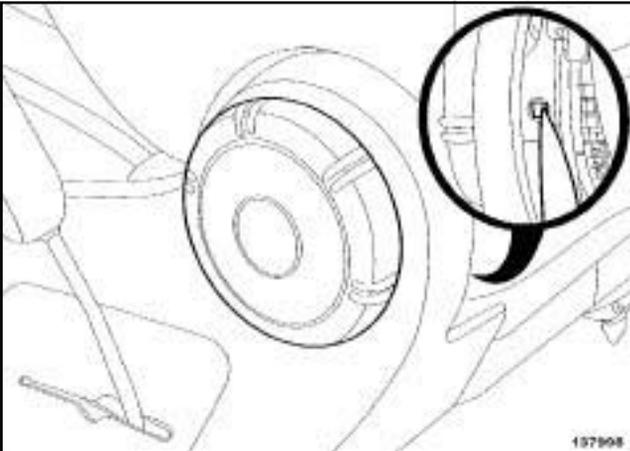

137998

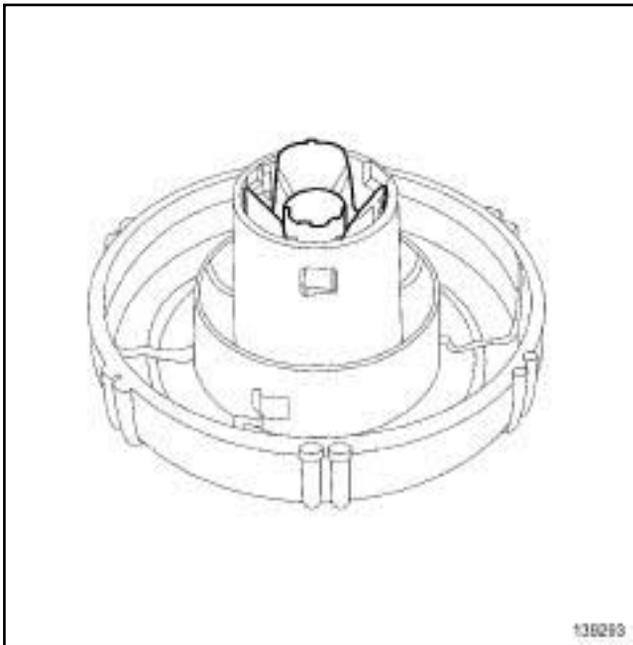

139293


- Turn the front seatback angle control in such a way as to reveal the unlocking clips.
- Unlock the clips using the tool (**Car. 1363**).

Note:

Pull the front seatback angle control slightly when unlocking the clips.

- Remove the front seatback angle control.

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

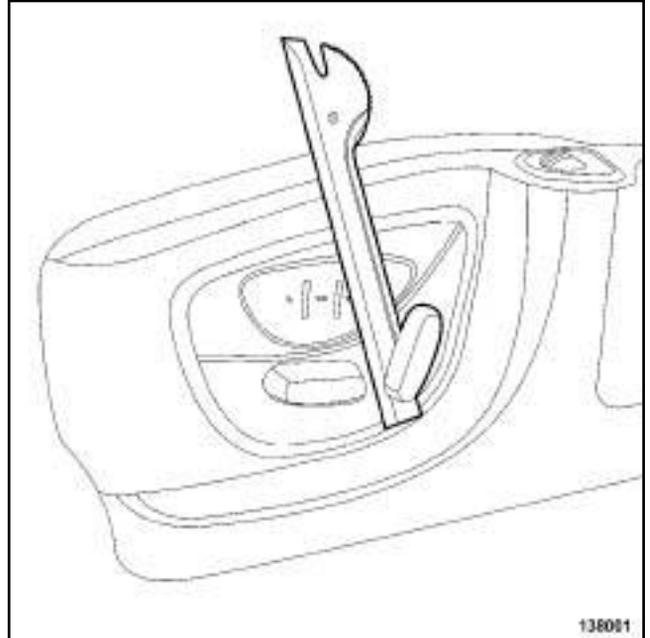

138001

138001

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Unclip the front seatback angle control using the tool (**Car. 1363**).

FRONT SEAT FRAMES AND MECHANISMS

Front seat backrest tilt control: Removal - Refitting


75A

B95 or D95 or E95 or J95 or K95

REFITTING

I - REFITTING PREPARATION OPERATION

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 08

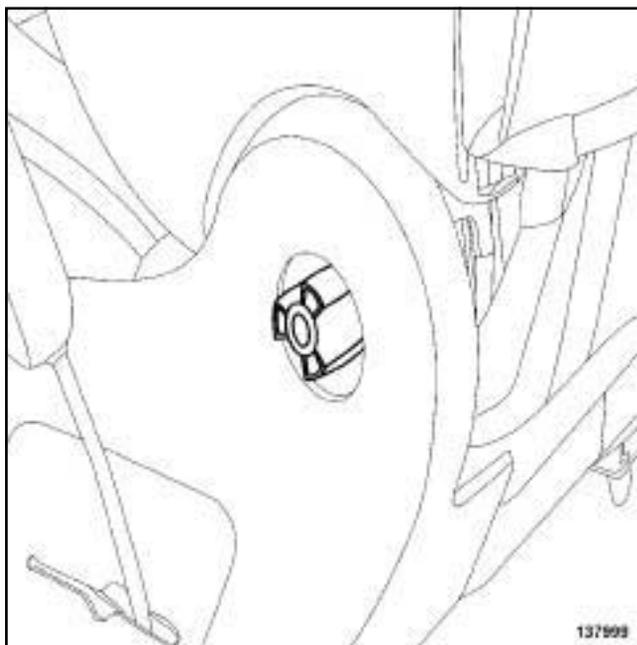

137999

- Check that the front seatback angle control support is correctly clipped onto the seatback frame.

II - REFITTING OPERATION FOR PART CONCERNED

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 08

- Clip the front seatback angle control onto its support.

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

- Clip on the front seatback angle control.

III - FINAL OPERATION

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 08

- Refit the elastic securing straps of the front seatback cover.

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

- Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

- Carry out a function test.

B95 or D95, and FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

Essential special tooling

Car. 1363 Set of trim removal levers.


REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - the front seat headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page **79A-3**) ,
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**) ,
 - the headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting**, page **79A-7**) ,


D95

- Remove the rear seat access control (see **Rear seat access control: Removal - Refitting**) ,
- Remove the front seat base casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**) .
- Remove the front seat lumbar adjustment control (see **Front seat lumbar adjustment control: Removal - Refitting**) .
- Remove the front seatback "foam - cover" assembly (see **77A, Front seat trim, Front seatback trim: Removal - Refitting**, page **77A-4**) .
- Remove the front seat (chest-level) side airbag (see **Front (chest) side airbag: Removal - Refitting**)

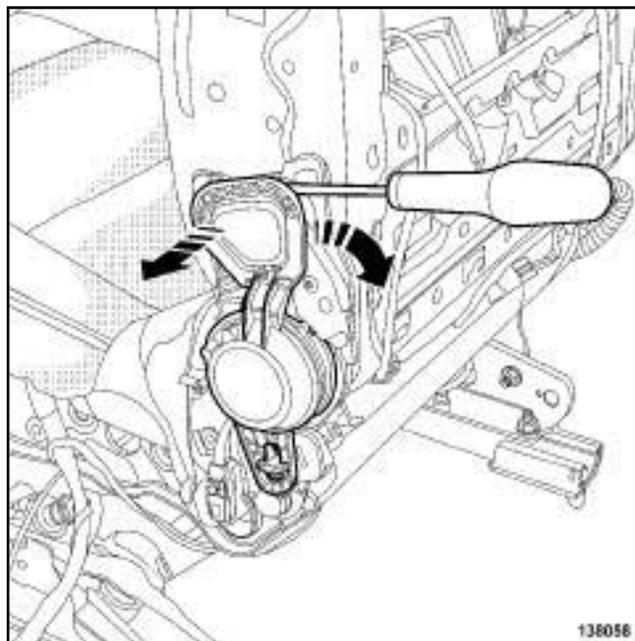

138058
138058

- Unclip the rear seat access rotary switch.
- Disconnect the connector from the rear seat access rotary switch.
- Remove the rear seat access rotary switch.

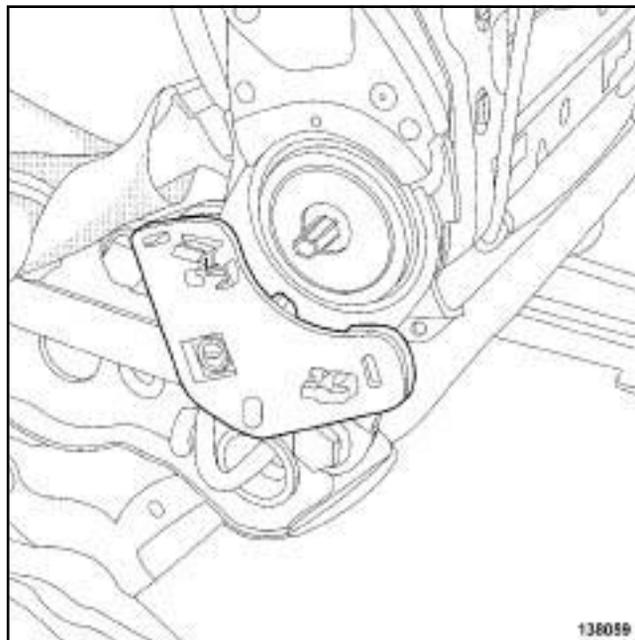


138059
138059

- Unclip the support of the rear seat access rotary switch using the tool (**Car. 1363**).


B95 or D95, and FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

II - OPERATION FOR REMOVAL OF PART CONCERNED

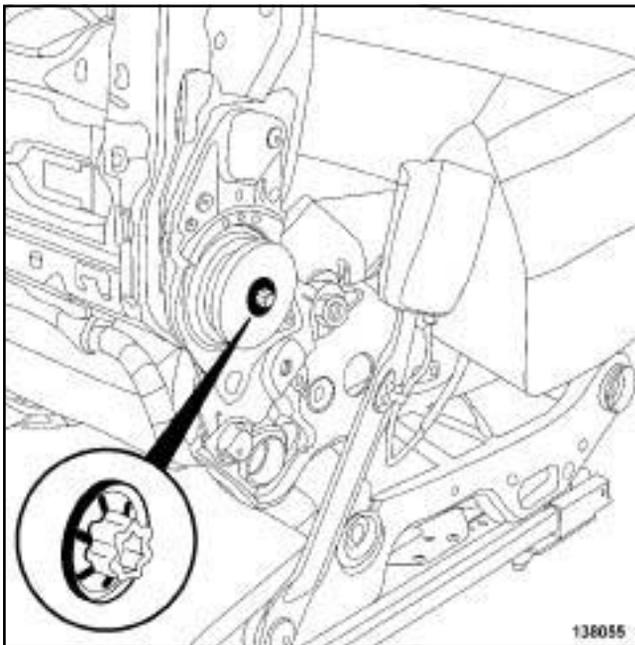


138055
138055

- Remove:
 - the "claw shaft" clip,
 - the mounting from the front seat base interior casing.

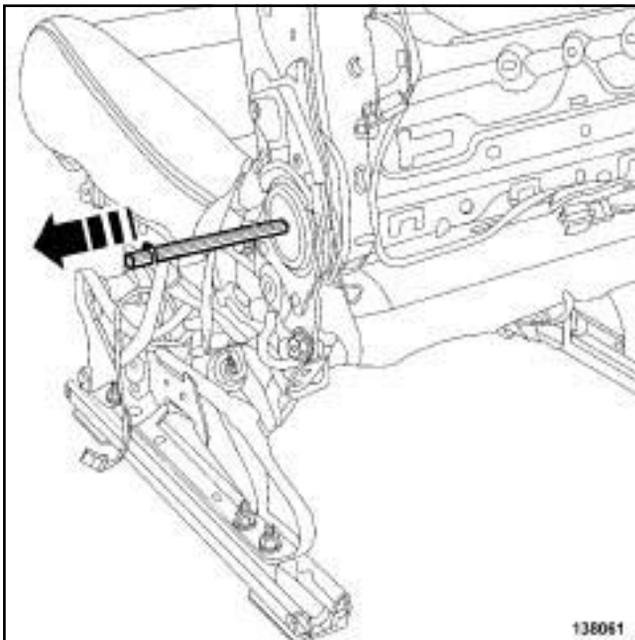


138061
138061

- Partially remove the front seatback angle shaft.

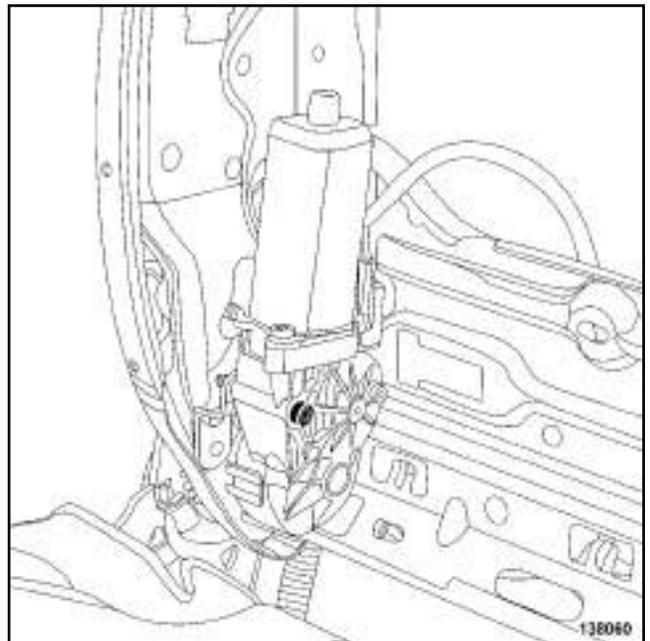

138060

- Remove the bolt from the front seatback angle motor.

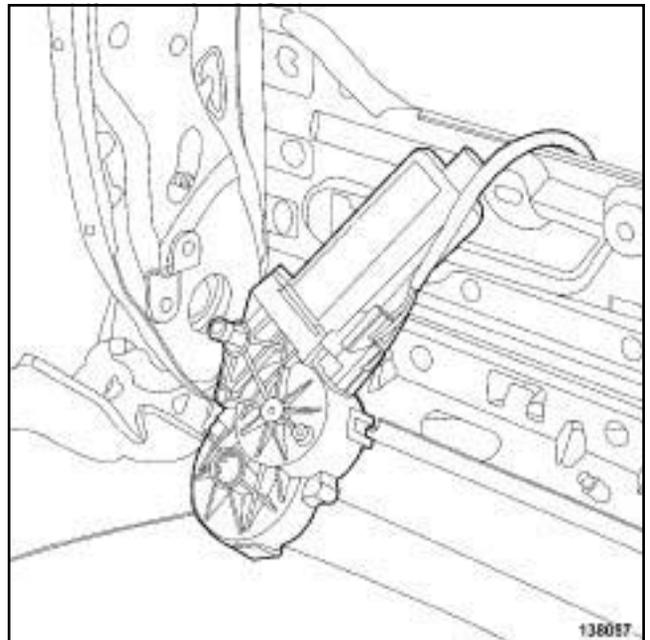

138057
138057

- Disconnect the connector of the front seatback angle motor.
- Remove the motor.


REFITTING

I - REFITTING PREPARATION OPERATION


- parts always to be replaced: Clip for front seatback tilt shaft (70,08,04,32)

B95 or D95, and FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

II - REFITTING OPERATION FOR PART CONCERNED

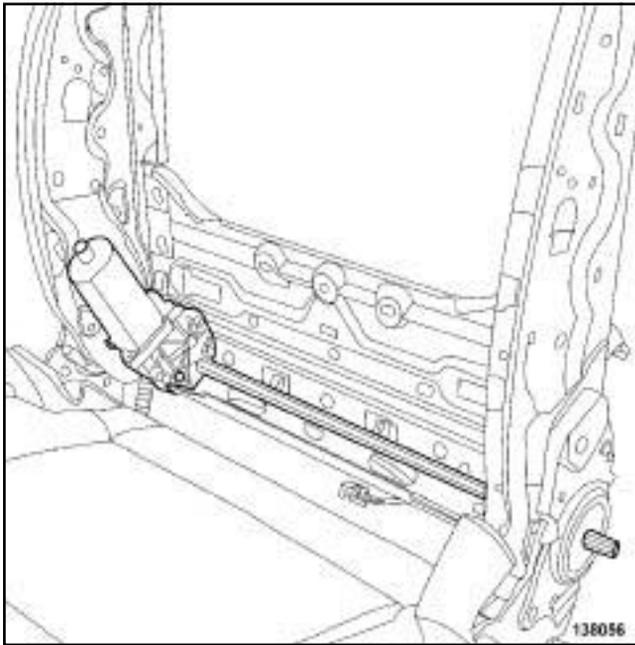

- Engage the front seatback angle shaft in the motor.
- Connect the connector of the front seatback angle motor.

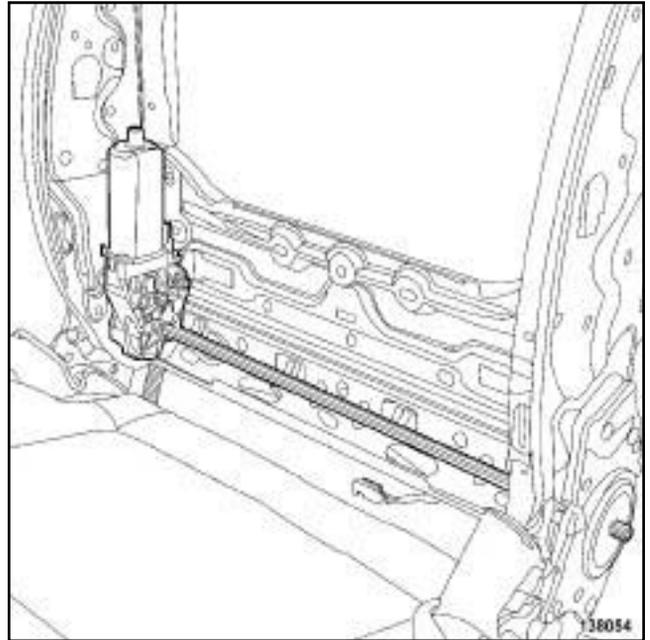

- Engage the shaft in the front seat angle mechanism.

Note:

The front seatback angle shaft has a foolproofing spline to prevent any risk of desynchronisation between the right-hand and left-hand front seatback angle mechanisms.

- Torque tighten the bolt of the front seatback angle motor (.....N.m)

III - FINAL OPERATION

- Refit the support of the front seat base lower casing.
- Refit the new "claw - shaft" clip.
- Clip on the support of the rear seats access rotary switch.
- Refit the rear seats access rotary switch.
- Connect the connector of the rear seat access rotary switch.
- Refit the front seat (chest-level) side airbag (see **Front (chest) side airbag: Removal - Refitting**)
- Refit the front seat "cover - foam" assembly (see **77A, Front seat trim, Front seatback trim: Removal - Refitting**, page 77A-4) .

B95 or D95, and FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

- Refit the front seat lumbar adjustment control (see **Front seat lumbar adjustment control: Removal - Refitting**).
- Refit the front seat base casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**).

D95

- Refit the rear seat access control (see **Rear seat access control: Removal - Refitting**).
- Refit:
- the front seat headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting**, page **79A-7**)
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**)
 - the front seat headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page **79A-3**)
- Connect the battery (see **Battery: Removal - Refitting**) (**80A, Battery**).

B95 or D95 or E95 or J95 or K95

Tightening torques


new front seat bolts	35 N.m
----------------------	--------

REMOVAL


I - REMOVAL PREPARATION OPERATION

- Adjust:
 - the steering wheel to the top position and push it in,
 - the front seatback angle to the vertical position,
 - the height of the front seat base to the low position.
- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove the front seat headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page 79A-3) .
- Protect the front door sill lining with masking tape.

II - OPERATION FOR REMOVAL OF PART CONCERNED

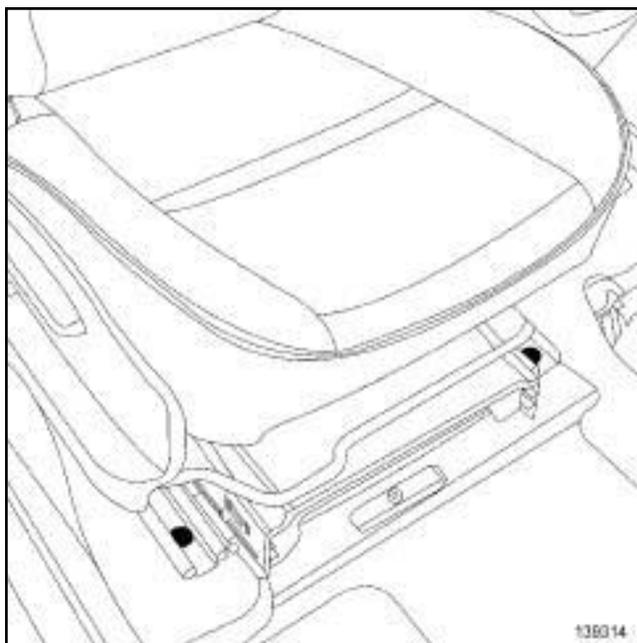


- Move the front seat back.
- Remove the front seat bolts on the body.

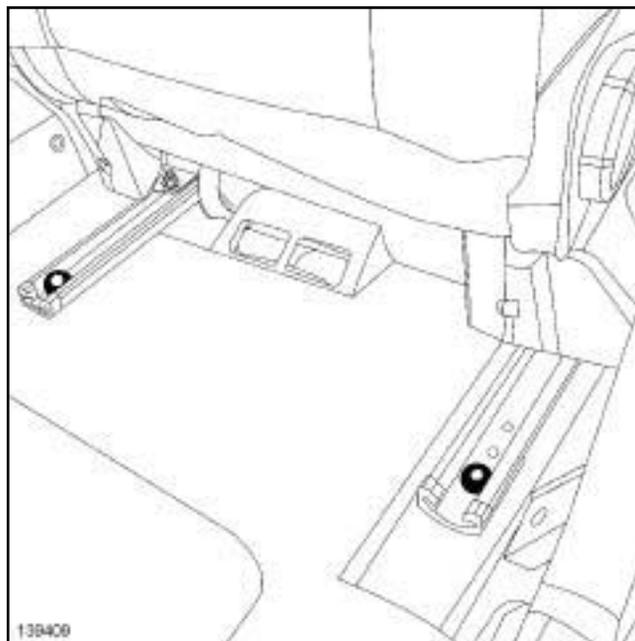


- Move the front seat forwards.
- Remove the front seat bolts on the body.

B95 or J95 or K95

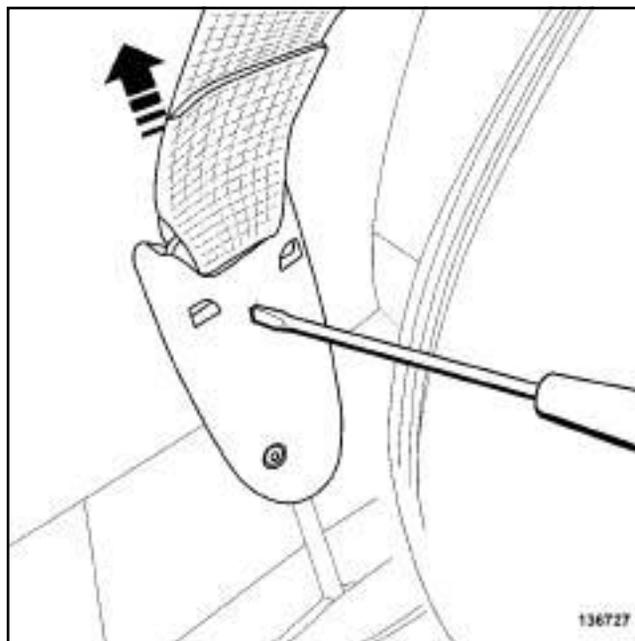

- Unclip the front seat belt using a flat-blade screwdriver.

B95 or D95 or E95 or J95 or K95

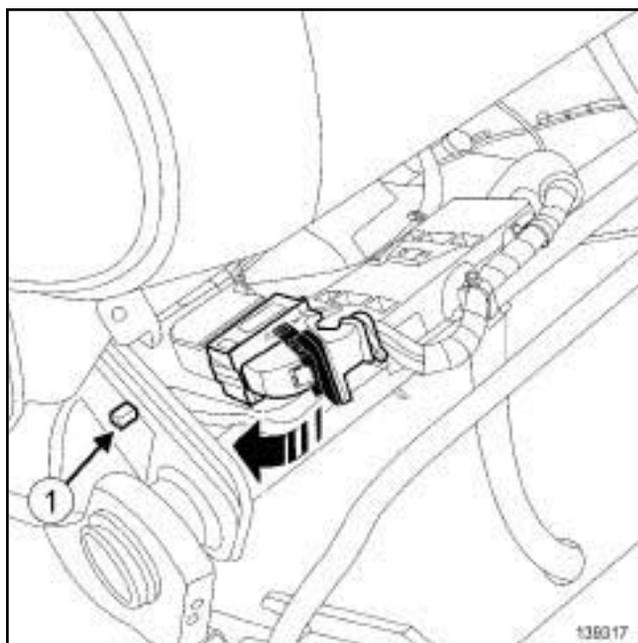

139317

- Tilt the front seat backwards.

Note:

Hold the wiring mounting to avoid breaking its indexing guide (1) , when disconnecting the connector from the front seat wiring.

- Disconnect the connector from the front seat wiring.
- Unclip the mounting from the front seat wiring.
- Remove the front seat.

REFITTING

I - REFITTING PREPARATION OPERATION

- parts always to be replaced: Front seat mounting on body (70,06,02,01).**

II - REFITTING OPERATION FOR PART CONCERNED

- Refit the front seat.
- Connect the front seat wiring connector.
- Clip on the front seat wiring mounting.
- Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

Driver's side



139316

139316

- Tighten in the order indicated (1) , (2) , (3) , (4) .

Passenger side



139316

139316

- Tighten in the order indicated (1) , (2) , (3) , (4) .
- Torque tighten the **new front seat bolts (35 N.m).**
- Carry out a function test.
- Refit the front headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page 79A-3) .

B95 or D95 or E95 or J95 or K95

B95 or J95 or K95

- Clip the front seat belt into the lap belt pretensioner.

III - FINAL OPERATION

- Adjust the following to their original positions:
 - the height and the depth of the steering wheel,
 - the front seatback angle,
 - the front seat base height.
- Remove the masking tape from the front door sill lining.

B95 or D95, and REAR BENCH SEAT


Tightening torques 	
bolts of the rear bench seatback	21 N.m
rear seat belt buckle bolt	21 N.m

REMOVAL

I - REMOVAL PREPARATION OPERATION

Lift:


- the single unit rear bench seat base,
- the rear section of the luggage compartment carpet.

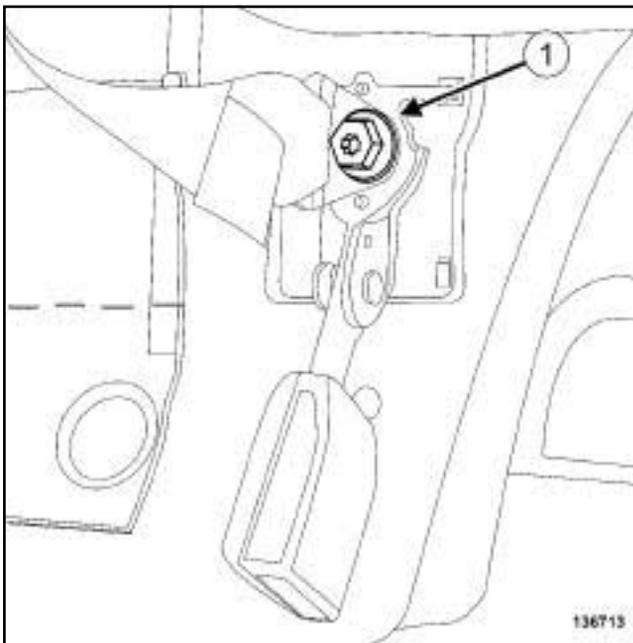

136713


- Remove the rear seat belt buckle bolt (1) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

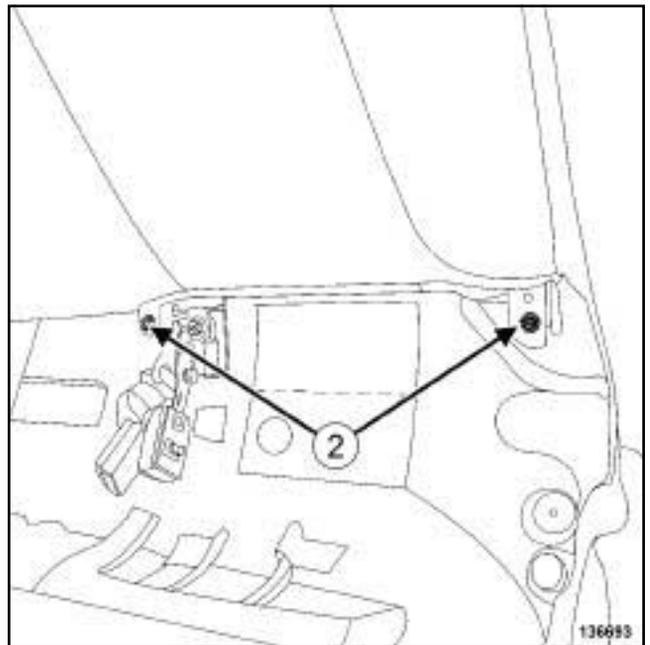

136693

- Remove the bolts (2) from the rear bench seatback.

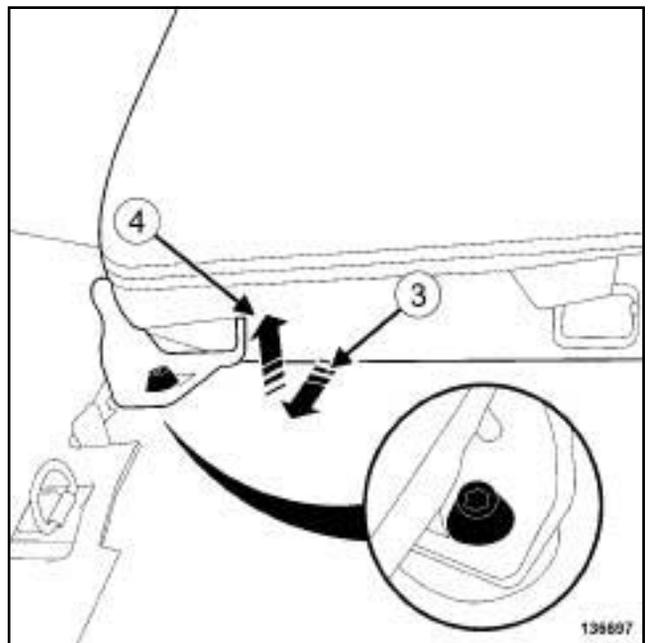

136697

- Remove the single unit rear bench seatback (3) then (4) (this operation requires two people).

B95 or D95, and REAR BENCH SEAT

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
 - the single unit rear bench seatback (this operation requires two people),
 - the bolts of the rear bench seatback.
- Torque tighten the **bolts of the rear bench seatback (21 N.m)**.

II - FINAL OPERATION

- Refit the rear seat belt buckle bolt.
- Torque tighten the **rear seat belt buckle bolt (21 N.m)**.
- Refit:
 - the single unit rear bench seat base,
 - the rear section of the luggage compartment carpet.

1/3 and 2/3 rear bench seatback: Removal - Refitting

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK


Tightening torques 	
bolts on the mounting brackets of the 1/3 and 2/3 rear bench seatback	21 N.m
rear seat belt buckle bolt	21 N.m

REMOVAL

I - OPERATION FOR REMOVAL OF PART CONCERNED

Note:


- the rear bench seat bases,
- the luggage compartment carpet.

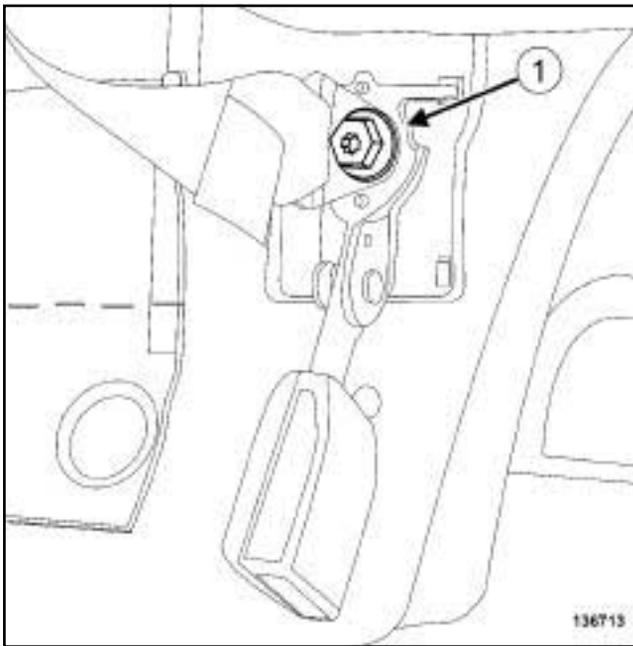


136713

- Remove the rear seat belt buckle bolt (1) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

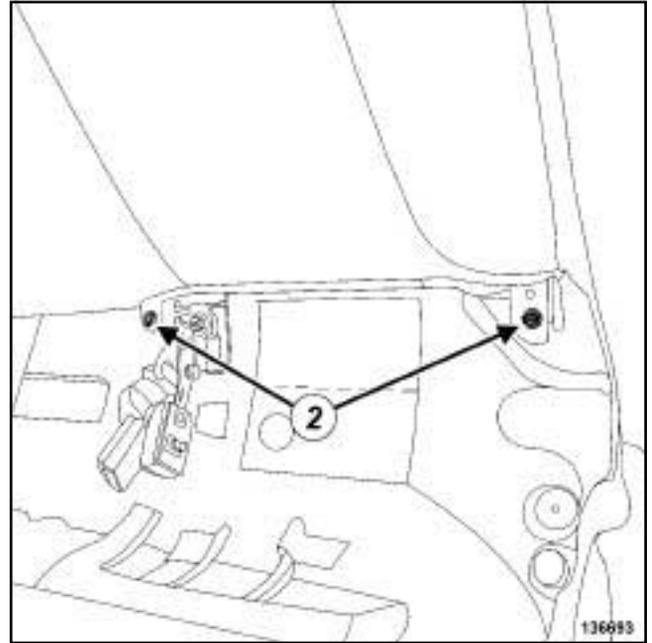

136693

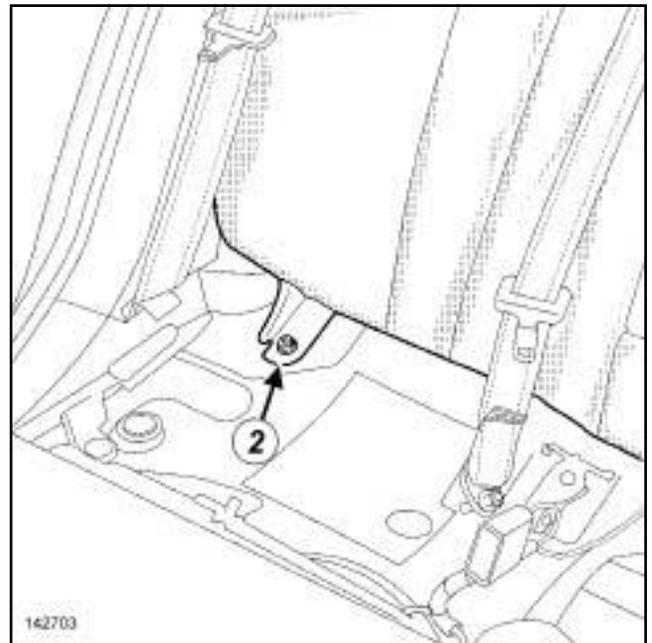


142703

- Remove the bolts (2) from the central and side mounting bracket of the rear bench seatback.


1/3 and 2/3 rear bench seatback: Removal - Refitting

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

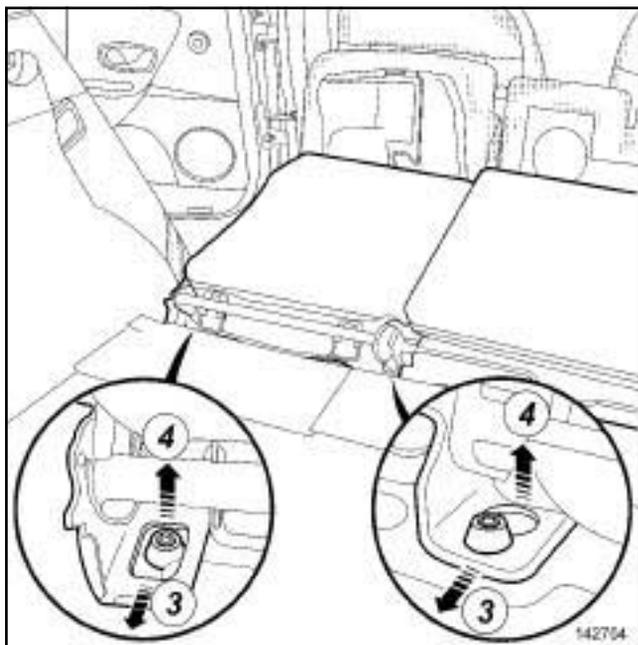


142704

- Release the rear bench seatback from the anti-release pins at (3) .
- Remove the rear bench seatback at (4) (this operation requires two people).

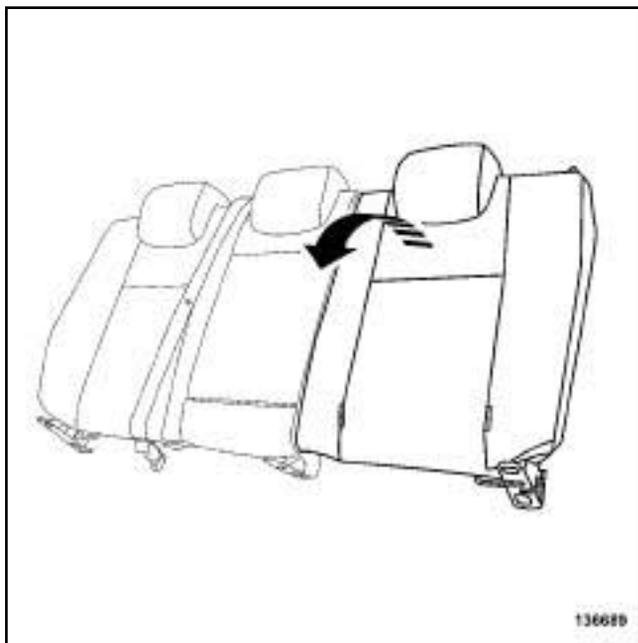

136689

- Tilt the 1/3 rear bench seatback.

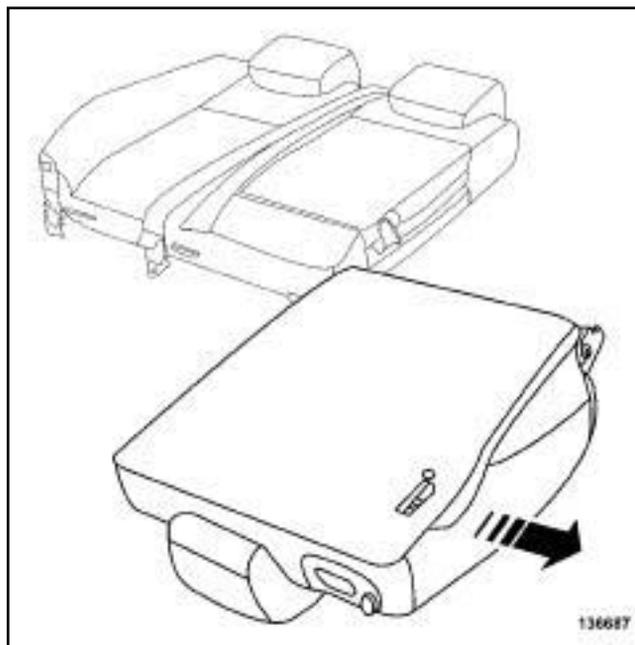

136687

- Separate the 1/3 and 2/3 rear bench seatbacks.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Assemble the 1/3 and 2/3 rear bench seatbacks.
- Reposition the 1/3 rear bench seatback.
- Refit:
 - the 1/3 and 2/3 rear bench seatback (this operation requires two people),
 - the bolts on the central mounting bracket then on the side mounting bracket of the 1/3 and 2/3 rear bench seatback.
- Tighten in order the bolt on the central mounting bracket then the bolts on the side mounting brackets.
- Torque tighten the **bolts on the mounting brackets of the 1/3 and 2/3 rear bench seatback (21 N.m)**.

II - FINAL OPERATION

- Refit the rear seat belt buckle bolt.
- Torque tighten the **rear seat belt buckle bolt (21 N.m)**.
- Refit:
 - the rear bench seat bases,
 - the luggage compartment carpet.

REAR SEAT FRAMES AND MECHANISMS

1/3 and 2/3 rear bench seatback: Removal - Refitting

76A

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK
or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

|

REAR SEAT FRAMES AND MECHANISMS


Single unit rear bench seat: Removal - Refitting

76A

B95 or D95, and REAR BENCH SEAT

REMOVAL


I - REMOVAL PREPARATION OPERATION

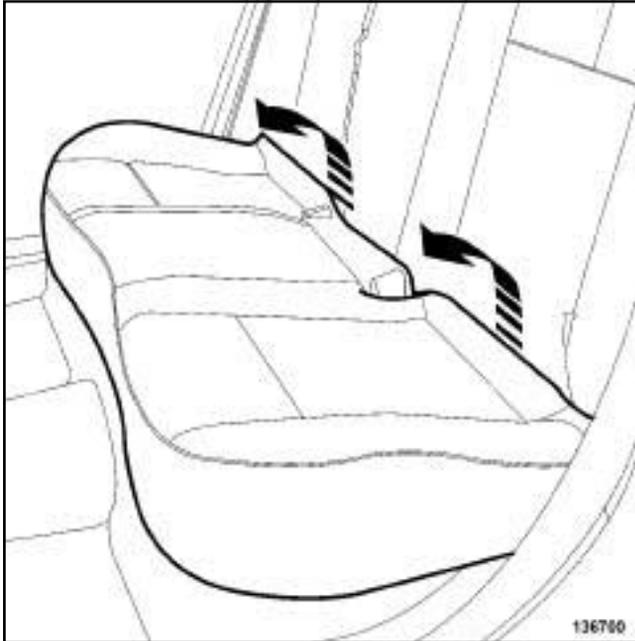

136700

- Tilt the single unit rear bench seat base.

II - OPERATION FOR REMOVAL OF PART CONCERNED

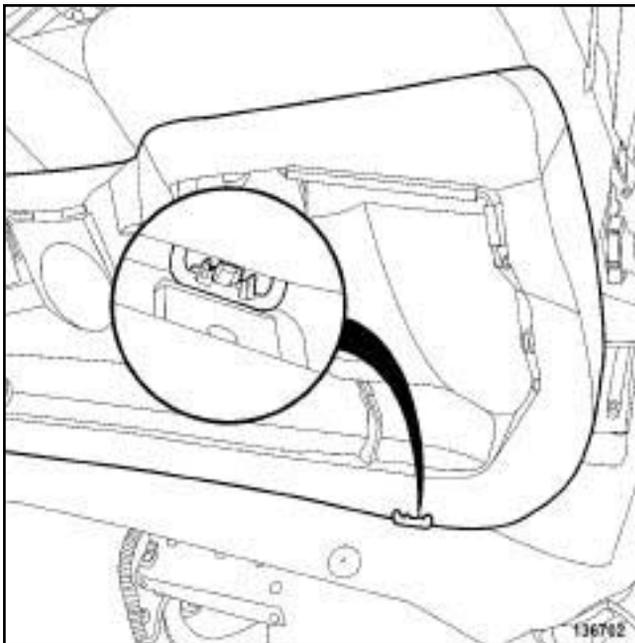

136702

- Remove the single unit rear bench seat base.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the single unit rear bench seat base.

II - FINAL OPERATION

- Pull down the single unit rear bench seat seat base.

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Remove the luggage compartment carpet.

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

- Remove the rear central armrest (see **79A, Seat components, Rear centre arm rest: Removal - Refitting**, page **79A-8**) .

- Remove:

- the 1/3 and 2/3 rear bench seat bases (see **1/3 and 2/3 rear bench seat: Removal - Refitting**) ,
- the 1/3 and 2/3 rear bench seatbacks (see **76A, Rear seat frames and mechanisms, 1/3 and 2/3 rear bench seatback: Removal - Refitting**, page **76A-3**) ,
- the rear bench seat headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page **79A-13**) ,
- the « cover - foam » assembly of the 1/3 and 2/3 rear bench seatback (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting**, page **78A-4**) ,
- the rear bench seat headrest guides (see **79A, Seat components, Rear seat headrest guide: Removal - Refitting**, page **79A-9**)
- the locking mechanism of the rear bench seatback (see **76A, Rear seat frames and mechanisms, Rear bench seat mechanism: Removal - Refitting**, page **76A-8**) ,
- the rear central seatbelt (see **Rear centre seat belt: Removal - Refitting**) (88C, Airbag and pretensioners).

II - REFITTING OPERATION FOR PART CONCERNED

- Remove the 1/3 and 2/3 rear bench seatback frame.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the 1/3 and 2/3 rear bench seatback frame.

II - FINAL OPERATION

- Refit:

- the rear central seatbelt (see **Rear centre seat belt: Removal - Refitting**) (88C, Airbag and pretensioners),
- the locking mechanism of the rear bench seatback (see **76A, Rear seat frames and mechanisms, Rear bench seat mechanism: Removal - Refitting**, page **76A-8**) ,
- the rear bench seat headrest guides (see **79A, Seat components, Rear seat headrest guide: Removal - Refitting**, page **79A-9**) ,
- the « cover - foam » assembly of the 1/3 and 2/3 rear bench seatback (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting**, page **78A-4**) ,
- the rear bench seat headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page **79A-13**) ,
- the 1/3 and 2/3 rear bench seatbacks (see **76A, Rear seat frames and mechanisms, 1/3 and 2/3 rear bench seatback: Removal - Refitting**, page **76A-3**) ,
- the 1/3 and 2/3 rear bench seat bases (see **1/3 and 2/3 rear bench seat: Removal - Refitting**) .

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

- Refit the rear central armrest (see **79A, Seat components, Rear centre arm rest: Removal - Refitting**, page **79A-8**) .

- Refit the luggage compartment carpet.

B95 or D95 or K95, and REAR BENCH SEAT or REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

Tightening torques 	
bolts of the rear bench seatback locking mechanism	18 N.m

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Remove:
 - the rear bench seat headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page **79A-13**),
 - the rear bench seat headrest guides (see **79A, Seat components, Rear seat headrest guide: Removal - Refitting**, page **79A-9**).


REAR BENCH FUNCTION

- Remove:
 - the rear bench seatback (see **76A, Rear seat frames and mechanisms, Single unit rear bench seatback: Removal - Refitting**, page **76A-1**),
 - the cover of the rear bench seatback (see **78A, Rear seat trim, Rear bench seat single unit seatback trim: Removal - Refitting**, page **78A-11**).

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

- Remove:
 - the rear bench seatback (see **76A, Rear seat frames and mechanisms, 1/3 and 2/3 rear bench seatback: Removal - Refitting**, page **76A-3**),
 - the rear centre armrest (see **79A, Seat components, Rear centre arm rest: Removal - Refitting**, page **79A-8**),
 - the cover of the rear bench seatback (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting**, page **78A-4**).

II - OPERATION FOR REMOVAL OF PART CONCERNED

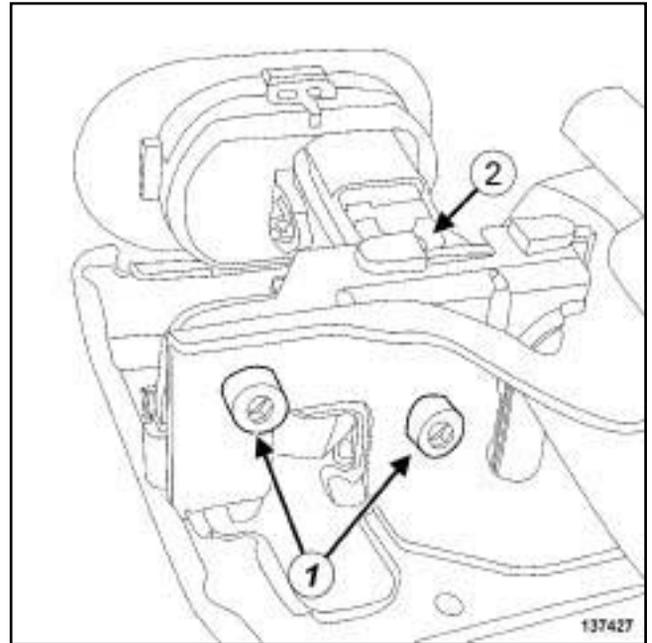

137427

- Remove:
 - the bolts (**1**) of the rear bench seatback locking mechanism,
 - the rear bench seatback locking mechanism. (**2**)

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
 - the rear bench seatback locking mechanism (**2**),
 - the bolts (**1**) of the rear bench seatback locking mechanism.
- Torque tighten the **bolts of the rear bench seatback locking mechanism (18 N.m) (1)**.

II - FINAL OPERATION

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

- Remove:
 - the cover of the rear bench seatback (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting**, page **78A-4**),

REAR SEAT FRAMES AND MECHANISMS

Rear bench seat mechanism: Removal - Refitting

76A

B95 or D95 or K95, and REAR BENCH SEAT or REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

- the rear centre armrest (see **79A, Seat components, Rear centre arm rest: Removal - Refitting**, page **79A-8**),
- the rear bench seatback (see **76A, Rear seat frames and mechanisms, 1/3 and 2/3 rear bench seatback: Removal - Refitting**, page **76A-3**).

Refit:

- the rear bench seat headrest guides (see **79A, Seat components, Rear seat headrest guide: Removal - Refitting**, page **79A-9**),
 - the rear bench seat headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page **79A-13**).
- Carry out a function test.

B95 or D95, and REAR BENCH SEAT

REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

Remove:

- the rear headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page **79A-13**),
- the single unit rear bench seatback (see **76A, Rear seat frames and mechanisms, Single unit rear bench seatback: Removal - Refitting**, page **76A-1**),
- the rear bench seat single unit seatback trim (see **78A, Rear seat trim, Rear bench seat single unit seatback trim: Removal - Refitting**, page **78A-11**),
- the rear bench seat headrest guides (see **79A, Seat components, Rear seat headrest guide: Removal - Refitting**, page **79A-9**),
- the rear central seatbelt (see **Rear centre seat belt: Removal - Refitting**) (88C, Airbags and pretensioners),
- the rear bench seat mechanisms (see **76A, Rear seat frames and mechanisms, Rear bench seat mechanism: Removal - Refitting**, page **76A-8**),
- the single unit rear bench seatback frame.

REFITTING

REFITTING OPERATION FOR PART CONCERNED

Refit:

- the single unit rear bench seatback frame.
- the rear bench seat mechanisms (see **76A, Rear seat frames and mechanisms, Rear bench seat mechanism: Removal - Refitting**, page **76A-8**),
- the rear central seatbelt (see **Rear centre seat belt: Removal - Refitting**) (88C, Airbags and pretensioners),
- the rear bench seat headrest guides (see **79A, Seat components, Rear seat headrest guide: Removal - Refitting**, page **79A-9**),
- the rear bench seat single unit seatback trim (see **78A, Rear seat trim, Rear bench seat single unit seatback trim: Removal - Refitting**, page **78A-11**),

- the single unit rear bench seatback (see **76A, Rear seat frames and mechanisms, Single unit rear bench seatback: Removal - Refitting**, page **76A-1**),
- the rear headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page **79A-13**),

Second row complete rear seat: Removal - Refitting

J95, and LONG CHASSIS, and 2 SEATS 3RD ROW


Tightening torques 	
mountings of the second row rear seat on the body	44 N.m
anti-release bolts of the second row rear seat	44 N.m
lower nut of the second row rear seat belt strap	44 N.m

REMOVAL

I - REMOVAL PREPARATION OPERATION


Remove:

- the rear end panel lining (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60) ,
- the rear wheel arch trim (see 71A, **Body internal trim, Rear wheel arch lining: Removal - Refitting**, page 71A-33) .

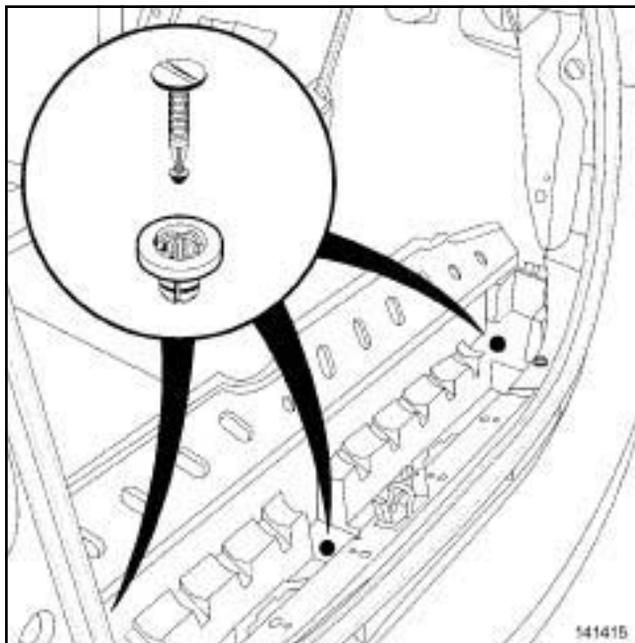


141415

Remove the rear floor rear trim.

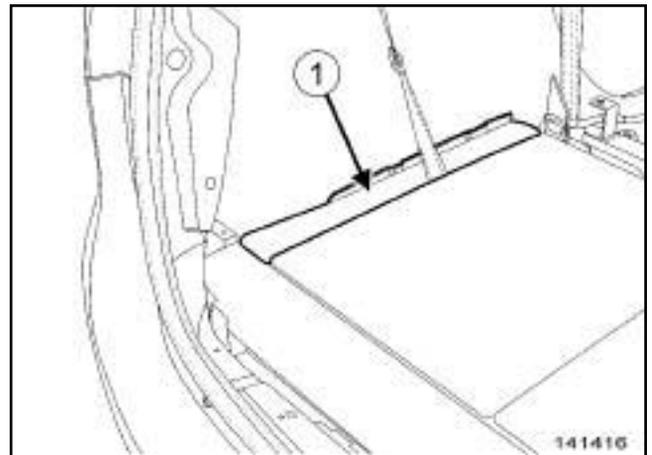


141416

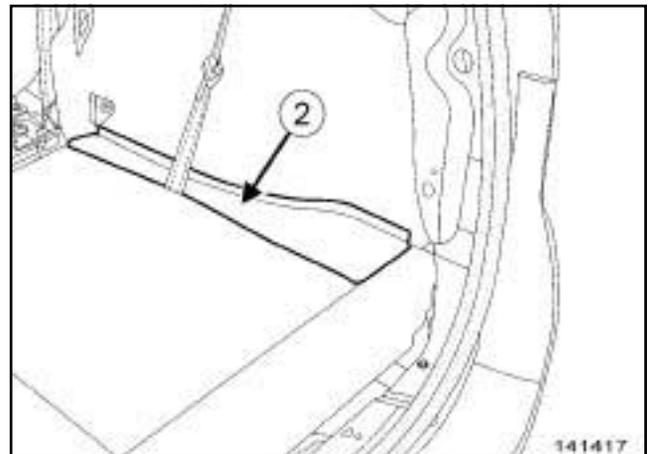


141417

Remove the side trims (1) and (2) of the rear floor.

J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

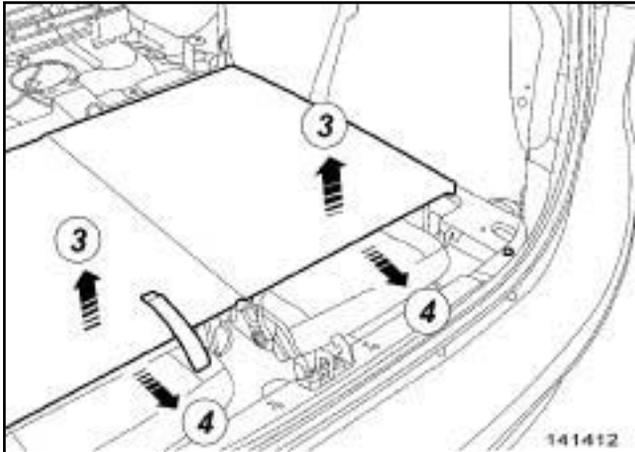


141412

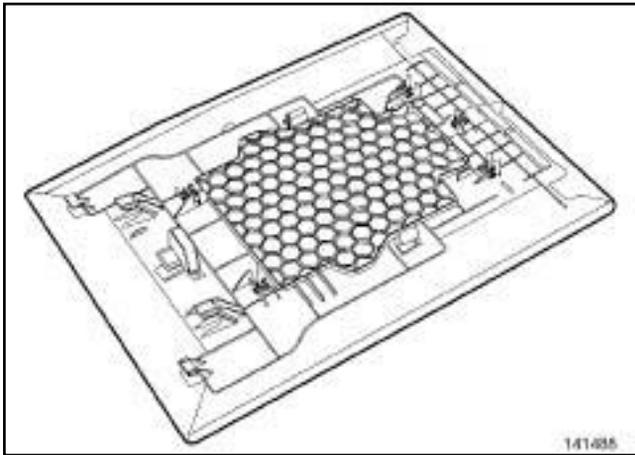

141488

- Unclip the second row rear seatback casings at (3) then at (4) .

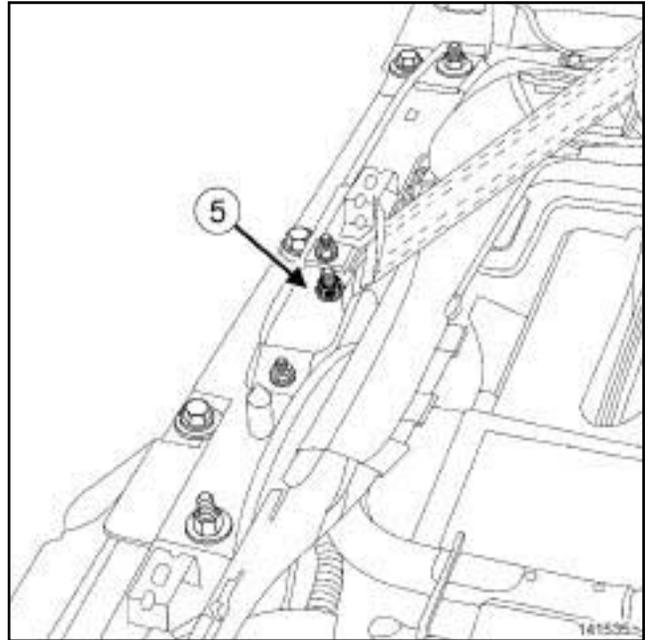

141535


- Remove the lower nuts (5) from the seat belt strap of the second row rear seats.

II - OPERATION FOR REMOVAL OF PART CONCERNED

- Unlock the second row rear seats to position them in the open position.

Second row complete rear seat: Removal - Refitting

J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

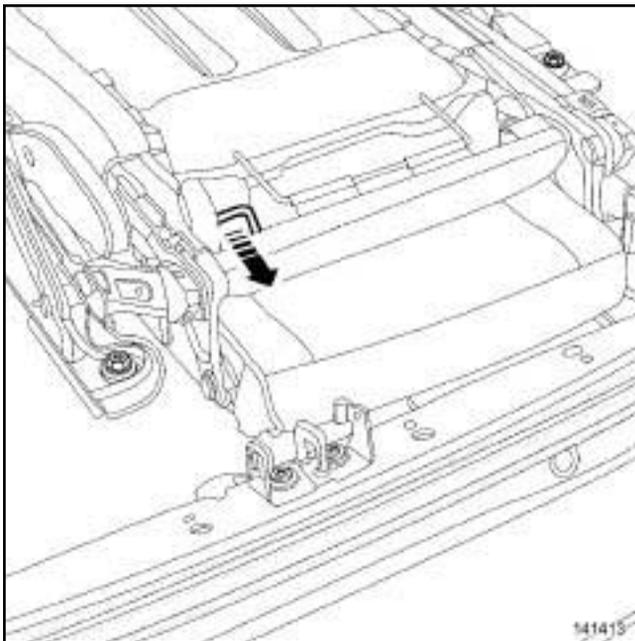


141413



Note:

If the second row rear seat release strap is faulty, pull directly on the linkage to unlock the second row rear seat.

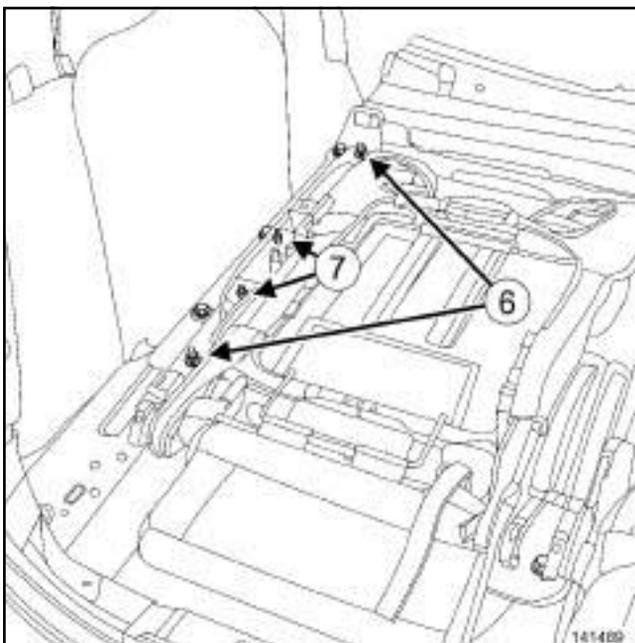


141489

□ Remove:

- the cross member nuts (6) of the second row rear seat,
- the nuts (7) of the second row rear seat on the cross member,

- the anti-release bolts of the second row rear seat.

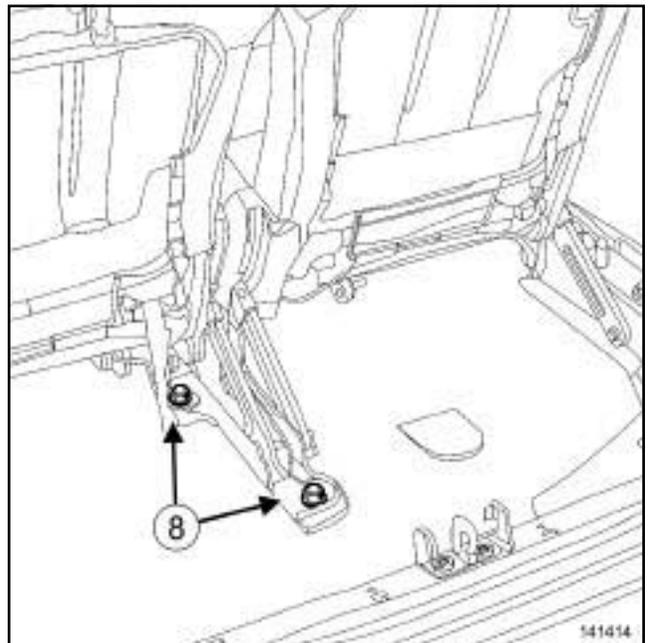

141414

□ Remove:

- the bolts (8) of the second row rear seat,
- the second row rear seat module.

Note:


The second row rear seat module weighs approximately 40 Kg.

A second person is required to remove the second row rear seat module.

J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

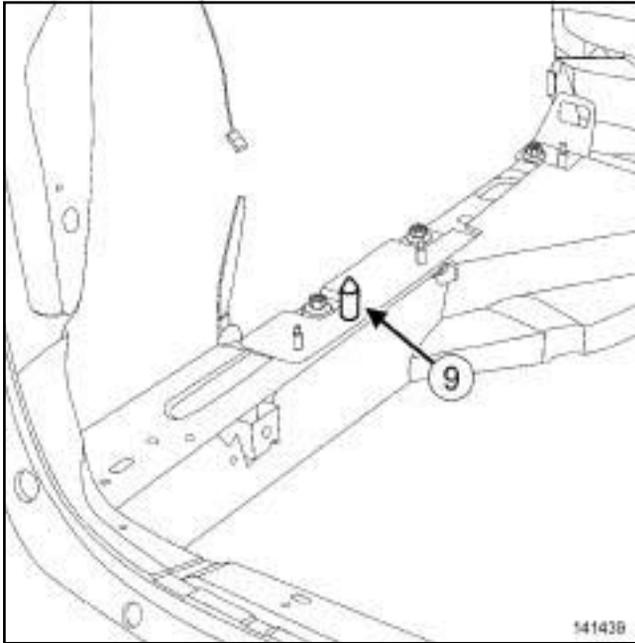

141439


- Position the second row rear seat module on the side supports of the second row rear seat with the help of a second person.

Note:

The module of the second row rear seat is centred using the indexing guide (9) .

- Finger tighten all the attachments.

J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

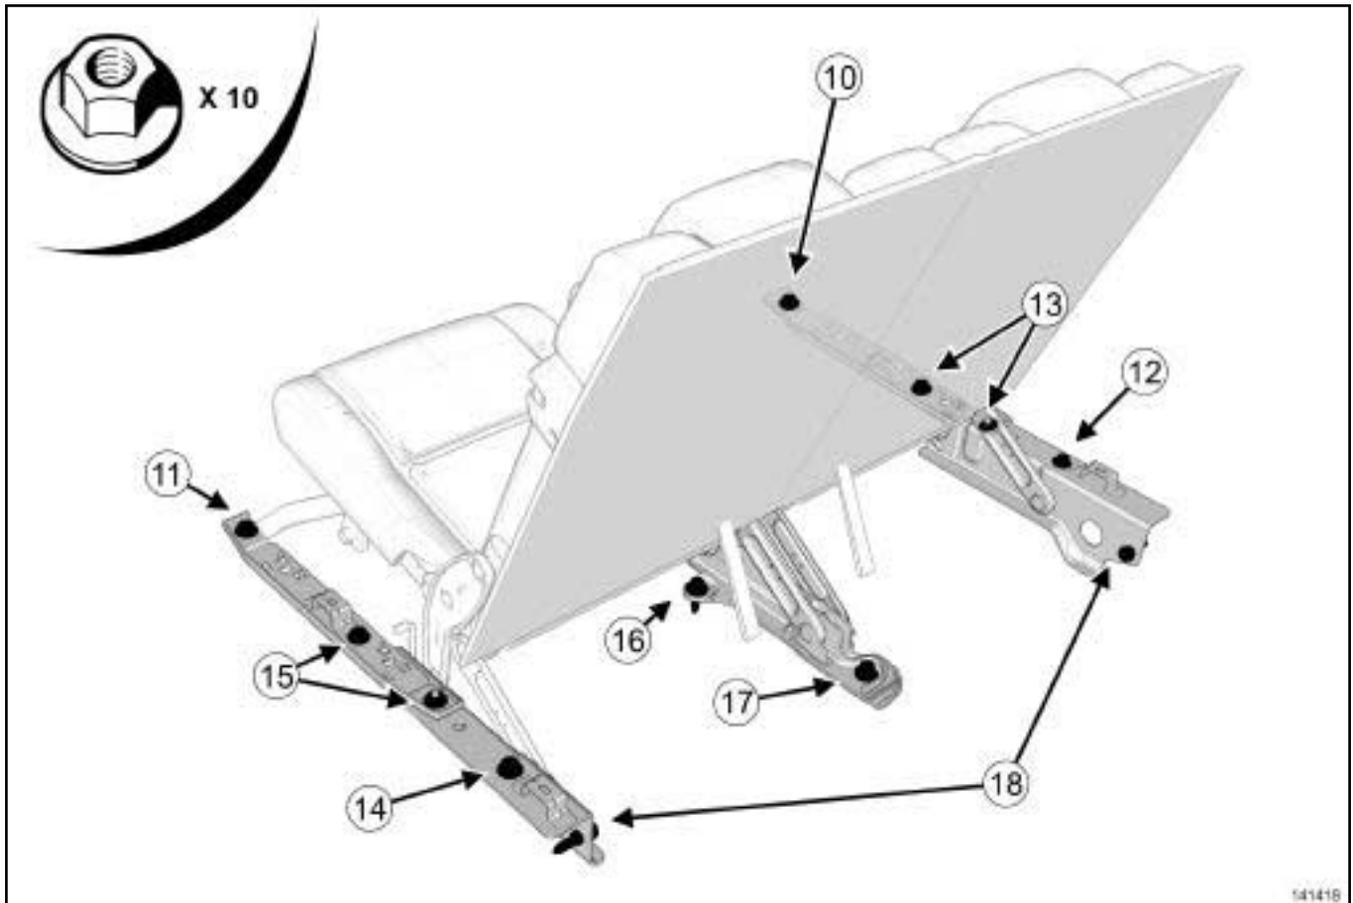

541418

141418

Tighten the following in the order indicated:

- the mountings of the second row rear seats on the body (10), (11), (12), (13), (14), (15), (16), (17),
- the anti-release bolts of the second row rear seat (18).

Tighten to torque:

- the **mountings of the second row rear seat on the body (44 N.m)**,
- the **anti-release bolts of the second row rear seat (44 N.m)**.

Carry out a function test on the locking and unlocking mechanisms of the second row rear seats.

II - FINAL OPERATION

Torque tighten the **lower nut of the second row rear seat belt strap (44 N.m)**.

Clip on the seatback casings.

Refit:

- the rear floor side trims (see 71A, **Body internal trim, Floor carpet: Removal - Refitting**, page 71A-1),

- the rear floor rear trim (see 71A, **Body internal trim, Floor carpet: Removal - Refitting**, page 71A-1),

- the rear wheel arch trims (see 71A, **Body internal trim, Rear wheel arch lining: Removal - Refitting**, page 71A-33),

- the rear end panel trim (see 71A, **Body internal trim, Rear end panel lining: Removal - Refitting**, page 71A-60).

REAR SEAT FRAMES AND MECHANISMS

Second row rear seat frame: Removal - Refitting

76A

J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

Tightening torques 	
front side support of the second row rear seat	44 N.m
rear side support of the second row rear seat	44 N.m
bolts of the second row rear seat on the cross member	19 N.m

REMOVAL

I - REMOVAL PREPARATION OPERATION


Remove:

- the second row rear seat module (see **76A, Rear seat frames and mechanisms, Second row complete rear seat: Removal - Refitting, page 76A-11**) ,

- the second row rear seat trim (see **78A, Rear seat trim, Second row rear seat trim: Removal - Refitting, page 78A-16**) .


Position the second row rear seats in the unfolded position.

II - OPERATION FOR REMOVAL OF PART CONCERNED

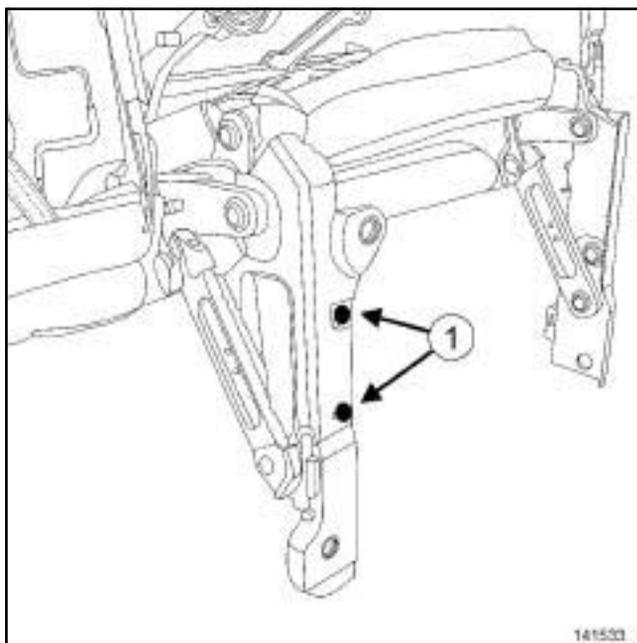


141533

Remove the rivets (1) on the second row rear seat frame.

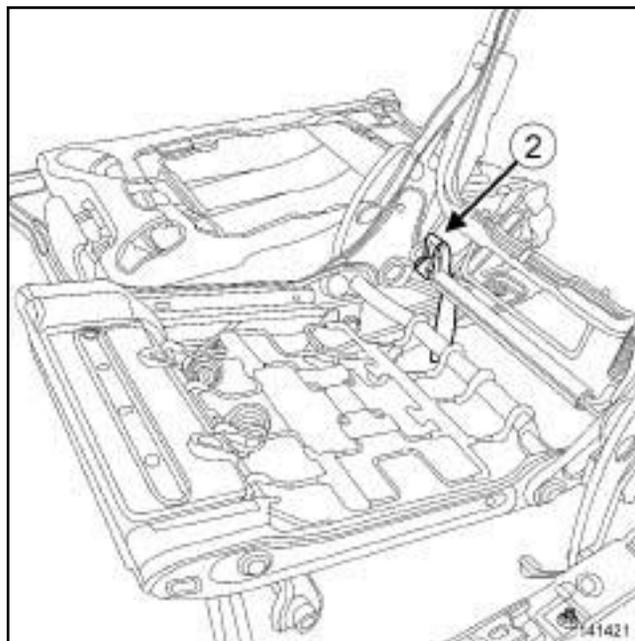

141421

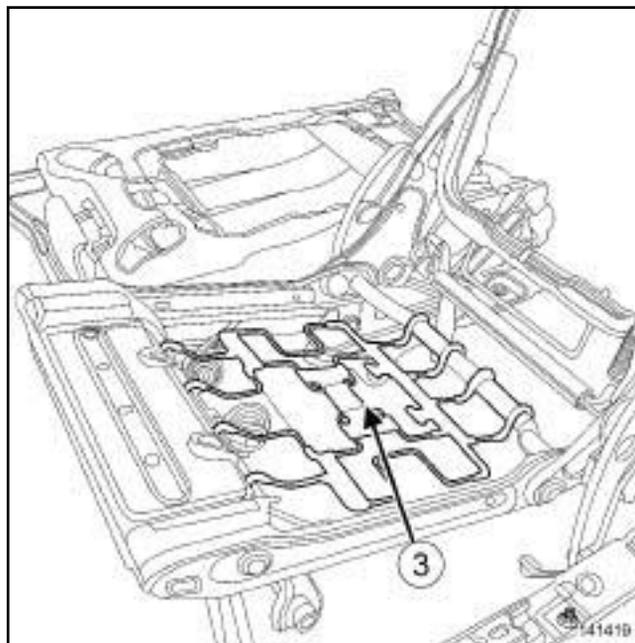

141419

Remove:


- the seatback release strap (2) ,
- the seat base pad (3) .

REAR SEAT FRAMES AND MECHANISMS


Second row rear seat frame: Removal - Refitting

76A


J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

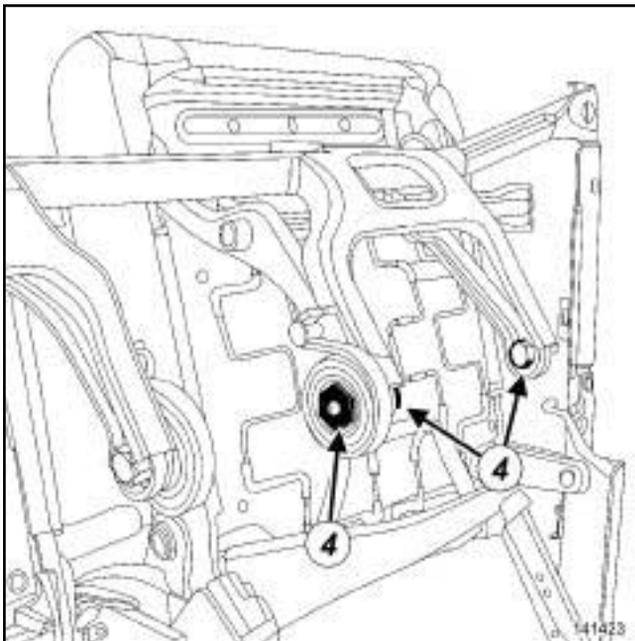

141423

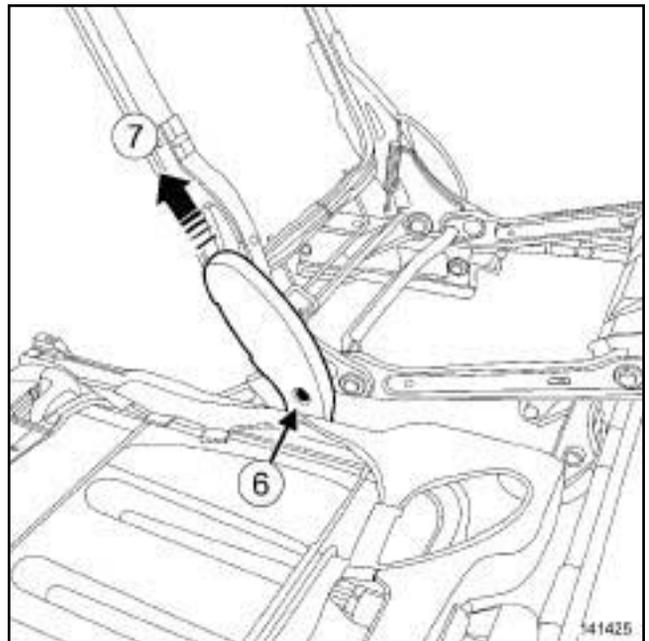

141425

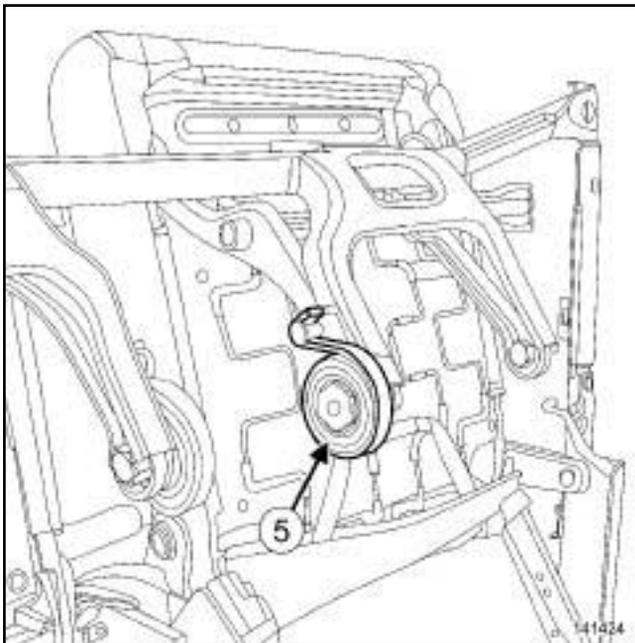

141424

- Remove the bolts (4) from the second row rear seat on the cross member.

Note:

The compensation spring is no longer tensioned when the second row rear seats are in the unfolded position.

- Remove the compensation spring (5) .



141426

141426


- Remove:
 - the bolt (6) ,
 - the second row rear seat base casing at (7) .

REAR SEAT FRAMES AND MECHANISMS

Second row rear seat frame: Removal - Refitting

76A


J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

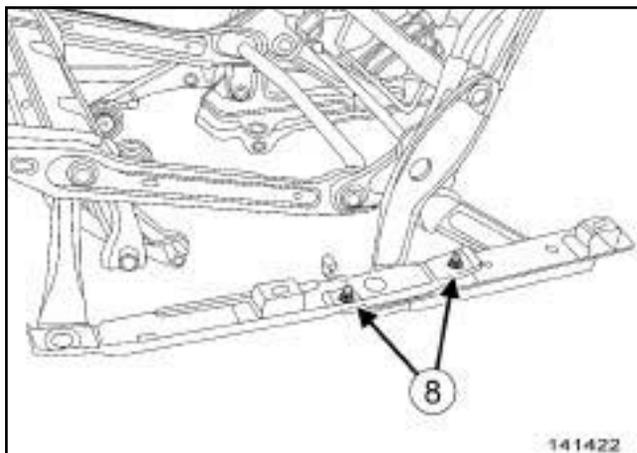

141422

❑ Remove:

- the nuts (8) from the second row rear seat on the cross member,
- the second row rear seat.

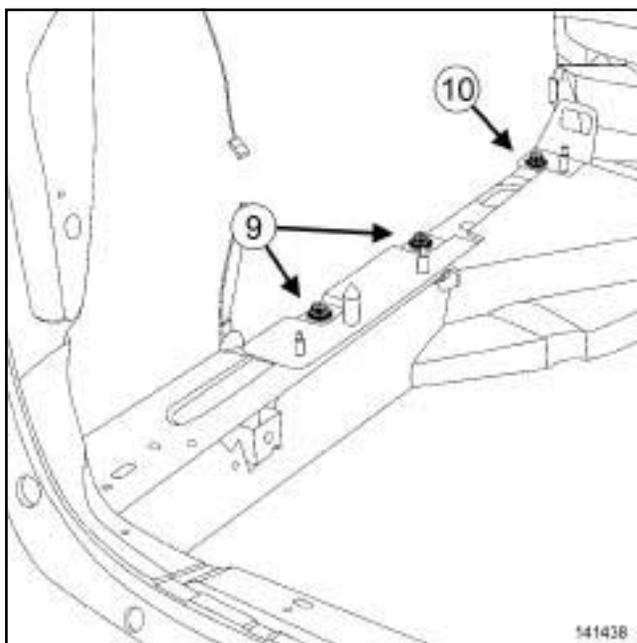

541438

❑ Remove:

- the rear side support (9) of the second row rear seat.
- the front side support (10) of the second row rear seat.

REFITTING

I - REFITTING PREPARATION OPERATION

- ❑ Always replace the rivets on the second row rear seat frame.

II - REFITTING OPERATION FOR PART CONCERNED

❑ Refit:

- the front side support (10) of the second row rear seat,
- the rear side support (9) of the second row rear seat.

❑ Tighten to torque:

- the front side support of the second row rear seat (44 N.m),
- the rear side support of the second row rear seat (44 N.m).

❑ Refit:

- the second row rear seat base casing (7),
- the bolt (6) of the second row rear seat base casing,
- the second row rear seat,
- the nuts (8) of the second row rear seat on the cross member,
- new rivets on the second row rear seat frame.

❑ Position the rear seat in the unfolded position.

❑ Refit the compensation spring (5).

❑ Torque tighten the bolts of the second row rear seat on the cross member (19 N.m) (4).

❑ Refit:

- the seat base pad (3),
- the seatback release strap (2).

III - FINAL OPERATION

❑ Refit:

- the second row rear seat trim (see 78A, Rear seat trim, Second row rear seat trim: Removal - Refitting, page 78A-16),
- the second row rear seat module (see 76A, Rear seat frames and mechanisms, Second row complete rear seat: Removal - Refitting, page 76A-11).

FRONT SEAT TRIM

Front seat base trim: Removal - Refitting

77A

B95 or D95

Essential special tooling


Car. 1363 Set of trim removal levers.

REMOVAL


I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - Remove the front seat headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page **79A-3**)
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**),
 - the front seat base casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**).


II - OPERATION FOR REMOVAL OF PART CONCERNED

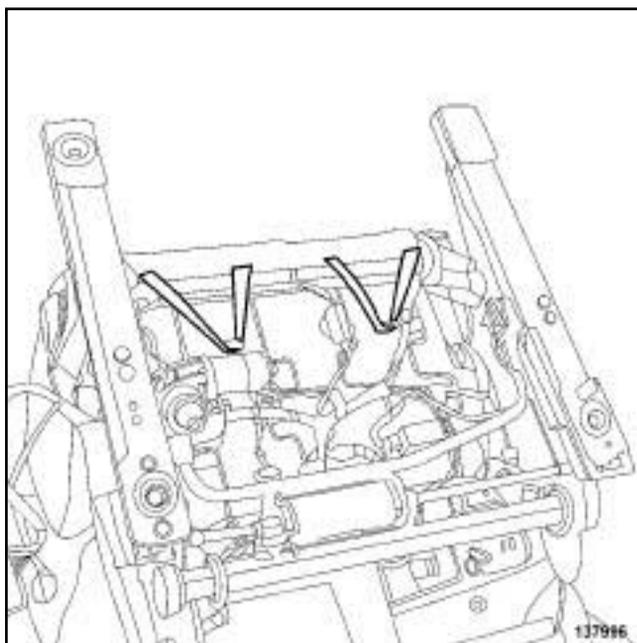

- Remove the elastic straps from the front seatback cover.

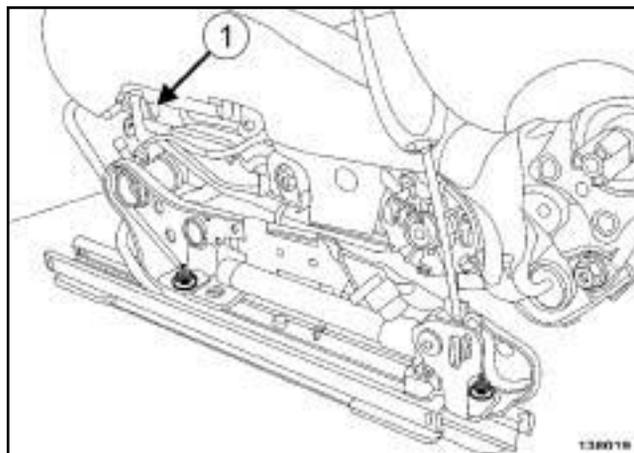

138019

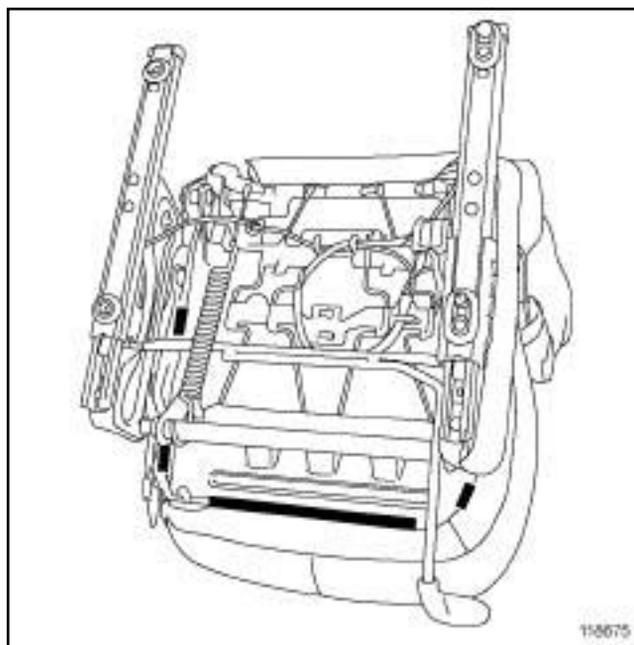

118675

- Remove the retaining section.


FRONT SEAT TRIM

Front seat base trim: Removal - Refitting


77A

B95 or D95


FRONT SEAT WITH HEATING

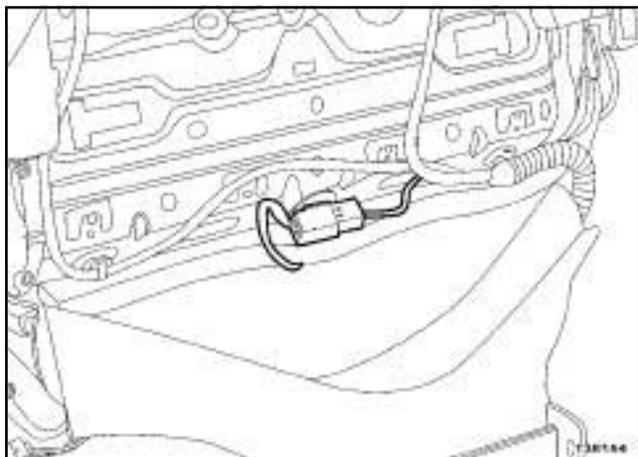

- Disconnect the heated pad connector.

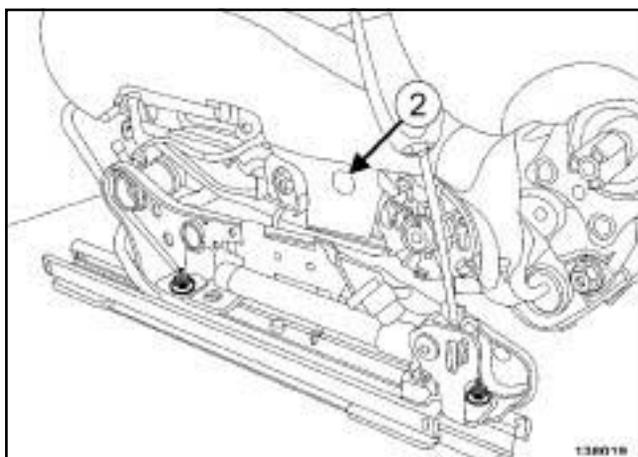

- Remove the clip using the tool (**Car. 1363**) at 2.
- Remove the retaining sections.
- Remove the "foam - cover" assembly of the front seat base.

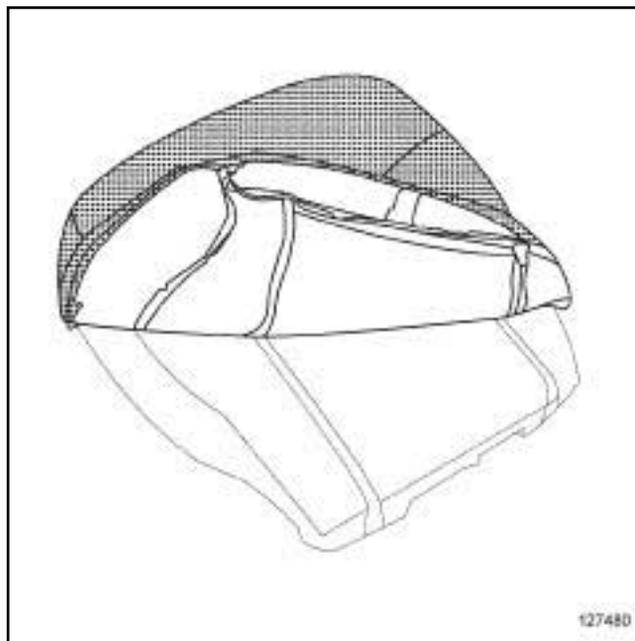

- Remove the front seat base cover.
-

WARNING

When separating the "foam - cover", hold the velcro strips.

REFITTING

I - REFITTING PREPARATION OPERATION

-

Note:

Before refitting the front seat base trim, check that the velcro strips are correctly attached to the foam.


FRONT SEAT TRIM

Front seat base trim: Removal - Refitting

77A

B95 or D95

II - REFITTING OPERATION FOR PART CONCERNED

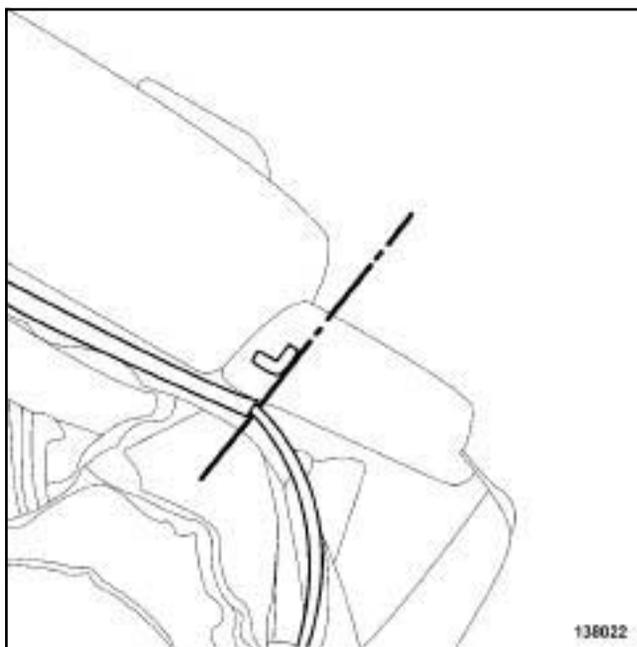

138022

- Refit:
 - the front seat base cover,
 - the "foam - cover" assembly of the front seat base,
 - the retaining sections
 - Align the velcro strips.

FRONT SEAT WITH HEATING

- Connect the heated pad connector.

- Refit:
 - the clips,
 - the elastic strap.

III - FINAL OPERATION

- Refit:
 - the seat lower casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting, page 77A-9**),
 - the entire front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting, page 75A-28**).
- Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).

B95 or D95

Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - the front seat headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page 79A-3) ,
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page 75A-28) ,
 - the front seat base casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page 77A-9) ,
 - the front seat headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting**, page 79A-7) .


FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 04 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06 or FRONT SEAT TYPE 07

- Remove the front seat lumbar adjustment control (see **Front seat lumbar adjustment control: Removal - Refitting**) .

D95


- Remove the rear seat access control (see **Rear seat access mechanisms: Removal - Refitting**) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

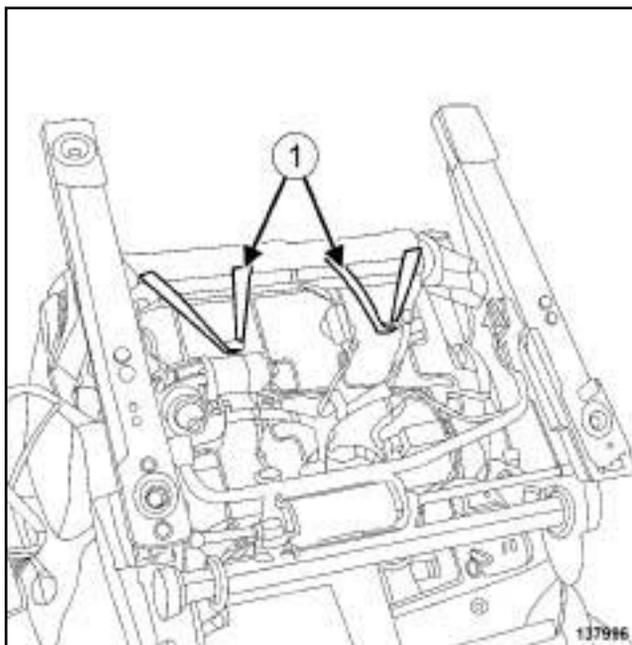

137996

- Remove the elastic securing straps of the front seatback cover (1) .

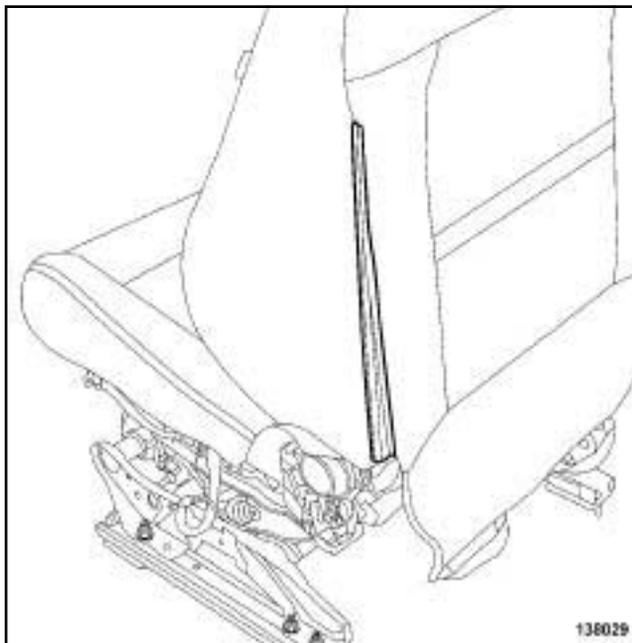

138029


- Unclip the side retaining sections of the front seatback cover.

FRONT SEAT TRIM


Front seatback trim: Removal - Refitting

77A

B95 or D95

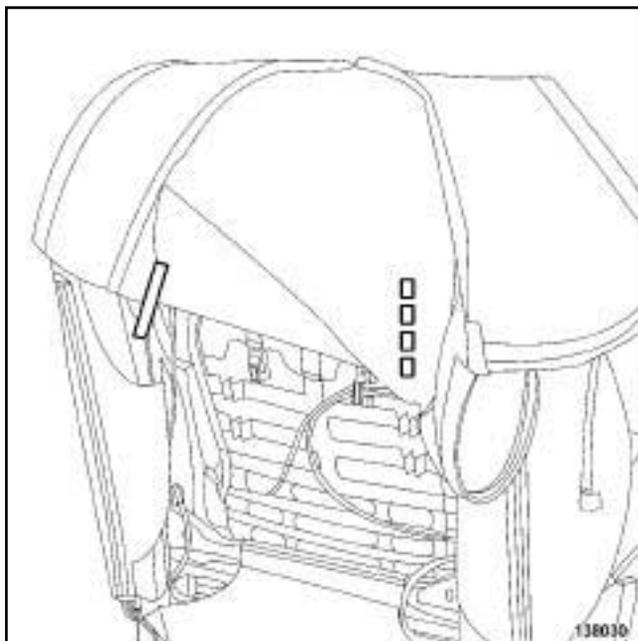


- ❑ Remove the upper retaining sections of the front seatback cover using the tool (**Car. 1363**).

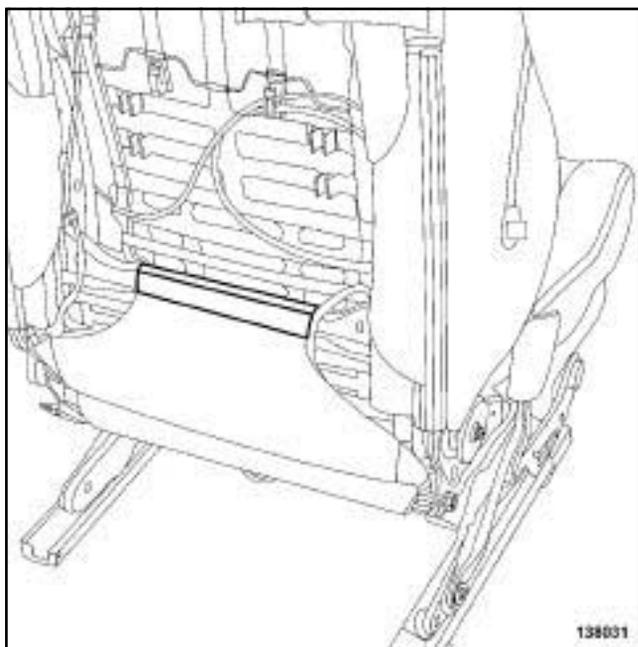


- ❑ Remove the lower retaining section of the front seatback cover using the tool (**Car. 1363**).

FRONT SEAT WITH HEATING

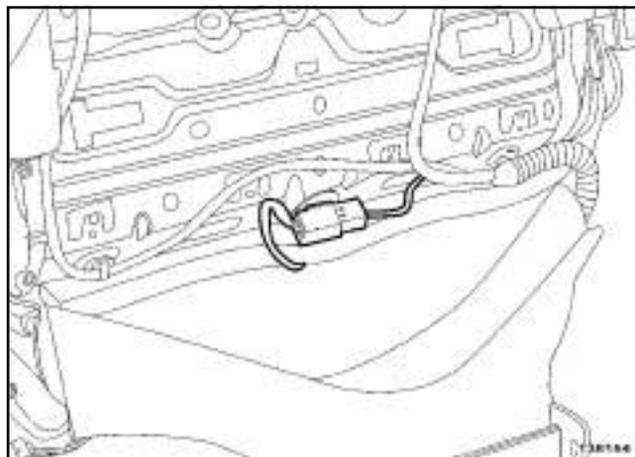

- ❑ Disconnect the connector from the front seat heated pad.

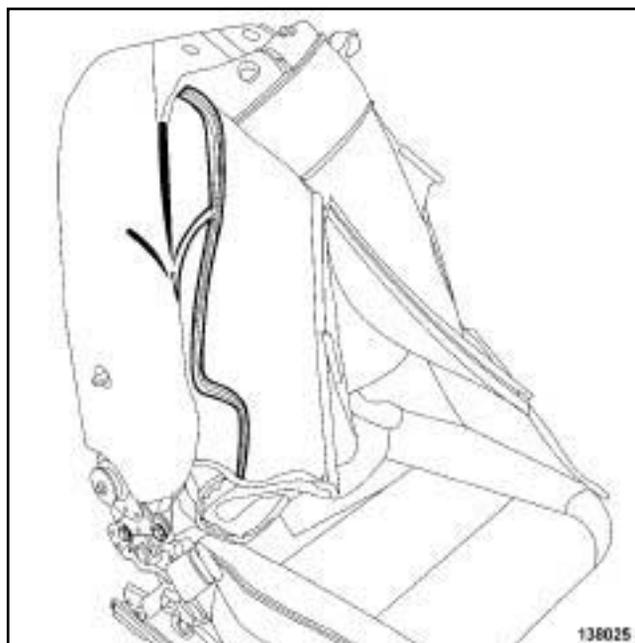


- ❑ Remove:
 - the cover partially,
 - the chest-level airbag (see **Front (chest) side airbag: Removal - Refitting**) (88C, Airbags and pretensioners).

FRONT SEAT TRIM

Front seatback trim: Removal - Refitting

77A

B95 or D95

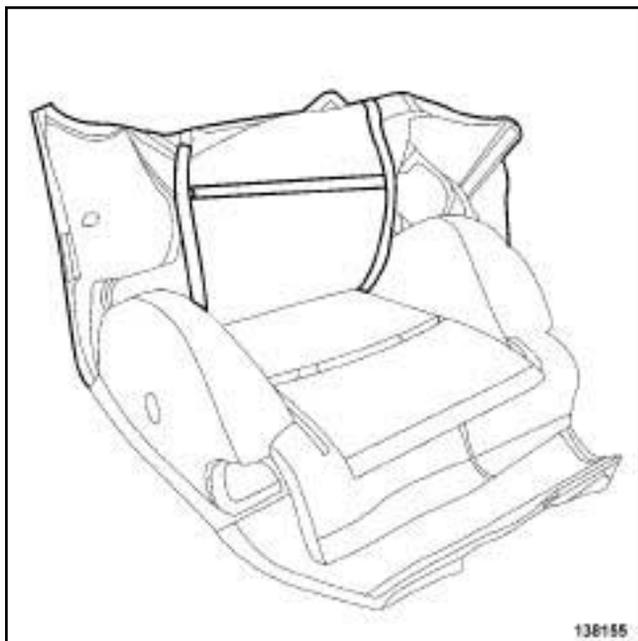

- ❑ Remove the front seatback cover.

WARNING

To prevent any risk of damaging the foam when separating "foam - cover", hold the velcro strips.


REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ❑

Note:

Before refitting the front seatback cover, check that the velcro strips are correctly attached to the foam.

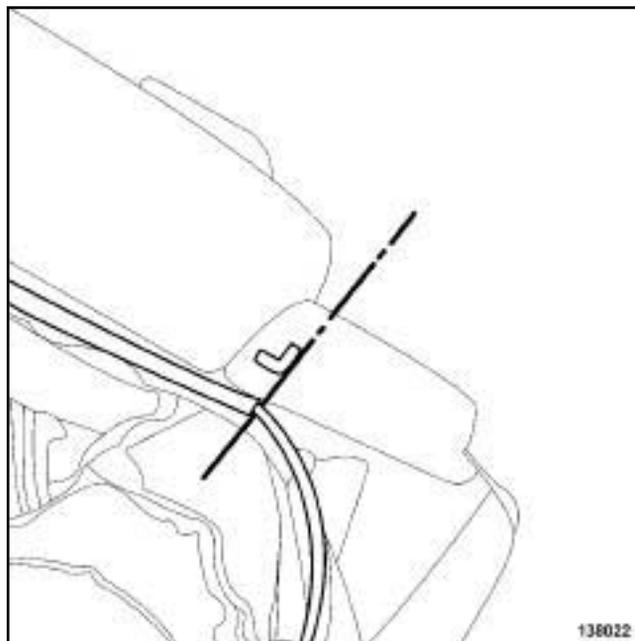

- ❑ Align the velcro strips with the marks.


Note:

The pre-markings on the foam are a guide for positioning the ends of the velcro strips.




- ❑ Refit the side airbag (see **Front (chest) side airbag: Removal - Refitting**)
- ❑ Position the seatback cover foam around the front seat chest-level airbag.

B95 or D95

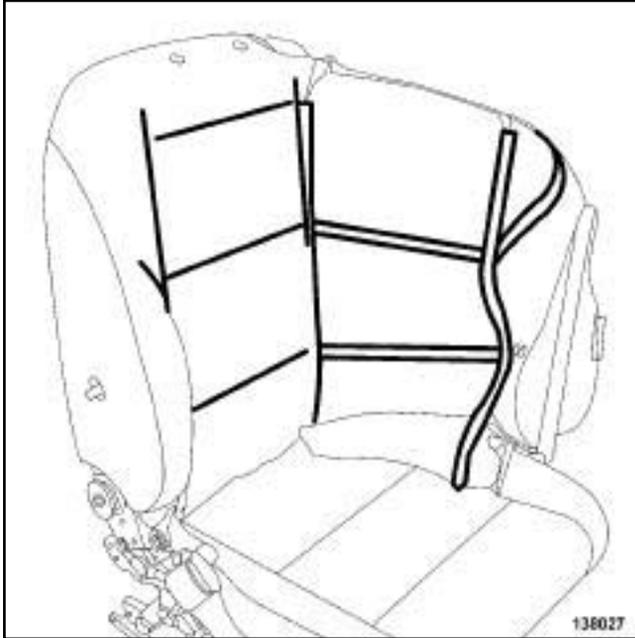


138027

- Position the front seatback cover over the foam, starting with the side velcro strips (on the chest-level airbag side).

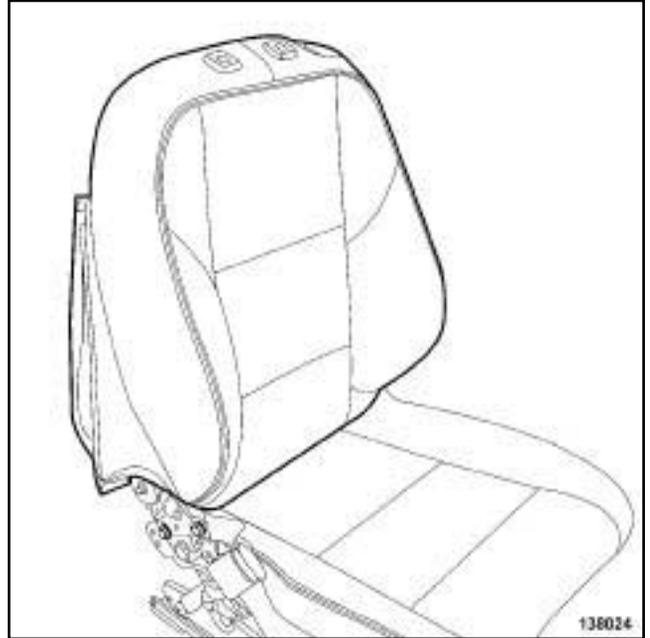

138024

- Position the front seatback cover on the side velcro strips.
- Check that there are no folds.

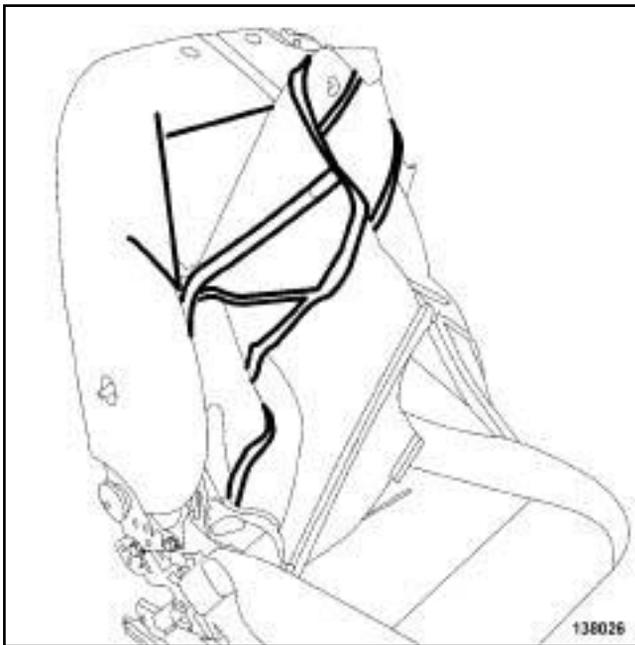

138026

- Position the front seatback cover on the central velcro strips.



138032

- Refit the exterior side profiles.

FRONT SEAT WITH HEATING

- Connect the heated pad connector.

FRONT SEAT TRIM

Front seatback trim: Removal - Refitting

77A

B95 or D95

Clip:

- the lower and upper retaining sections of the front seatback cover
- the side retaining sections,
- the lower elastic straps on the front seatback trim.

D95

- Refit the rear seat access control (see **Rear seat access mechanisms: Removal - Refitting**) .

FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03
or FRONT SEAT TYPE 04 or FRONT SEAT TYPE
05 or FRONT SEAT TYPE 06 or FRONT SEAT
TYPE 07

- Refit the front seat lumbar adjustment control (see **Front seat lumbar adjustment control: Removal - Refitting**) .

II - FINAL OPERATION

Refit:

- the front seat headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting**, page **79A-7**) ,
 - the front seat base casings (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**) ,
 - the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**) ,
 - the front seat headrest (see **79A, Seat components, Front headrest: Removal - Refitting**, page **79A-3**) .
- Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).
- Carry out a function test.

Front seat lower cover: Removal - Refitting

B95 or D95


Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL

I - REMOVAL PREPARATION OPERATION


- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page 75A-28) .

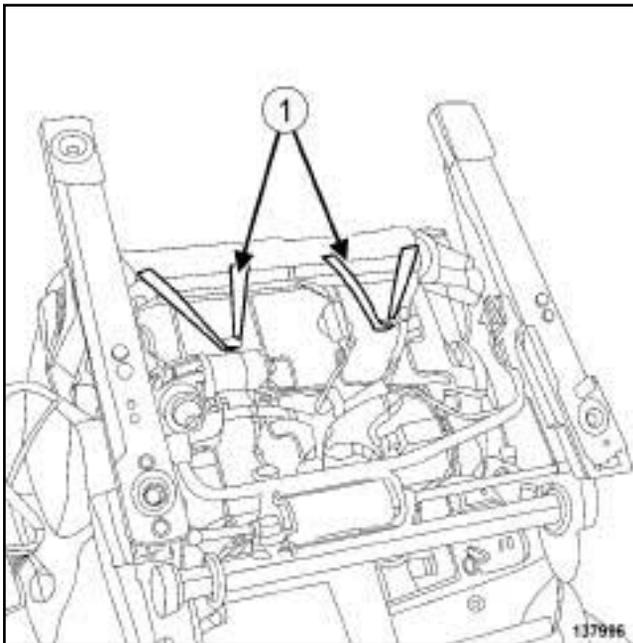


- Remove the elastic straps (1) from the front seat-back cover.

II - OPERATION FOR REMOVAL OF PART CONCERNED

1 - Front seat base interior casing

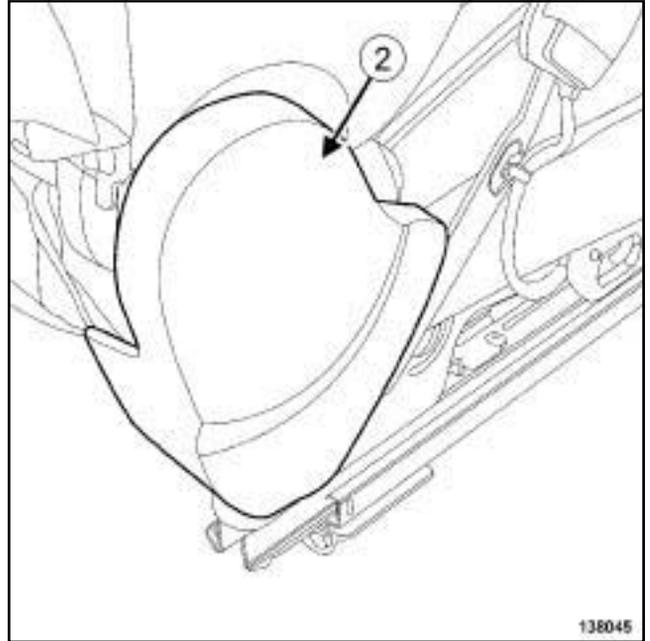

- Unclip the front seat base interior casing (2) .

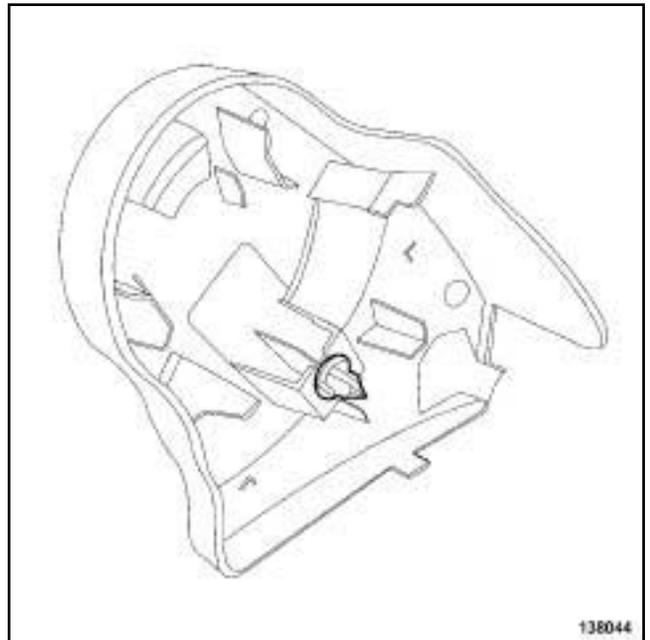

Note:
Replace the clip if deteriorated.

Front seat lower cover: Removal - Refitting


B95 or D95

2 - Front seat base exterior casing


FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02
or FRONT SEAT TYPE 03 or FRONT SEAT TYPE
05 or FRONT SEAT TYPE 06

Remove:

- the front seatback angle control (see **75A, Front seat frames and mechanisms, Front seat backrest tilt control: Removal - Refitting**, page 75A-21) ,
- the front seat height adjustment control (see **Front seat height adjuster control: Removal - Refitting**) .

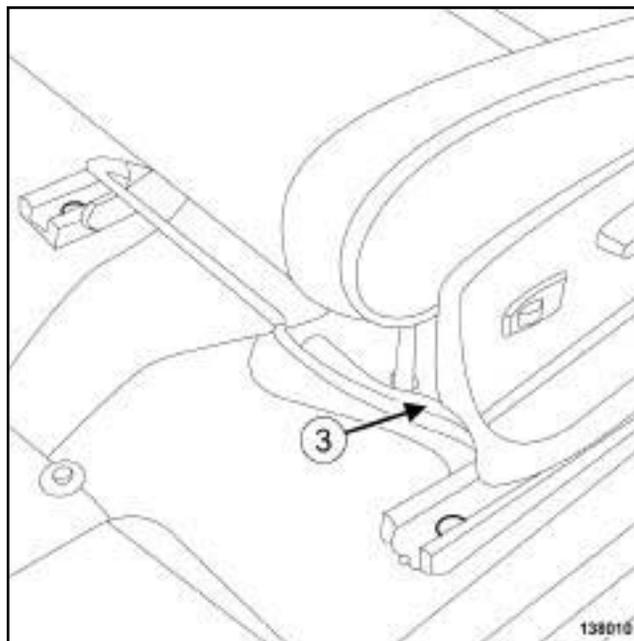

138010

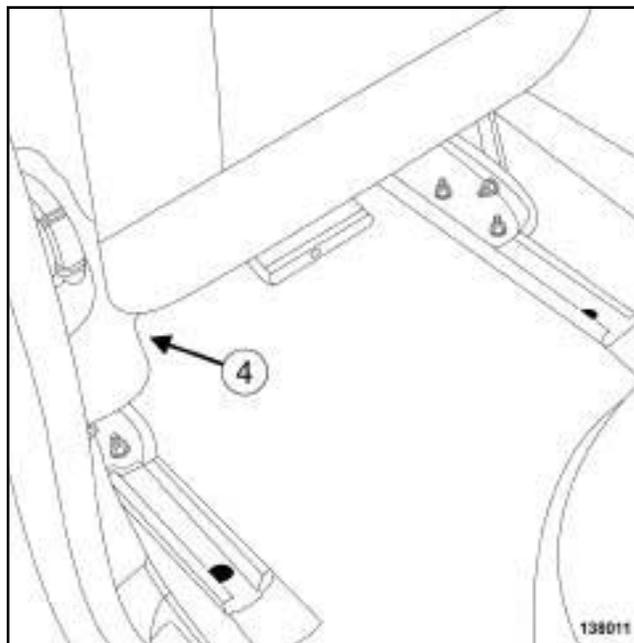


138011

- Remove the bolts (3) and (4) from the front seat base exterior casing.
- Unclip the front seat base exterior casing.

Front seat lower cover: Removal - Refitting


B95 or D95

FRONT SEAT TYPE 04

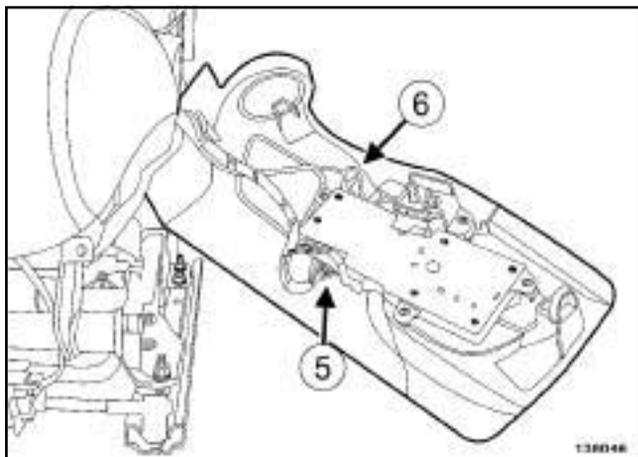

138046


- Disconnect the connectors (5) and (6) from the front seat control unit.
- Unclip the controls from the front seat control unit using the tool (Car. 1363).

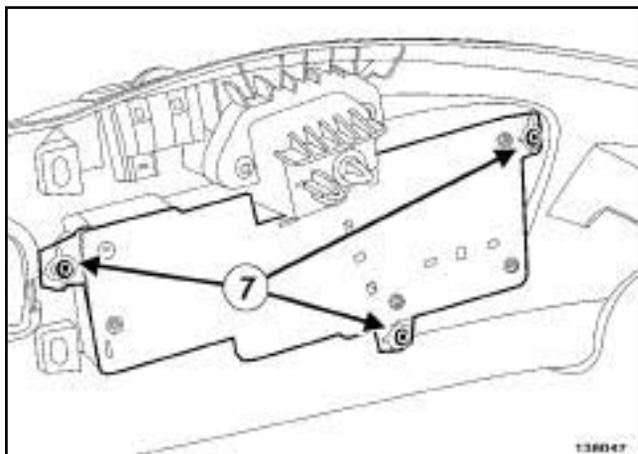

138047

- Remove:
 - the bolts (7) of the front seat control unit,
 - the front seat control unit from the front seat exterior casing.

FRONT SEAT WITH HEATING

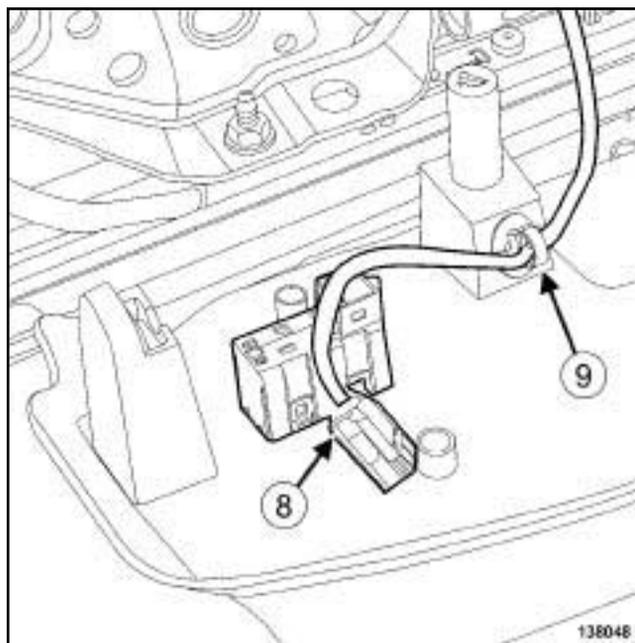

138048

- Disconnect the connector (8) from the front seat heated pad.
- Unclip the mounting clip from the wiring of the front seat heated pad (9).

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

1 - Front seat exterior casing

FRONT SEAT TYPE 04

- Refit:
 - the front seat control unit,
 - the front seat control unit buttons.
- Connect the connectors of the front seat control unit.

FRONT SEAT WITH HEATING

- Connect the connector for the front seat heated pad.

Front seat lower cover: Removal - Refitting

B95 or D95

- Clip on the mounting clip for the wiring of the front seat heated pad.

- Refit the front seat base exterior casing.

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02
or FRONT SEAT TYPE 03

- Refit:
 - the front seat height adjustment control (see **Front seat height adjuster control: Removal - Refitting**) ,
 - the front seatback angle control (see **75A, Front seat frames and mechanisms, Front seat backrest tilt control: Removal - Refitting**, page **75A-21**) .

2 - Front seat interior casing

- Refit the front seat interior casing.

II - FINAL OPERATION

- Refit the elastic strap of the front seatback trim.
- Refit the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**) .
- Connect the battery (see **Battery : Removal - Refitting**) (80A, Battery).
- Carry out a function test.

FRONT SEAT TRIM

Front seat lower cover: Removal - Refitting

77A

J95

Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02
or FRONT SEAT TYPE 03 or FRONT SEAT TYPE
05 or FRONT SEAT TYPE 06


- Remove the front seatback angle control (see **75A, Front seat frames and mechanisms, Front seat backrest tilt control: Removal - Refitting**, page 75A-21) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

1 - Front seat interior casing

a - Front seatback interior casing


FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06

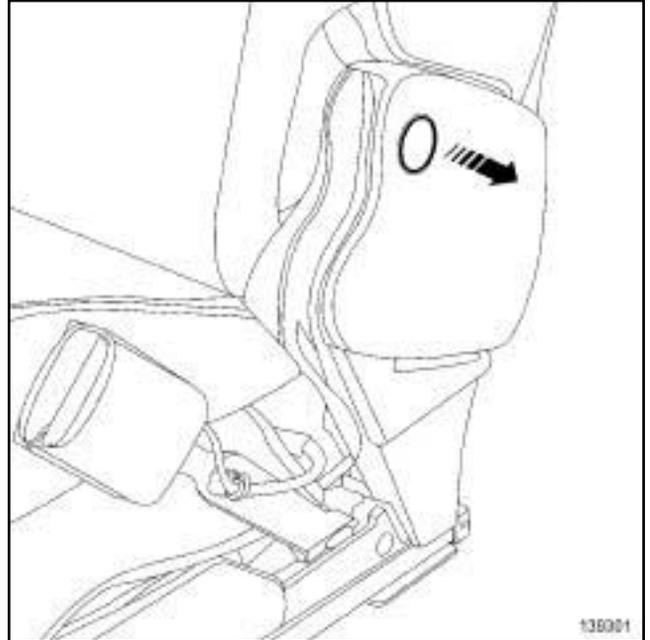

- Remove the blanking cover from the front seatback interior casing using the tool (**Car. 1363**).


Front seat lower cover: Removal - Refitting

J95

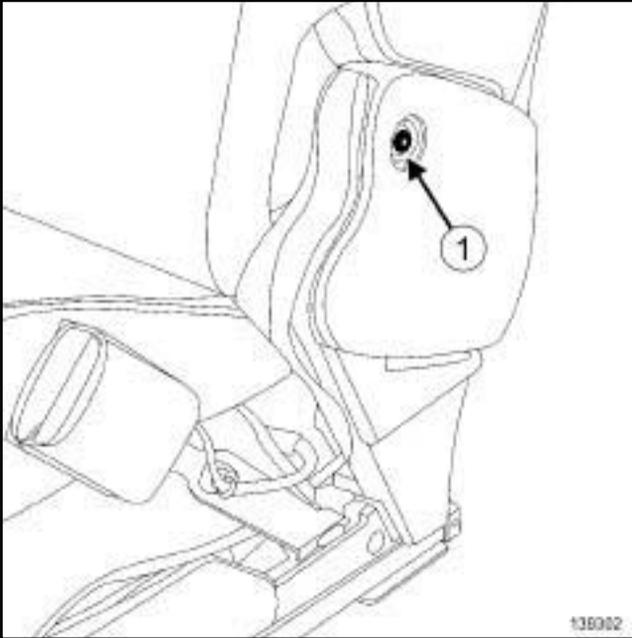


139302

- Remove the bolt (1) from the top section of the front seatback interior casing.

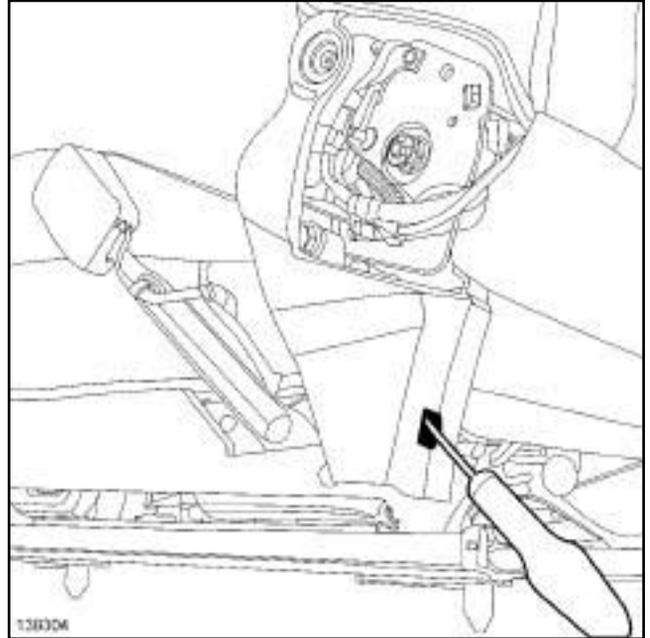


139304

- Remove the bolt from the front seatback interior casing.

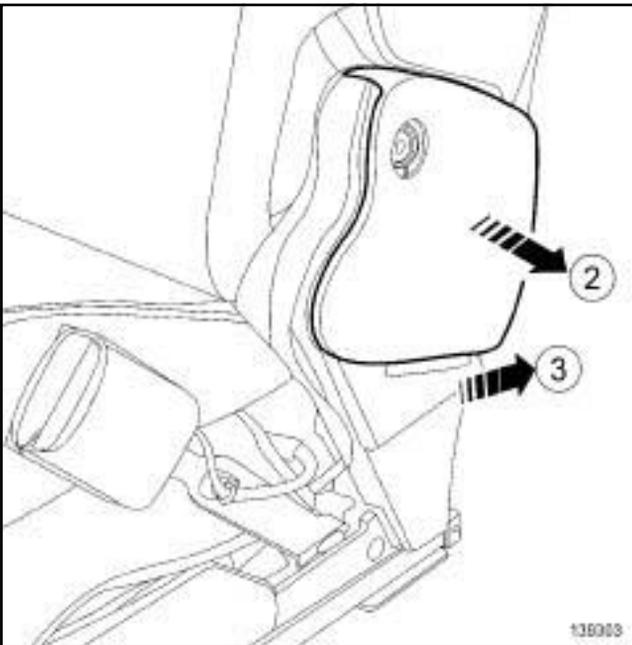

139303

- Remove the top section of the front seatback interior casing at (2) and (3).

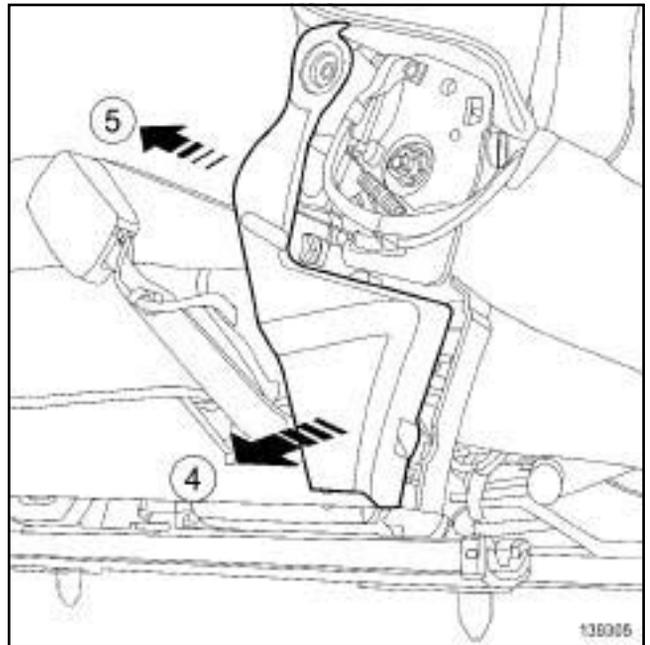


139305

- Remove the front section of the front seatback interior casing at (4) and (5).


Front seat lower cover: Removal - Refitting

J95

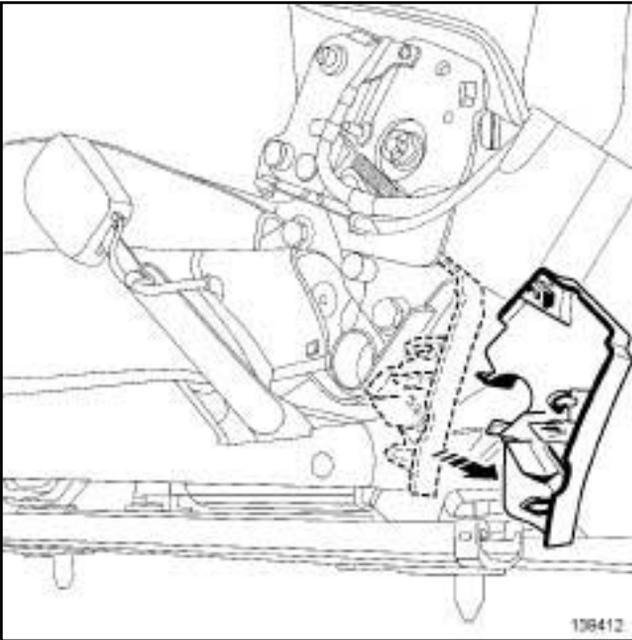

139412

- Remove the rear section of the front seatback interior casing.

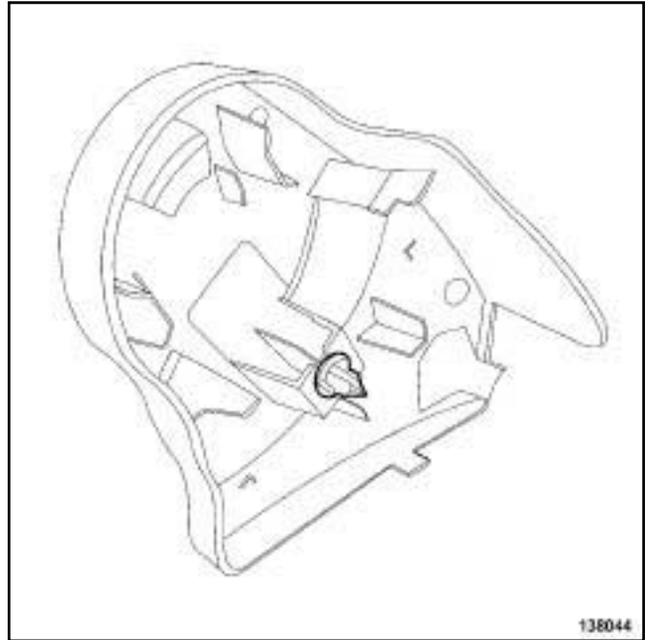

138044


138044

-

Note:

Replace the clip if deteriorated.

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02
or FRONT SEAT TYPE 03 or FRONT SEAT TYPE
04 or FRONT SEAT TYPE 07

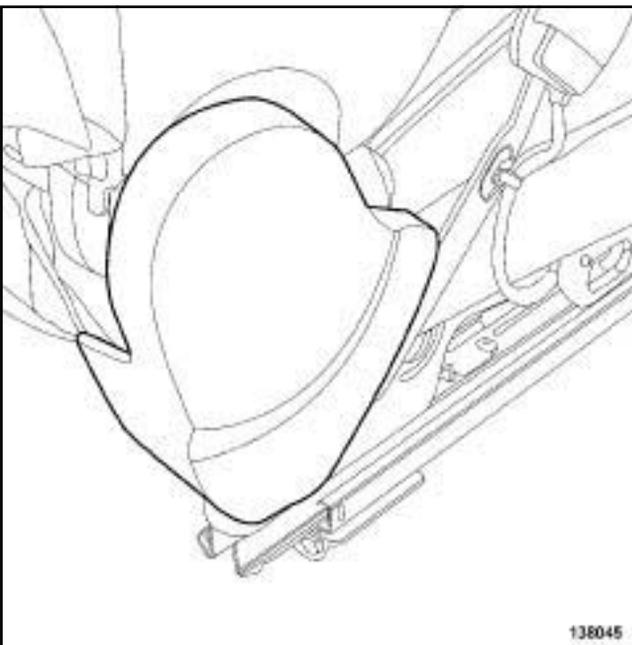


138045

138045

- Unclip the front seatback interior casing.

b - Front seat base interior casing

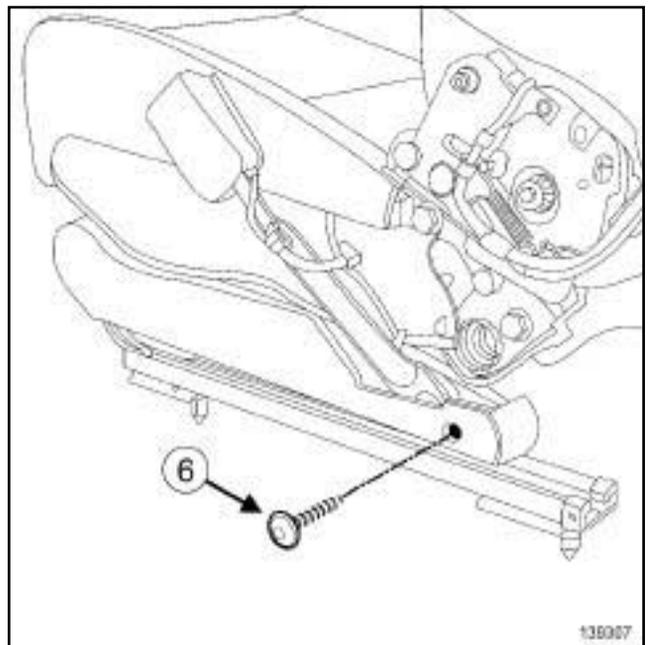


139307

139307

- Remove the bolt (6) from the front seat base interior casing.

Front seat lower cover: Removal - Refitting

J95

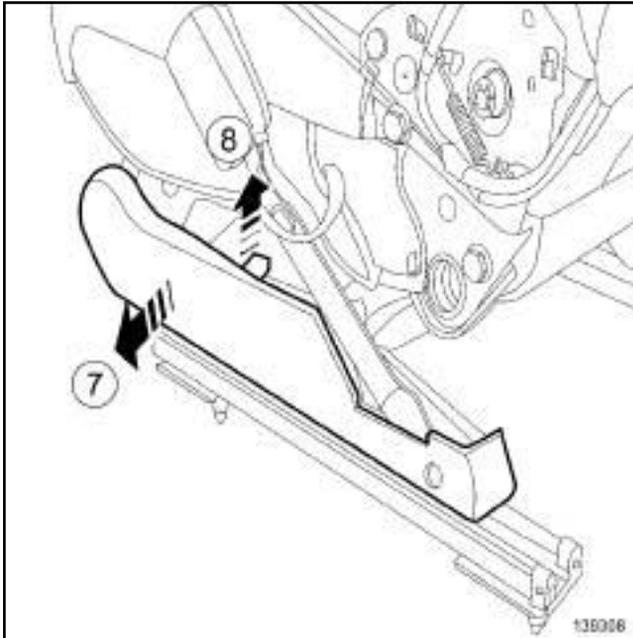


- Unclip the front seat base interior casing at (7) and (8) .


2 - Front seat exterior casing

a - Front seatback exterior casing

FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06

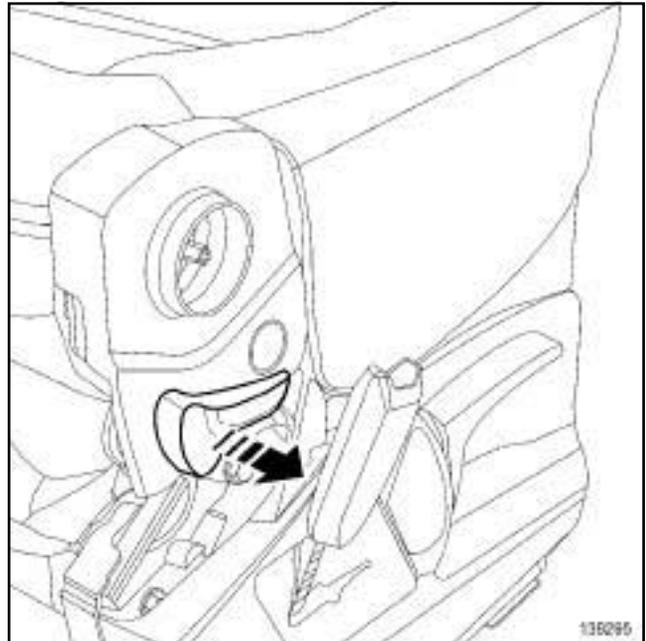

139295

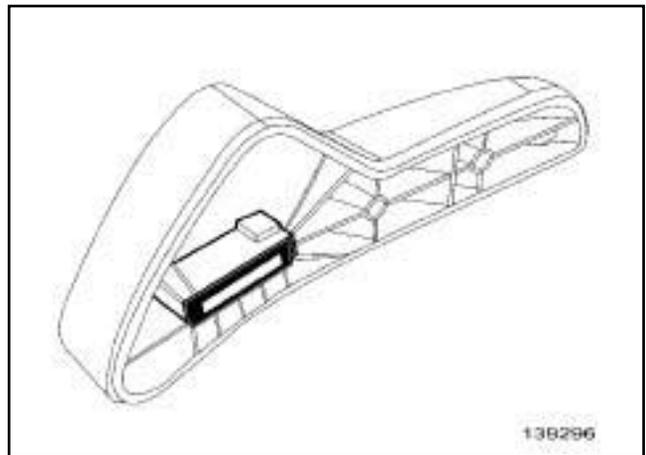

139296

- Carefully unclip the control for positioning the front seatback in the table position using a flat-blade screwdriver.

Note:

It is difficult to access the locking clip. If the control for positioning the front seatback in the table position is damaged, always replace the control.


Front seat lower cover: Removal - Refitting

J95




139297

- ❑ Remove the blanking cover using the tool (Car. 1363).

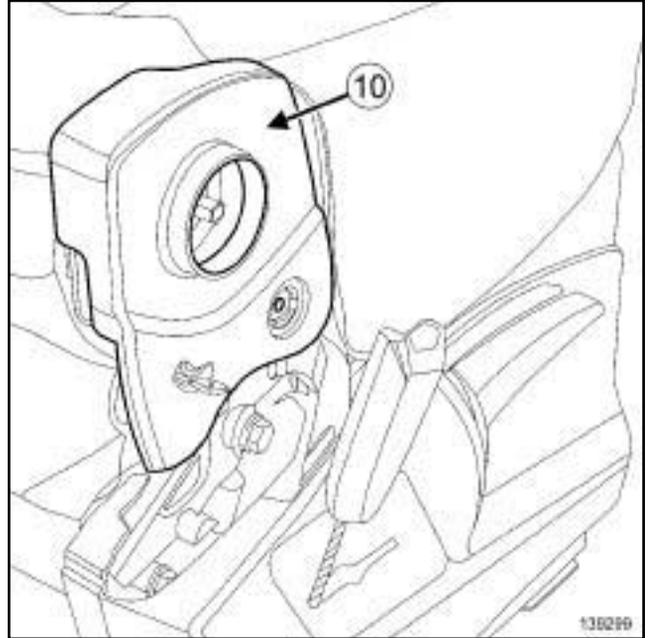

139299


- ❑ Remove the front seatback exterior casing (10).

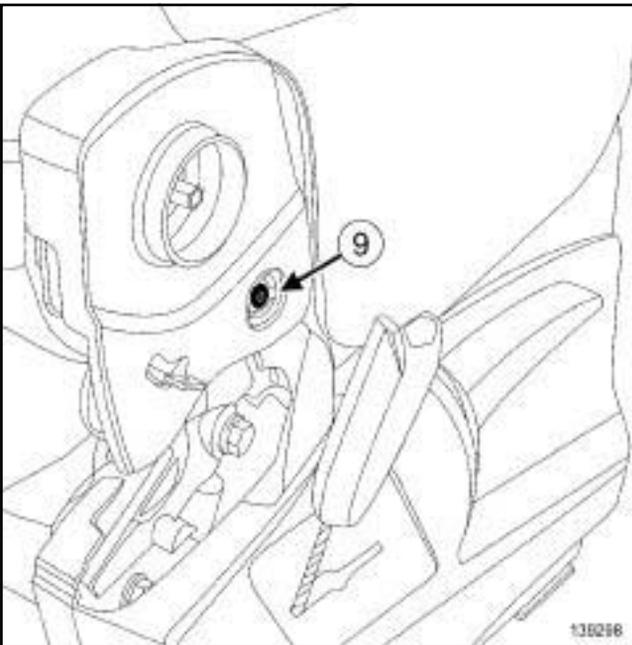

139298

- ❑ Remove the bolt (9).

b - Front seat base exterior casing

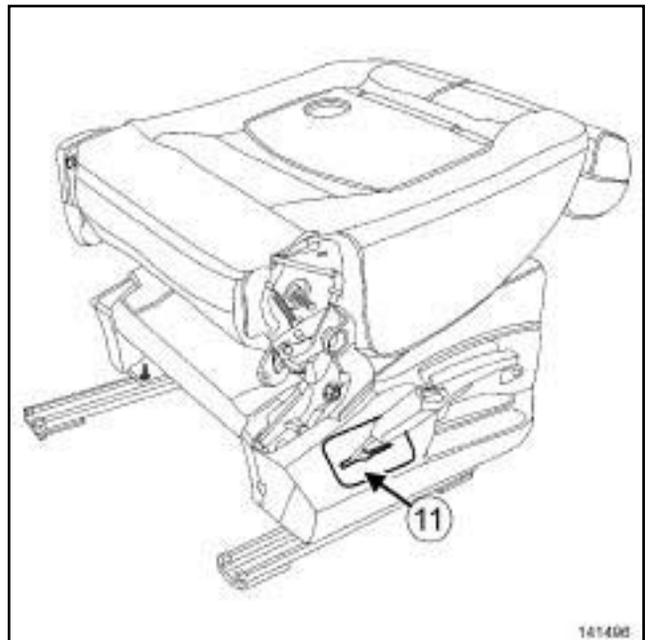


141496

- ❑ Remove the blanking cover (11) from the front seat lap belt pretensioner using the tool (Car. 1363).


Front seat lower cover: Removal - Refitting

J95

FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06

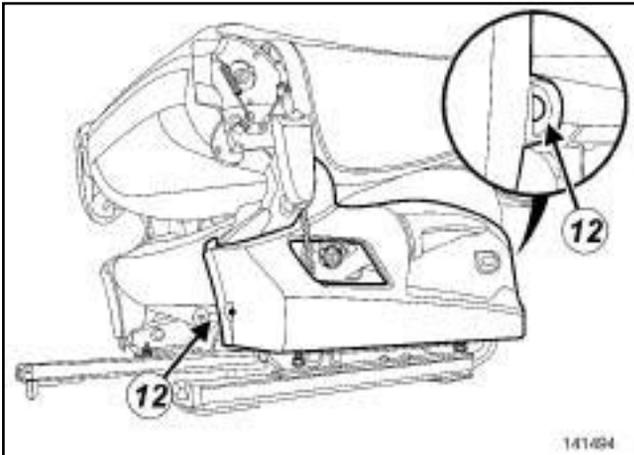


- ❑ Remove the bolts (12) from the front seat base exterior casing.

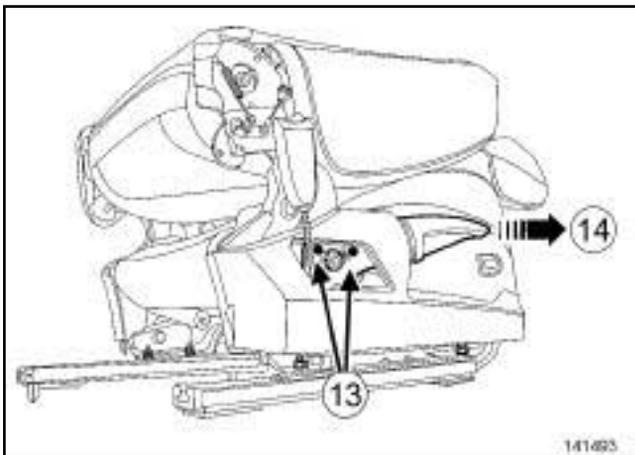


- ❑ Remove:
 - the front seat height adjustment control bolts (13) ,
 - the front seat height adjustment control at (14) .

FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06,
and FRONT SEAT WITH HEATING

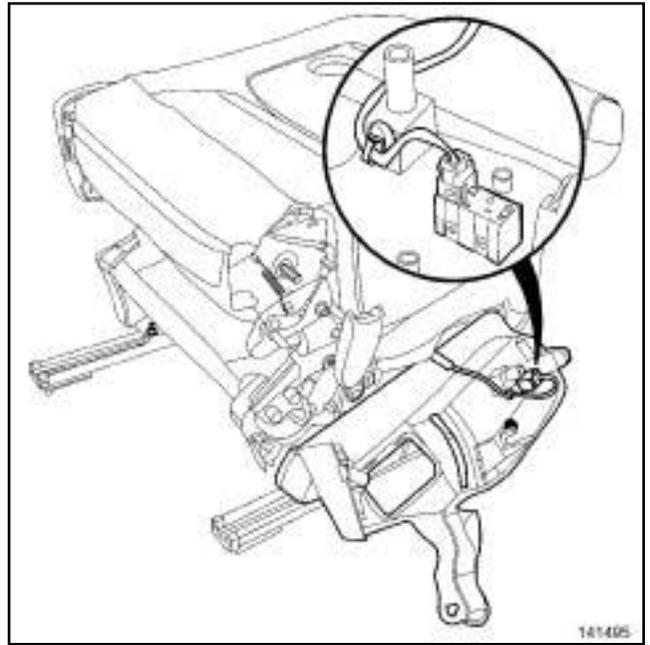

- ❑ Disconnect the connector for the front seat heated pad and check that the clip is in good condition.


FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02
or FRONT SEAT TYPE 03

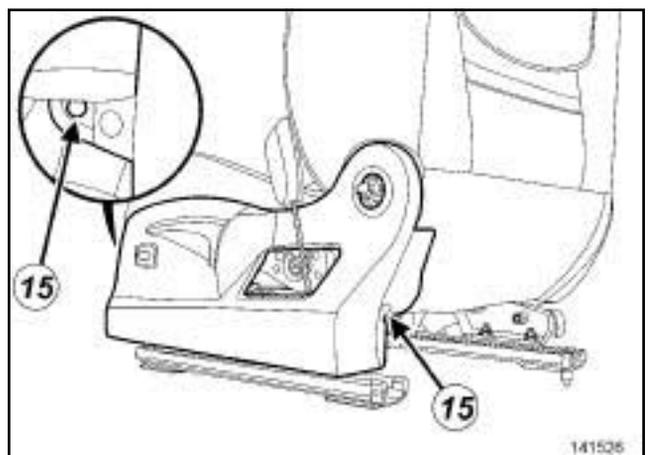

- ❑ Remove the bolts (15) from the front seat lower casing.

Front seat lower cover: Removal - Refitting


J95

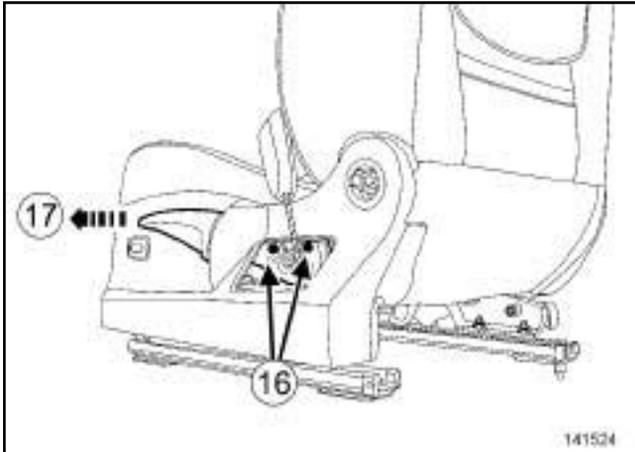

❑ Remove:

- the front seat height adjustment control bolts (16) ,
- the front seat height adjustment control at (17) .


FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02
or FRONT SEAT TYPE 03, and FRONT SEAT
WITH HEATING

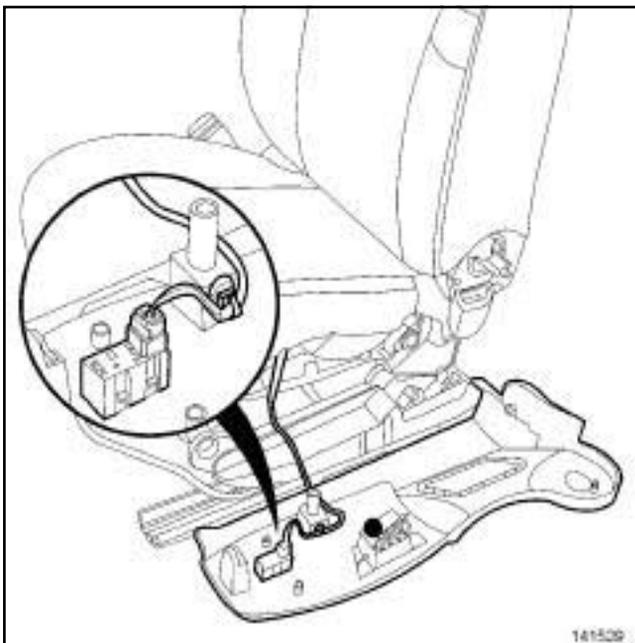


- ❑ Disconnect the connector for the heated seat and check that the clip is in good condition.

- ❑ Remove the seat base exterior casing.

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

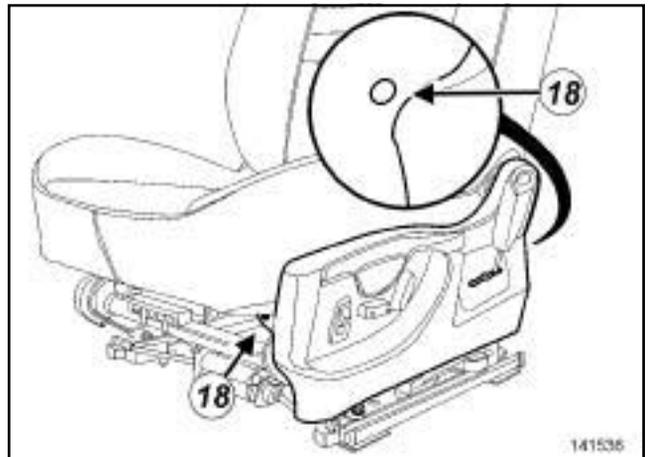

- ❑ Remove the bolts (18) from the electric front seat lower casing.

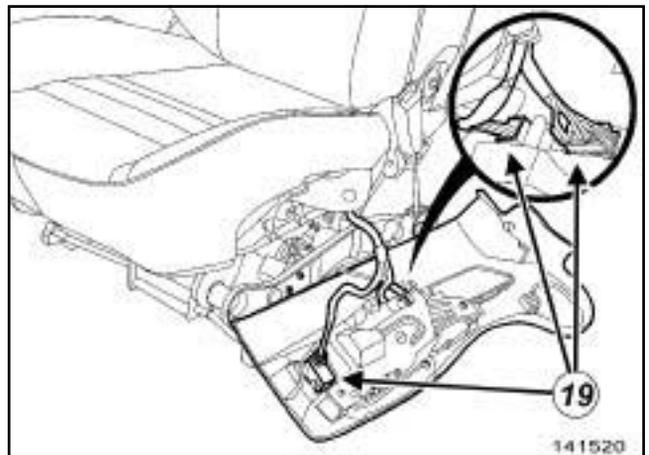

❑ Remove:

- the electric front seat lower casing,
- the electric front seat adjustment connectors (19) .

Front seat lower cover: Removal - Refitting

J95

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

1 - Front seat exterior casing

a - Front seat base exterior casing

FRONT SEAT TYPE 04 or FRONT SEAT TYPE 07

- Connect the electric front seat adjustment connectors **(19)**.
- Refit:
 - the electric front seat lower casing,
 - the bolts **(18)** of the electric front seat lower casing.

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06, and FRONT SEAT WITH HEATING

- Connect the connector for the front seat heated pad.

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02 or FRONT SEAT TYPE 03 or FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06

- Refit:
 - the front seat base exterior casing,
 - the front seat height adjustment control,
 - the front seat height adjustment control bolts,
 - the bolts of the front seat lower casing,
 - the blanking cover **(11)** of the front seat lap belt pretensioner.


b - Front seatback exterior casing

FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06

- Refit:
 - the front seatback exterior casing,
 - the bolt of the front seatback exterior casing,
 - the blanking cover of the front seatback exterior casing.
- Clip on the control for positioning the front seatback in the table position.

2 - Front seat interior casing

a - Front seat base interior casing

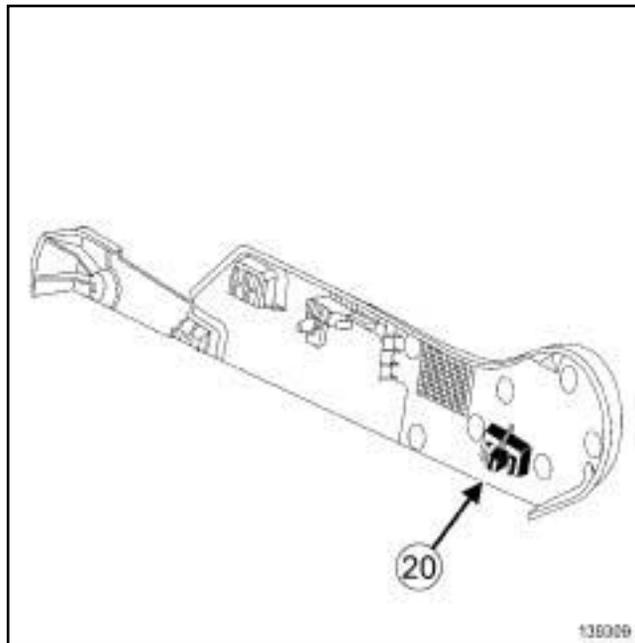

- Note:

Replace the clip **(20)** of the seat base interior casing if it is damaged.

- Clip on the front seat base interior casing.
- Refit the bolt **(6)** for the front seat base interior casing.

Front seat lower cover: Removal - Refitting

J95

b - Front seatback interior casing

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02
or FRONT SEAT TYPE 03 or FRONT SEAT TYPE
04 or FRONT SEAT TYPE 07

- Clip on the front seatback interior casing.

FRONT SEAT TYPE 05 or FRONT SEAT TYPE 06

- Refit:

- the rear section of the front seatback interior casing,
- the front section of the front seatback interior casing,
- the bolt of the front seatback interior casing,
- the top section of the front seatback casing,
- the bolt **(1)** for the top section of the front seatback interior casing,
- the blanking cover of the front seatback interior casing.

II - FINAL OPERATION

FRONT SEAT TYPE 01 or FRONT SEAT TYPE 02
or FRONT SEAT TYPE 03 or FRONT SEAT TYPE
05 or FRONT SEAT TYPE 06

- Refit the front seatback angle control (see **75A, Front seat frames and mechanisms, Front seat backrest tilt control: Removal - Refitting**, page **75A-21**) .

- Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

- Carry out a function test.

1/3 and 2/3 rear bench seat trim: Removal - Refitting


B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

REMOVAL


I - REMOVAL PREPARATION OPERATION

- Remove the rear bench seat bases (see 1/3 and 2/3 rear bench seat:Removal - Refitting) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

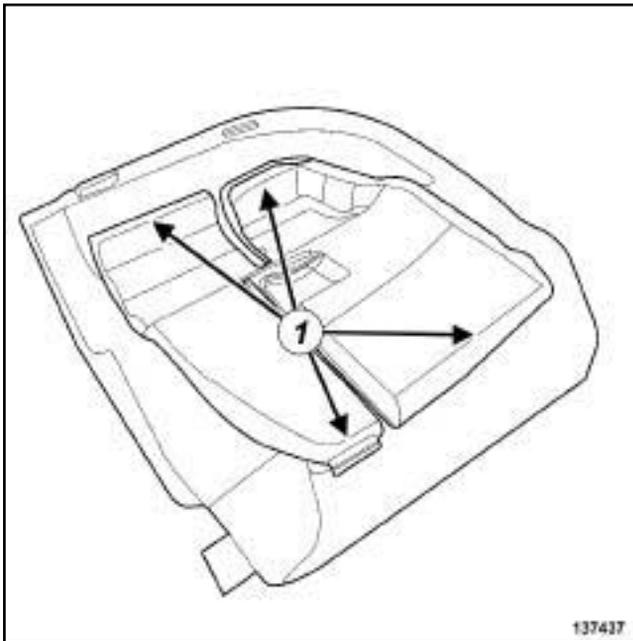


137437

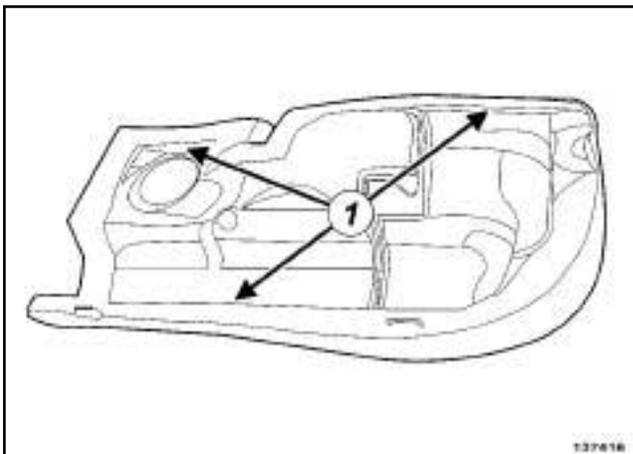

137416

- Remove:

- the cover retaining sections (1) ,
- the « cover - foam » assembly of the rear bench seat base.

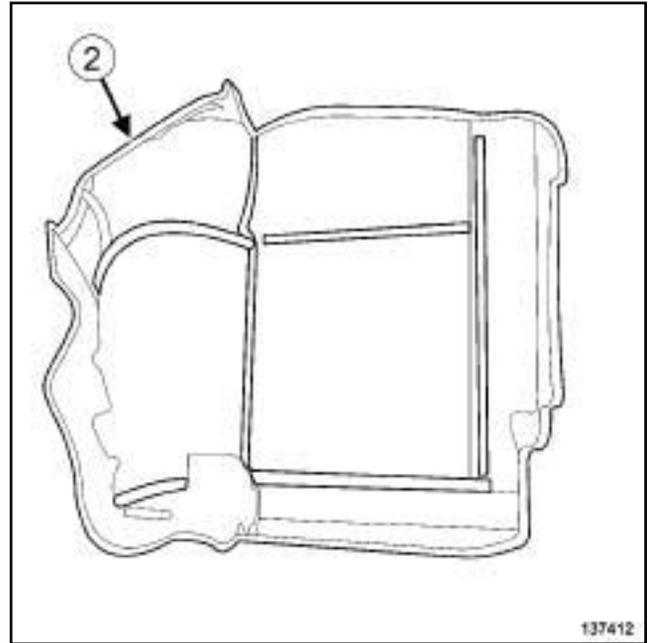

137412

137412

- Remove the cover (2) of the 1/3 and 2/3 rear bench seat base.

WARNING

To avoid any risk of damaging the foam, separate the cover from the foam by holding the velcro strips.


1/3 and 2/3 rear bench seat trim: Removal - Refitting

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

REFITTING


I - REFITTING PREPARATION OPERATION

Incorrect

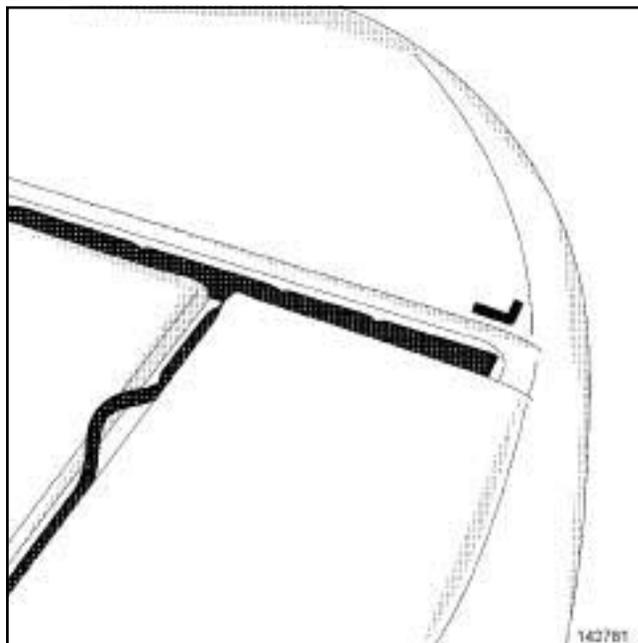

142781

Correct

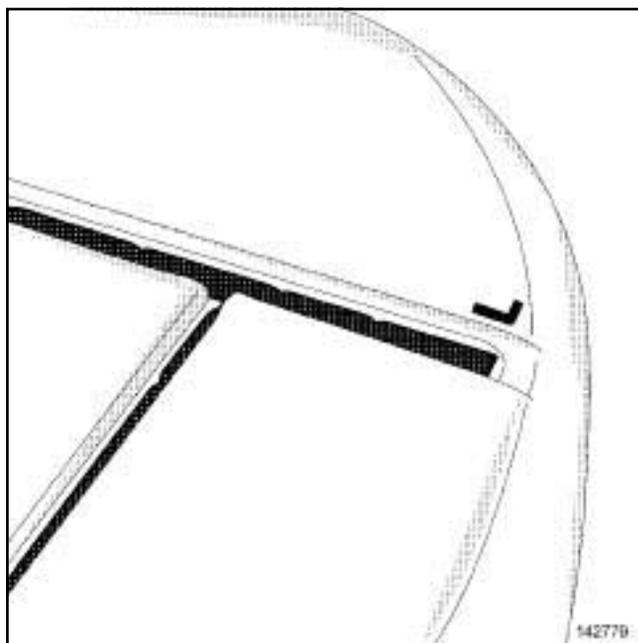


142779

- Check that the velcro strips are properly fastened on the foam.

WARNING

To avoid any risk of the cover detaching or any folds in the cover, check that the velcro strips are secure on the foam. If the velcro strip tears, replace the foam.

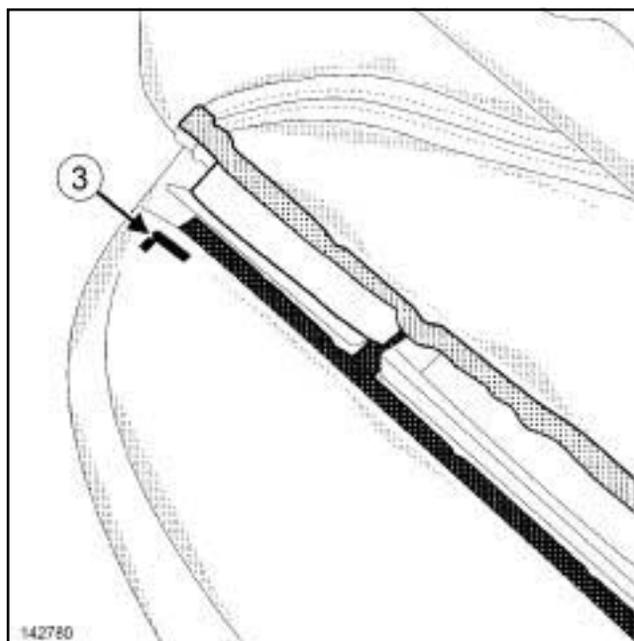

142780

- Position the cover of the rear bench seat base on the foam, starting with the side velcro strips.

Note:

The markings on the foam are a guide for positioning the velcro strips.

- Align the ends of the velcro strips with the marks (3) .

II - REFITTING OPERATION FOR PART CONCERNED

- Refit the cover of the rear bench seat base on the foam.
- Check that there are no folds in the cover.
- Refit:
 - the « foam - cover » assembly of the 1/3 and 2/3 rear bench seat base,
 - the retaining sections of the rear bench seat base cover.
- Check that there are no folds in the cover.

REAR SEAT TRIM

1/3 and 2/3 rear bench seat trim: Removal - Refitting

78A

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK
or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

III - FINAL OPERATION

- Refit the rear bench seat bases (see **1/3 and 2/3 rear bench seat:Removal - Refitting**).

REAR SEAT TRIM

78A

1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

Essential special tooling

Car. 1363	Set of trim removal levers.
Car. 1558	Pliers for zip fastener.

Tightening torques



bolts of the rear bench seat supports	35 N.m
---------------------------------------	---------------

REMOVAL

I - REMOVAL PREPARATION OPERATION

Remove:

- the rear bench seat bases (see **1/3 and 2/3 rear bench seat: Removal - Refitting**),
- the rear bench seatbacks (see **76A, Rear seat frames and mechanisms, 1/3 and 2/3 rear bench seatback: Removal - Refitting**, page 76A-3),
- the rear headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page 79A-13).

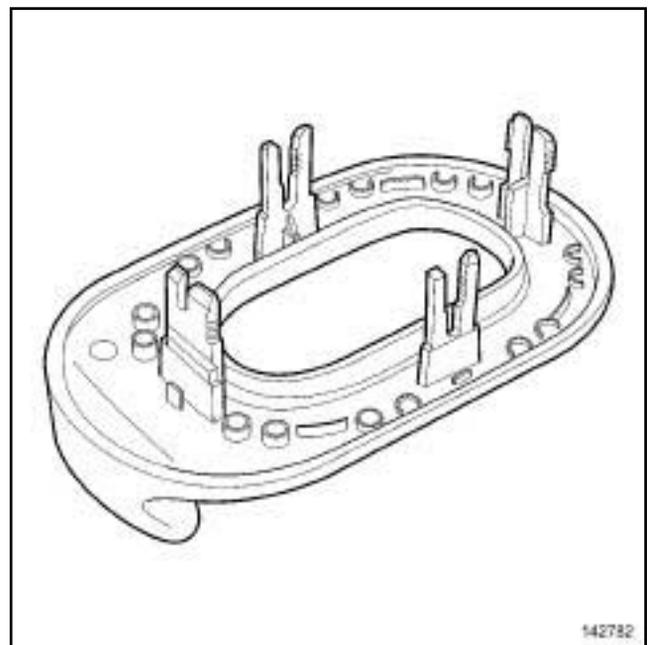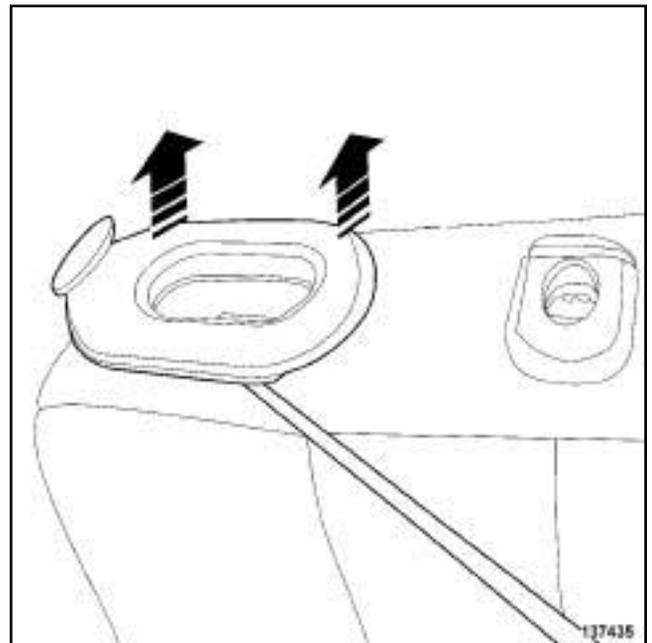


- Unclip the trims from the unlocking control of the rear bench seatback using the tool (**Car. 1363**).

1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK


1 - 1/3 rear bench seatback cover

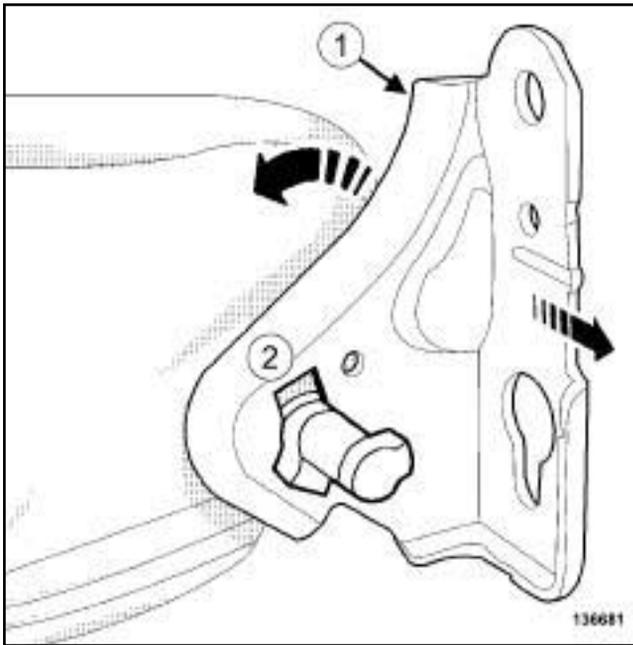

136681

- Turn the central mounting support of the rear bench seat (1) to align the lug and the hole (2) .
- Remove the central mounting support of the rear bench seat (1) .

2 - 2/3 rear bench seatback cover

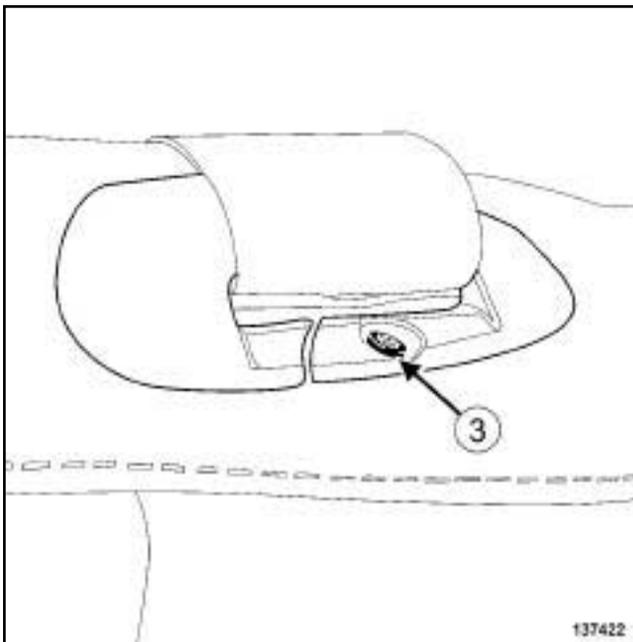

137422

- Remove:
 - the bolt (3) ,
 - the trim of the rear centre seat belt strap guide.

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

- Remove the rear central armrest (see 79A, **Seat components, Rear centre arm rest: Removal - Refitting**, page 79A-8) .

REAR SEAT TRIM

78A



1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK



1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

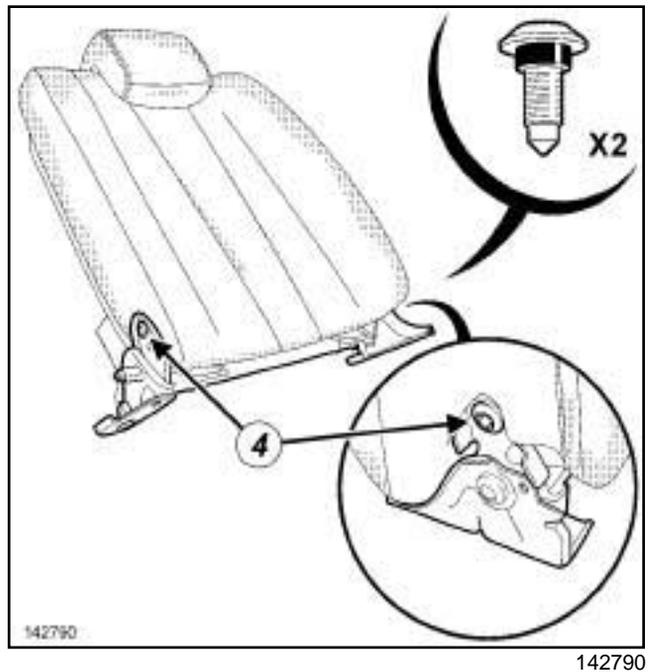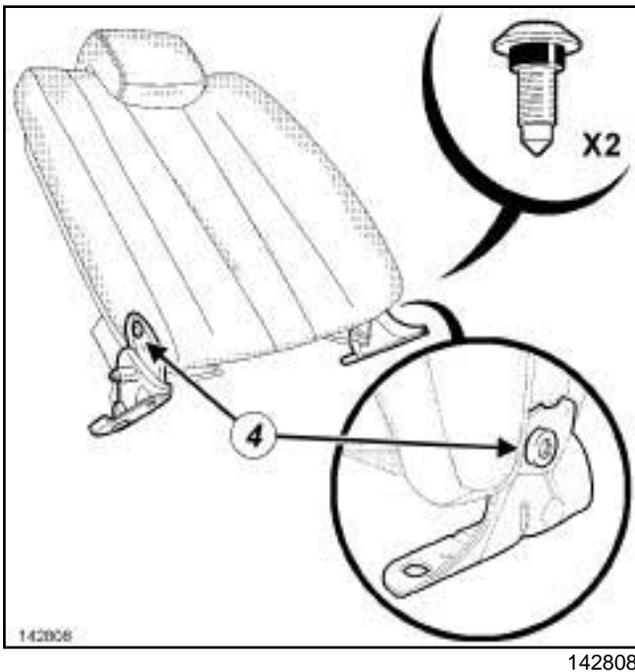

❑ Remove:

- the bolts (4) ,
- the rear bench seat supports.

❑ Remove:

- the bolts (4) ,
- the rear bench seat supports.


REAR SEAT TRIM

1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting

78A

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK


II - OPERATION FOR REMOVAL OF PART CONCERNED

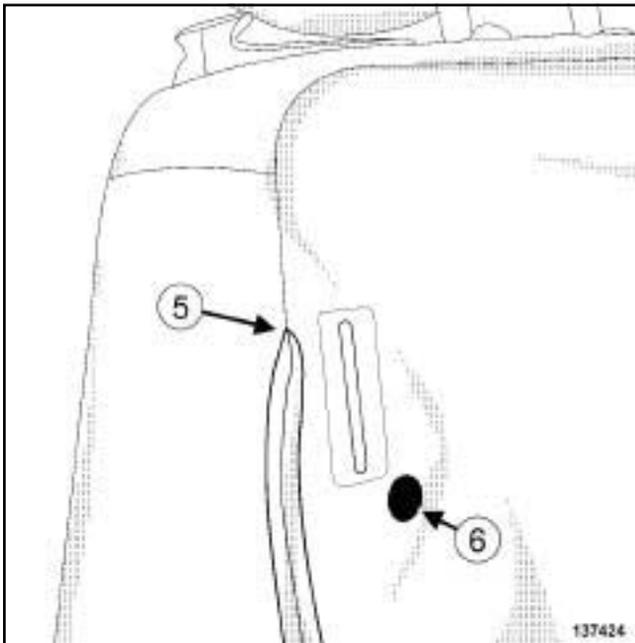


- Extract the zip fasteners (5) .
- Open the zip fasteners.
- Remove the clips (6) .

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

2/3 rear bench seatback cover

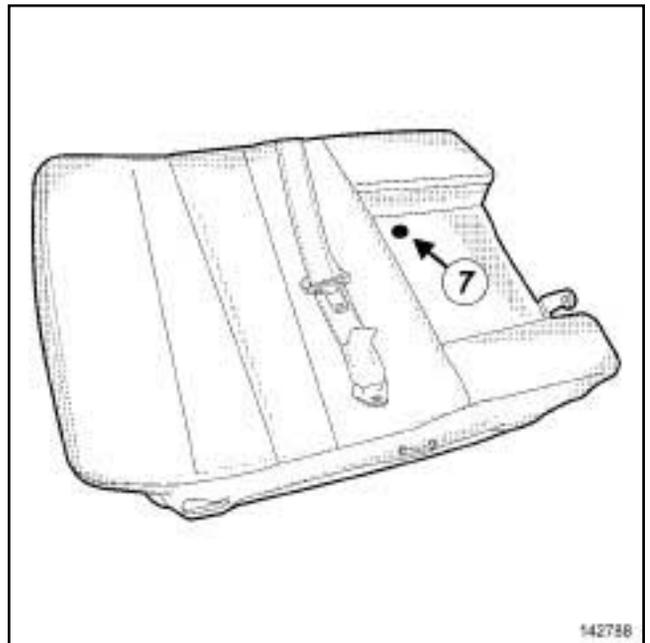

142788

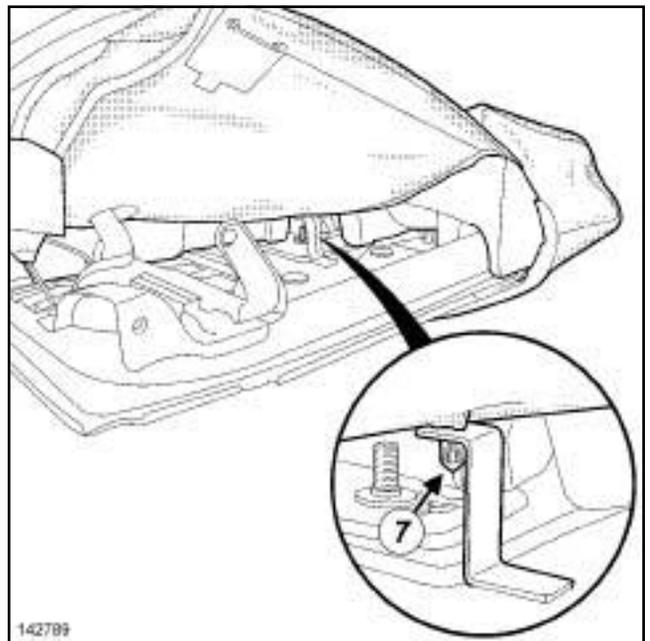

142789

- Lift up the foam of the rear bench seatback.
- Unclip the clip (7) .

REAR SEAT TRIM


78A

1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK


- Remove the rear bench seat headrest guides (see **79A, Seat components, Rear seat headrest guide: Removal - Refitting**, page **79A-9**).
- Remove the « cover - foam » assembly of the rear bench seatback.

2/3 bench seatback cover

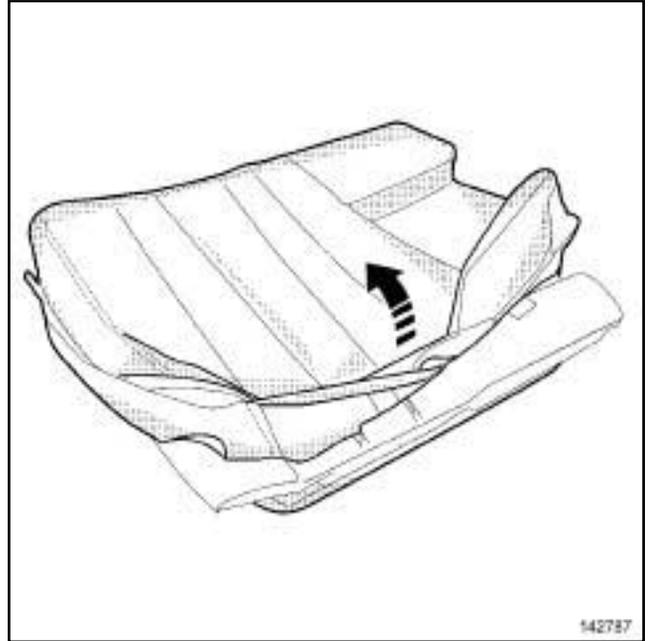

142787

1/3 bench seatback cover

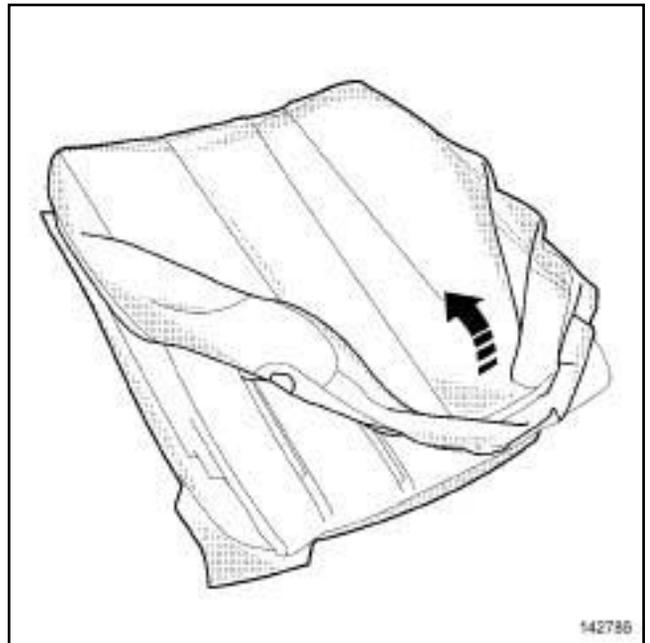

142786

- Separate the cover from the rear bench seatback foam.
- Remove the cover from the rear bench seatback.

WARNING


To avoid any risk of damaging the foam, separate the cover from the foam by holding the velcro strips.

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

REFITTING


I - REFITTING PREPARATION OPERATION

Incorrect

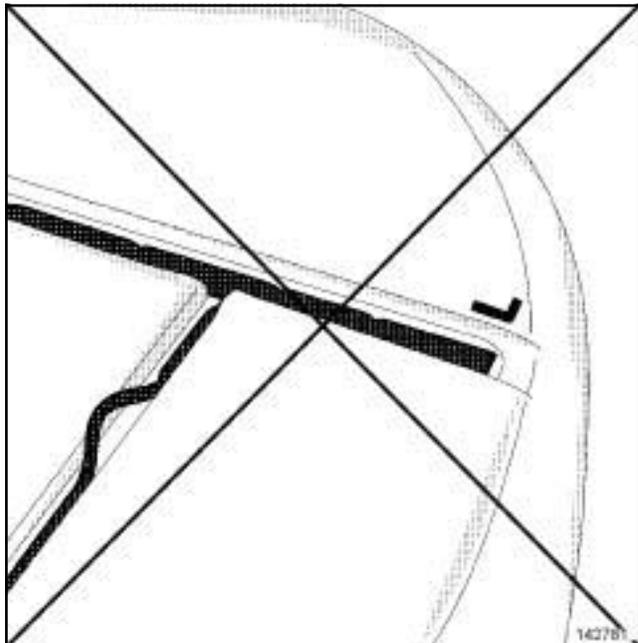

142781

Correct

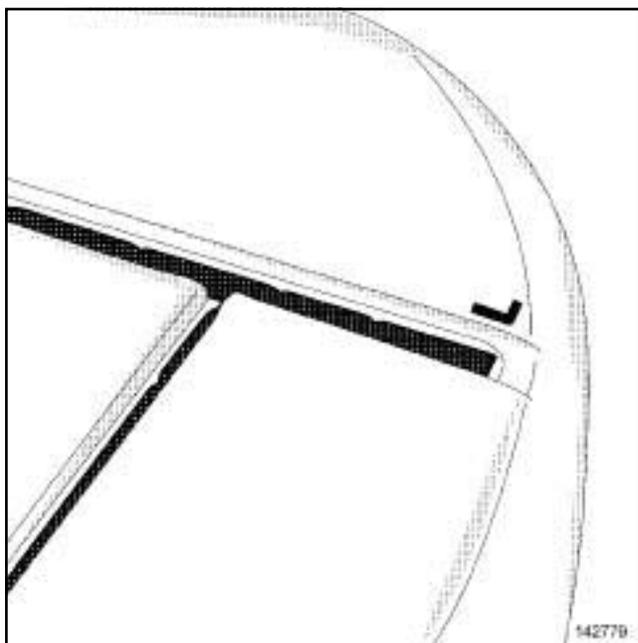


142779

- Check that the velcro strips are properly fastened on the foam.

WARNING

To avoid any risk of the cover detaching or any folds in the cover, check that the velcro strips are secure on the foam. If the velcro strip tears, replace the foam.

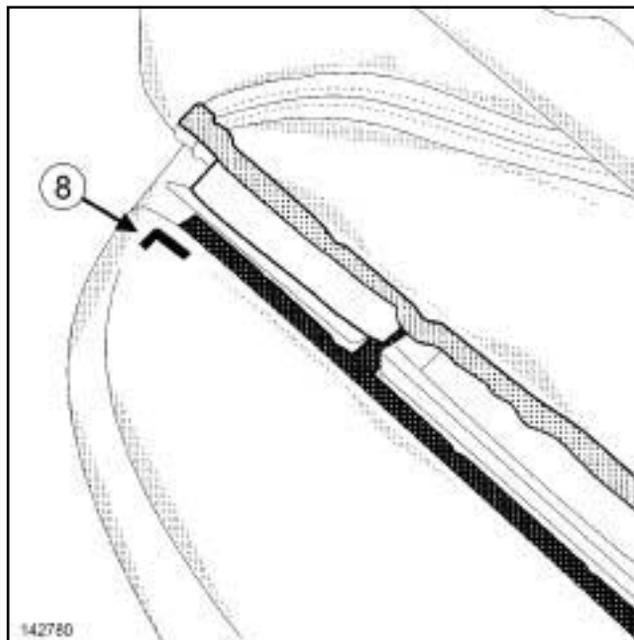

142780

- Position the cover of the rear bench seatback on the foam, starting with the side velcro strips.

Note:

The markings on the foam are a guide for positioning the velcro strips.

- Align the ends of the velcro strips with the marks (8) .

II - REFITTING OPERATION FOR PART CONCERNED

- Refit the cover of the rear bench seatback on the foam.
- Check that there are no folds in the cover.
- Refit:

- the « cover - foam » assembly of the rear bench seatback,

- the rear bench seat headrest guides (see **79A, Seat components, Rear seat headrest guide: Removal - Refitting, page 79A-9**) .

B95 or D95 or K95, and REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

2/3 rear bench seatback cover

- Clip on the clip (7).

- Refit the clips (6).

- Close the zip fasteners using the tool (Car. 1558).

- Fit the zip fasteners (5).

III - FINAL OPERATION

- Refit:

- the rear bench seat supports,
- the bolts (4).

- Torque tighten the bolts of the rear bench seat supports (35 N.m).

1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

- Refit the rear central armrest (see 79A, Seat components, Rear centre arm rest: Removal - Refitting, page 79A-8).

1 - 2/3 rear bench seatback cover

- Refit:

- the trim of the rear centre seat belt strap guide,
- the bolt (3).

2 - 1/3 rear bench seatback cover

- Refit the centre mounting support of the rear bench seat (1).

- Clip on the trims of the unlocking control for the rear bench seatback.

- Refit:

- the rear headrests (see 79A, Seat components, Rear headrest: Removal - Refitting, page 79A-13),
- the rear bench seatbacks (see 76A, Rear seat frames and mechanisms, 1/3 and 2/3 rear bench seatback: Removal - Refitting, page 76A-3),
- the rear bench seat bases (see 1/3 and 2/3 rear bench seat: Removal - Refitting).

B95 or D95, and REAR BENCH SEAT


REMOVAL

I - REMOVAL PREPARATION OPERATION


❑ Remove:

- the rear headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page **79A-13**),
- the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page **76A-6**),
- the single unit rear bench seatback (see **76A, Rear seat frames and mechanisms, Single unit rear bench seatback: Removal - Refitting**, page **76A-1**).


II - OPERATION FOR REMOVAL OF PART CONCERNED

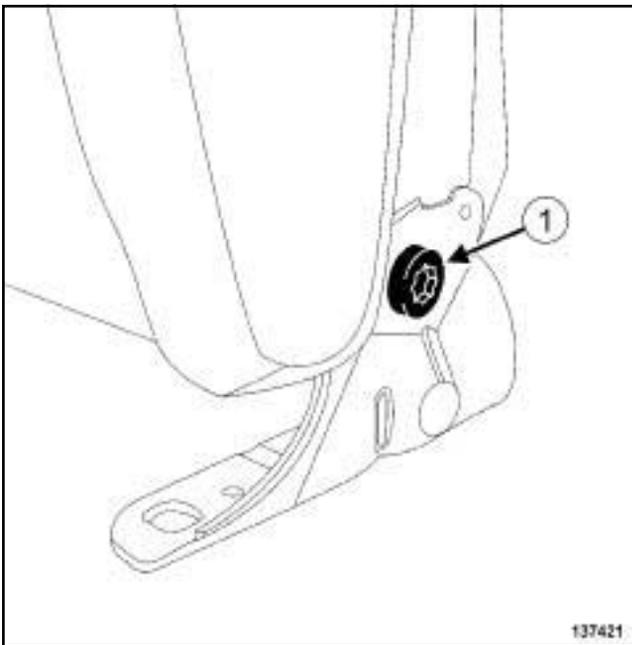

❑ Remove the seatback side mountings (1).

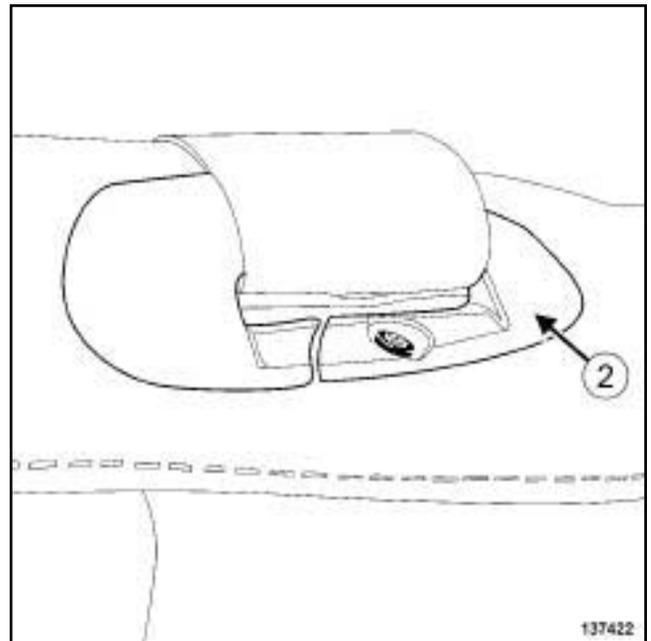

❑ Remove the seat belt trim (2).

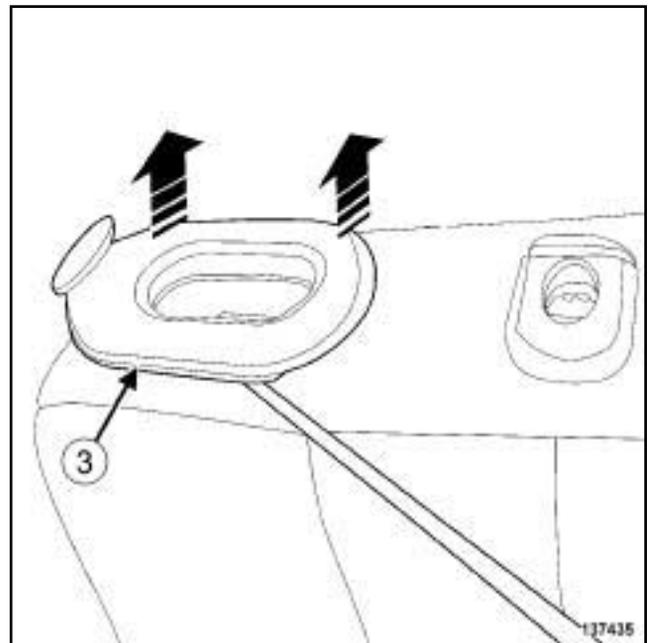

❑ Remove the bench seat lock trims (3) in order to tilt the seatback.

REAR SEAT TRIM


Rear bench seat single unit seatback trim: Removal - Refitting

78A


B95 or D95, and REAR BENCH SEAT



- Open the zip fasteners (4) .
- Remove the clips (5) .

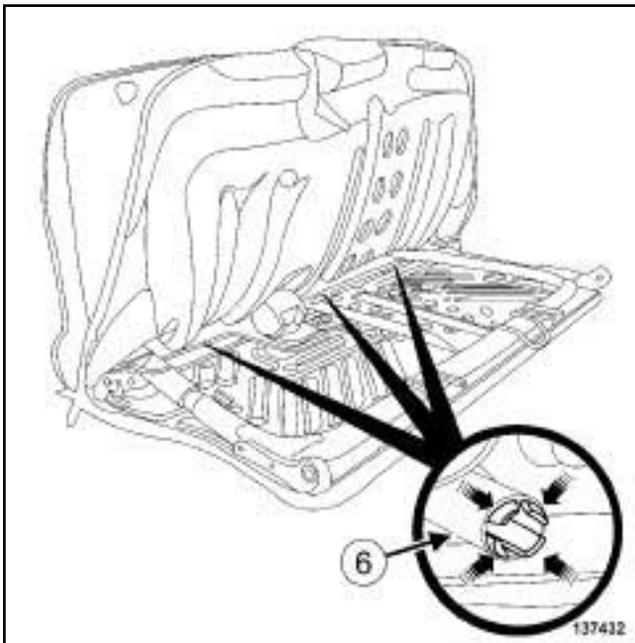

- Remove the headrest guides (6) .
- Partially remove the « trim - foam » assembly of the single unit rear bench seatback.

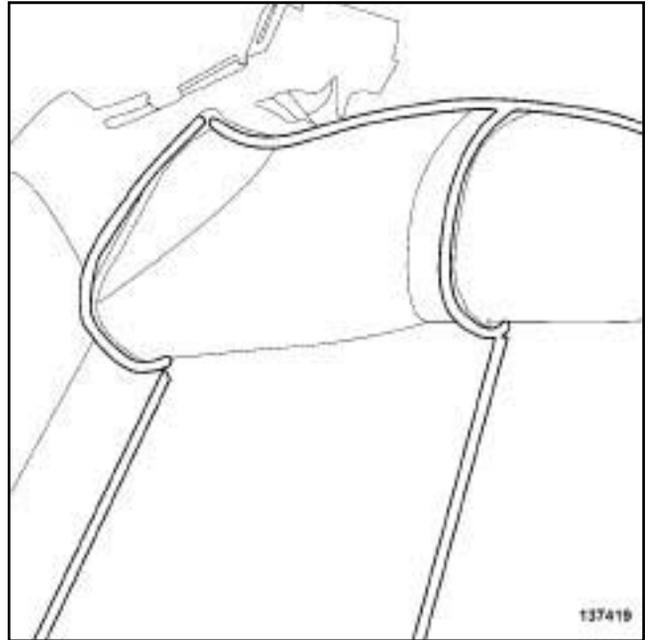

- Separate the single unit rear bench seat seatback trim from the foam.
- Remove the trim from the seatback of the single unit rear bench seat.

Note:

When separating the « trim - foam » , hold the Velcro strips.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

-

Note:

Check that the velcro strips still have sufficient grip before refitting the seatback trim.

- Refit:
 - the single unit rear bench seatback trim,
 - the « trim - foam » assembly onto the bench seatback frame,
 - the headrest guides,
 - the clips.
- Close the zip fasteners.
- Refit:
 - the bench seat lock trims,

B95 or D95, and REAR BENCH SEAT

- the seat belt trim,
- the seatback side mountings.

II - FINAL OPERATION

Refit:

- the single unit rear bench seatback (see **76A, Rear seat frames and mechanisms, Single unit rear bench seatback: Removal - Refitting**, page **76A-1**),
- the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page **76A-6**).
- the rear headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page **79A-13**).


B95 or D95, and REAR BENCH SEAT

REMOVAL


I - REMOVAL PREPARATION OPERATION

- Removing the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting, page 76A-6**).

II - OPERATION FOR REMOVAL OF PART CONCERNED

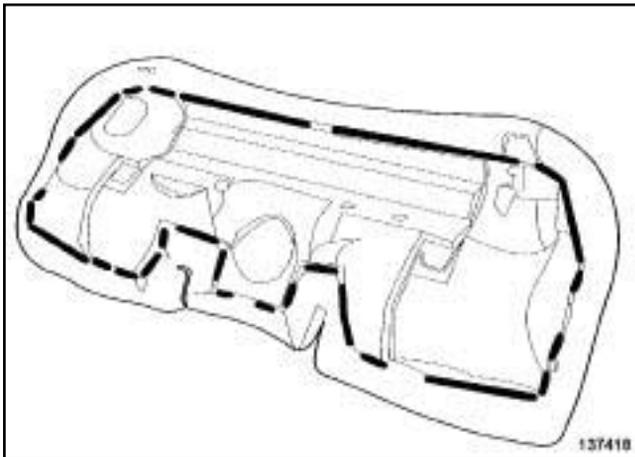

- Remove:
 - the retaining sections,
 - the « foam - trim » assembly of the single unit rear bench seat base.

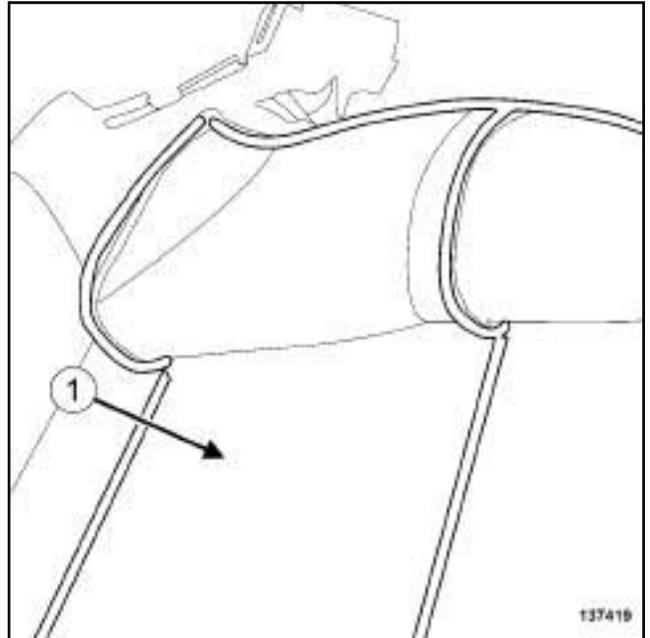

- Remove the single unit rear bench seat base trim (1).

Note:

When separating the « foam - trim », hold the velcro strips.

REFITTING

I - REFITTING PREPARATION OPERATION

-

Note:

Before refitting the single unit rear bench seat base trim, check that the velcro strips are correctly attached to the foam.

II - REFITTING OPERATION FOR PART CONCERNED

- Refit:
 - the single unit rear bench seat base trim to the foam,
 - the « foam - trim » assembly of the single unit rear bench seat base,
 - the retaining strips.

REAR SEAT TRIM

Rear bench seat single unit seat base trim: Removal - Refitting

78A

B95 or D95, and REAR BENCH SEAT

III - FINAL OPERATION

- Refit the single unit rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page 76A-6)

REAR SEAT TRIM

78A

Second row rear seat trim: Removal - Refitting

J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL

I - REMOVAL PREPARATION OPERATION


Remove:

- the second row rear seat module (see 76A, **Rear seat frames and mechanisms, Second row complete rear seat: Removal - Refitting**, page 76A-11),

- the second row rear seat rear headrest.

II - OPERATION FOR REMOVAL OF PART CONCERNED

1 - SEAT BASE TRIM

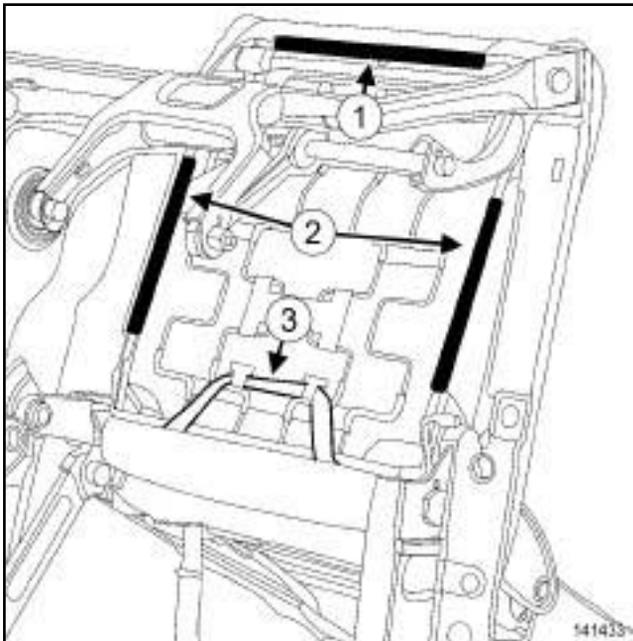

141433

Remove the front (1), side (2) and rear (3) retaining sections of the third row rear seat base using the tool (Car. 1363).

WARNING

To prevent any risk of damaging the foam when separating the "cover - foam", hold the velcro strips.



141431

141431

Remove:


- the cover,

- the foam.


Second row rear seat trim: Removal - Refitting

J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

2 - SEATBACK TRIM

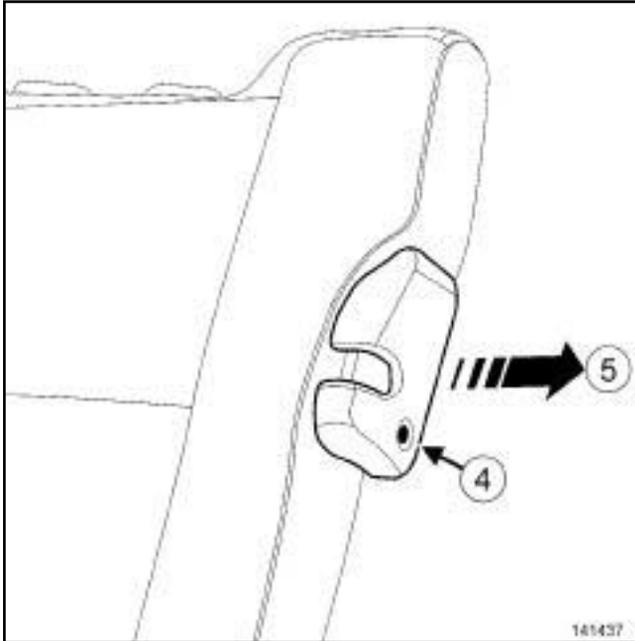


141437
141437

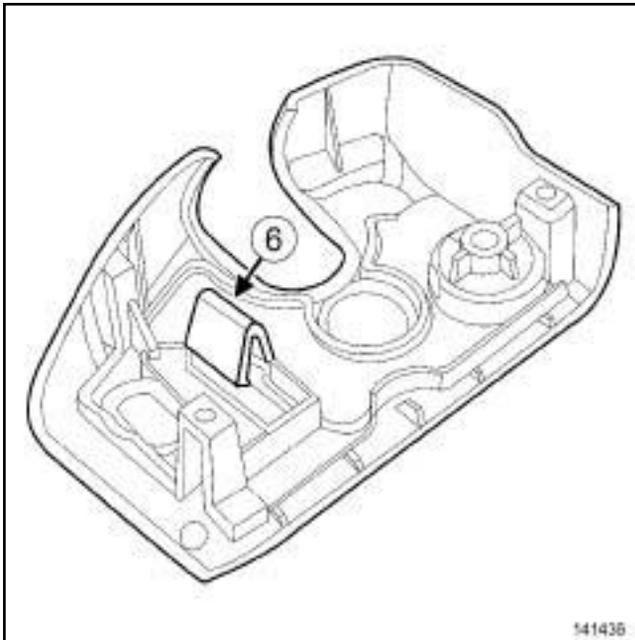

141436
141436

- Remove:
 - the bolt (4) of the locking mechanism trim,
 - the locking mechanism trim at (5) .
- Check that the attachment bracket (6) of the locking mechanism trim is in good condition.
- Remove the rear retaining sections of the second row rear seat.
- Remove the second row rear seat headrest guides (see 79A, **Seat components, Rear seat headrest guide: Removal - Refitting**, page 79A-9) .

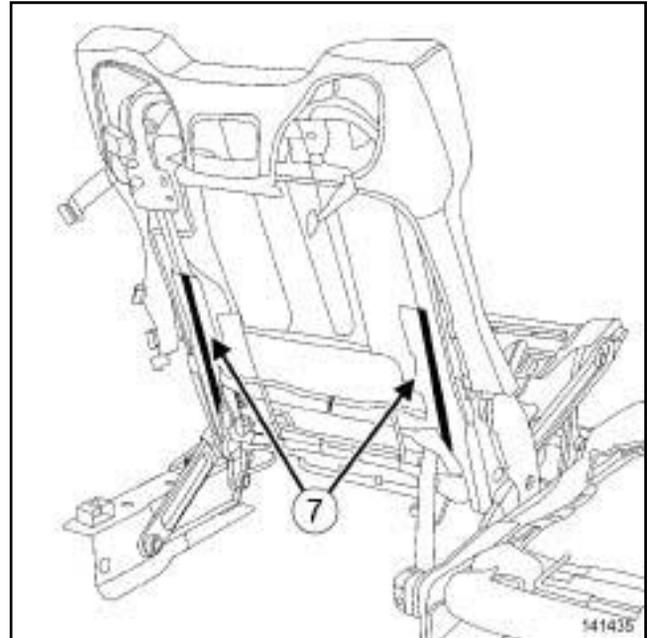


141435
141435

- Remove the elastic straps (7) .

WARNING

To prevent any risk of damaging the foam when separating the "cover - foam", hold the velcro strips.

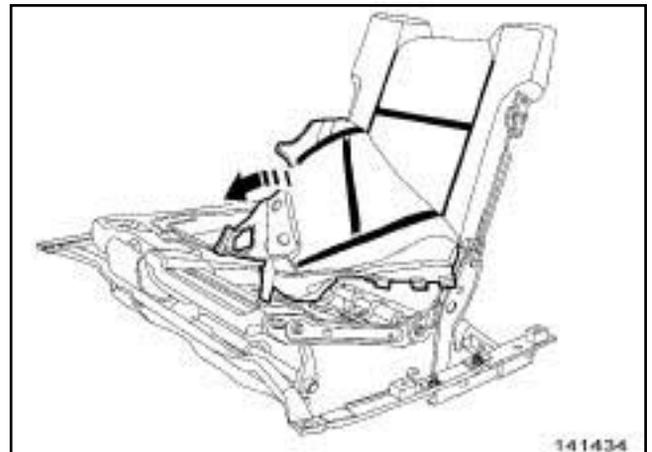

141434
141434

- Remove:
 - the cover,
 - the foam.


Second row rear seat trim: Removal - Refitting

J95, and LONG CHASSIS, and 2 SEATS 3RD ROW

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

1 - SEATBACK TRIM

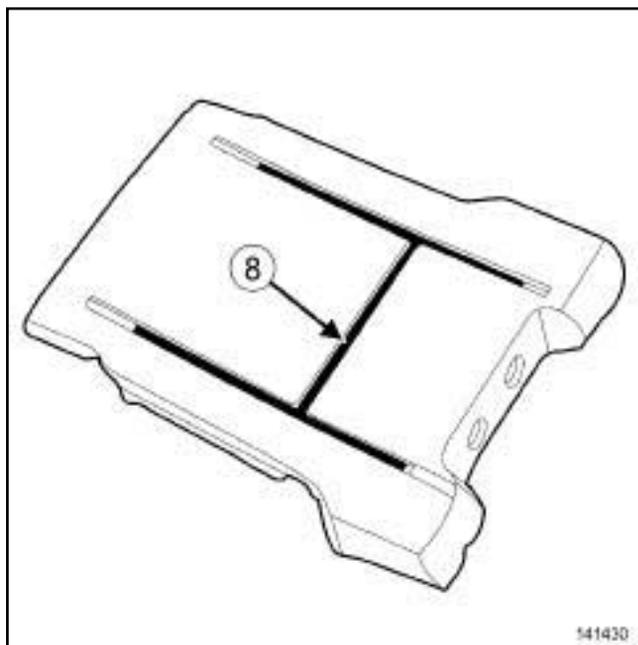


Note:

If the velcro strip (8) of the foam tears, always replace the foam.

Refit:

- the foam,
- the cover,
- the elastic straps (7) ,
- the second row rear seat headrest guides (see 79A, **Seat components, Rear headrest: Removal - Refitting**, page 79A-13) ,
- the rear retaining sections of the second row rear seat,
- the locking mechanism trim,
- the bolt (4) of the locking mechanism trim.

2 - SEAT BASE TRIM

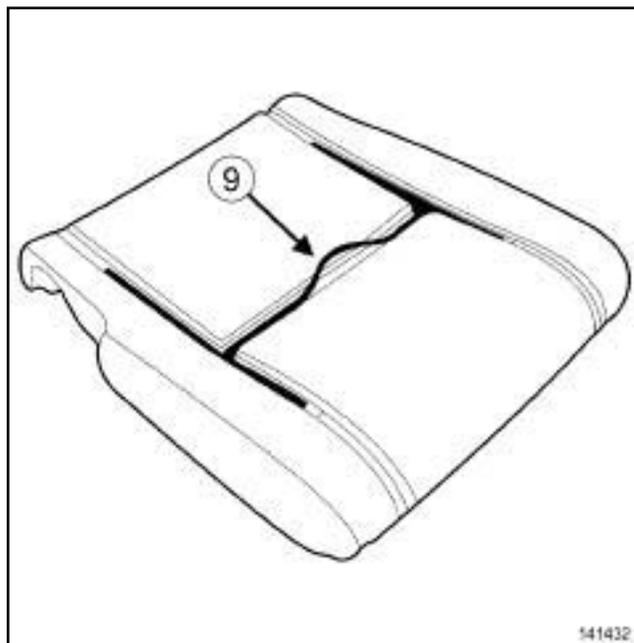

141432



Note:

If the velcro strip (9) of the foam tears, always replace the foam.

Refit:

- the foam,
- the cover,
- the front, side and rear retaining sections of the second row rear seat base.

II - FINAL OPERATION

Refit:

- the second row rear seat rear headrest,
- the second row rear seat module (see 76A, **Rear seat frames and mechanisms, Second row complete rear seat: Removal - Refitting**, page 76A-11) .

SEAT COMPONENTS


Seatback tray: Removal - Refitting

79A

J95

REMOVAL


OPERATION FOR REMOVAL OF PART CONCERNED

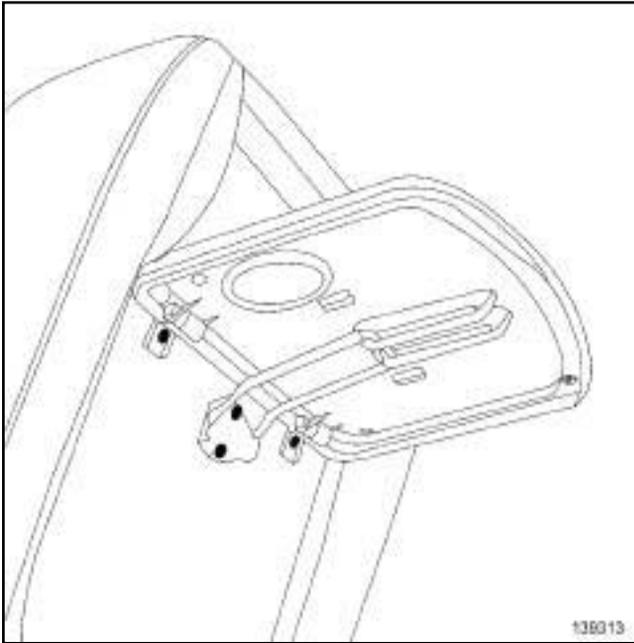


- Drill out the rivets of the front seatback parcel shelf.

Note:

To prevent any risk of damaging the covers and mechanisms, recover any metal residues when cutting the seat trim clips or drilling out the rivet.

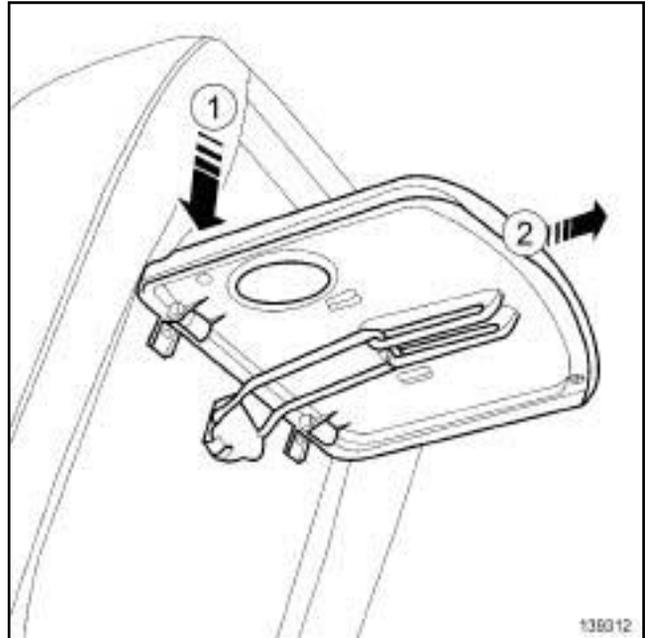

139312

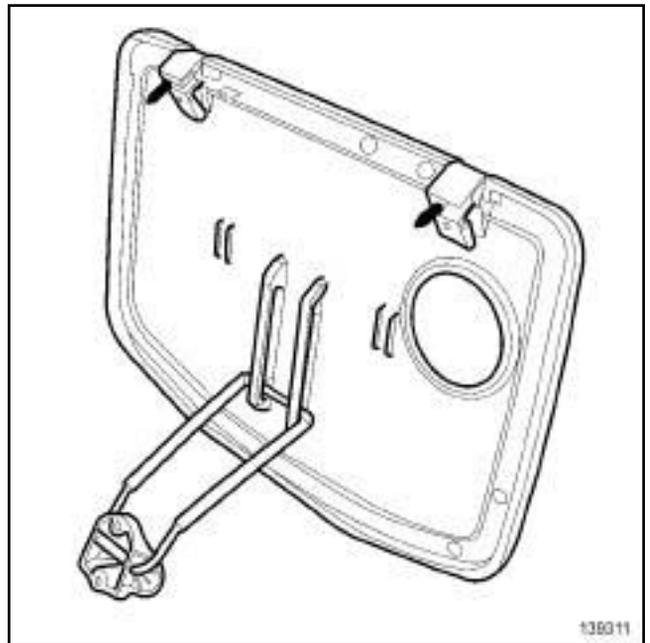

139311

- Remove the front seatback parcel shelf at (1) and (2)

REFITTING

I - REFITTING PREPARATION OPERATION

- Always replace the rivets of the front seatback parcel shelf on the front seatback frame.

SEAT COMPONENTS

Seatback tray: Removal - Refitting

79A

J95

II - REFITTING OPERATION FOR PART CONCERNED

- Refit the front seatback parcel shelf.

III - FINAL OPERATION

- Carry out a function test.

SEAT COMPONENTS

Front headrest: Removal - Refitting

79A

REMOVAL

I - REMOVAL PREPARATION OPERATION


- Tilt the seatback backwards.

II - OPERATION FOR REMOVAL OF PART CONCERNED

-


Note:

The front seat headrest has an integrated control.

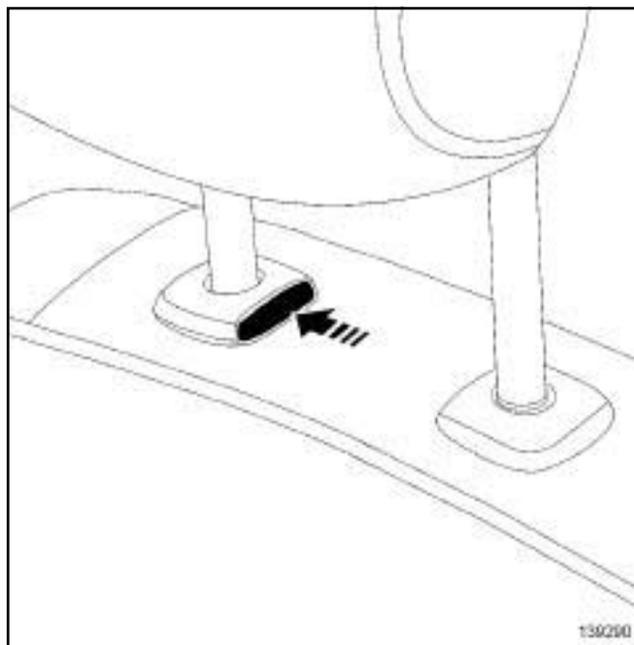

139290

139290

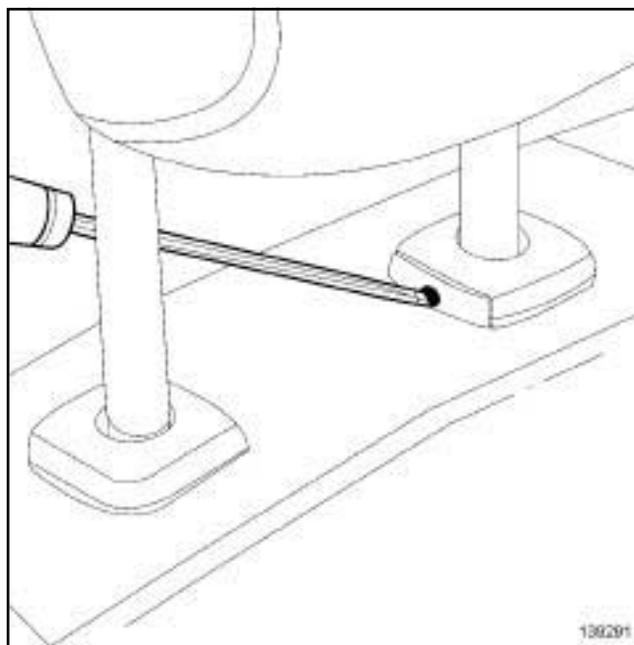

139291

139291

- Press the unlocking button on each headrest guide.


Note:

Depending on the type of unlocking button, this operation is performed manually or using a flat-blade screwdriver.

SEAT COMPONENTS

Front headrest: Removal - Refitting

79A

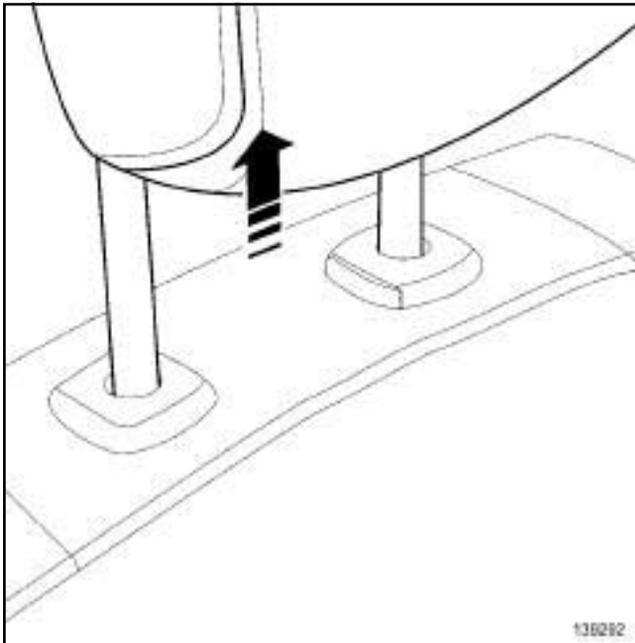

- ❑ Remove the front seat headrest.

REFITTING


REFITTING OPERATION FOR PART CONCERNED

- ❑ Bring the rods out of the front seat headrest as far as possible by pulling upwards.


IMPORTANT

To avoid any risk of incorrectly positioning the rods of the front seat headrest, align the rods before inserting them in the headrest guides.

Headrest rods misaligned

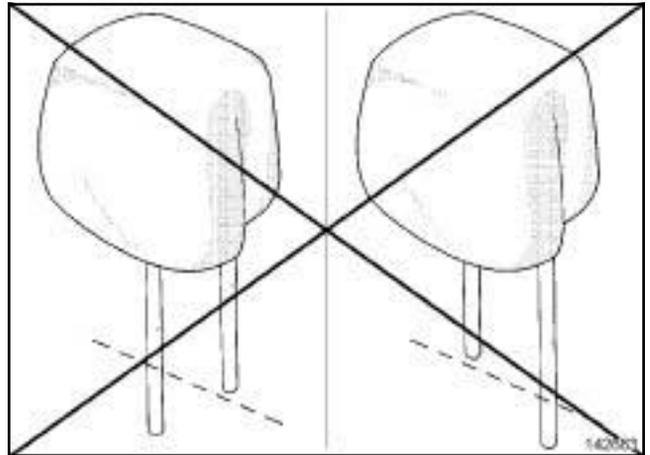

Headrest rods aligned

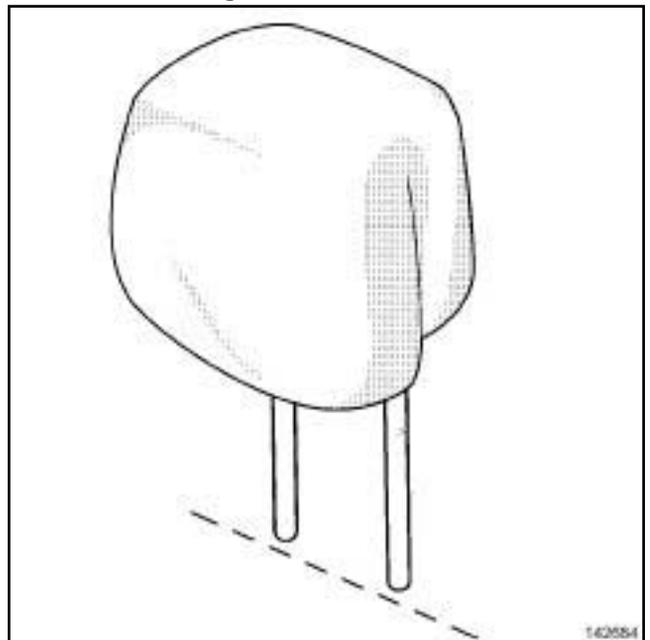

- ❑ Insert the rods of the front seat headrest in the headrest guides.
- ❑ Push the front seat headrest until it locks into place with the locking notches then adjust the front seat headrest to the low position.

IMPORTANT

To prevent the headrest coming away from the guide during a collision, check that headrest guide locking system is functioning correctly.

Heated seat cover: Removal - Refitting

FRONT SEAT WITH HEATING


REMOVAL

I - REMOVAL PREPARATION OPERATION

- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove:
 - the complete front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**) ,
 - the front seat lower covers (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**) ,
 - the front seatback trim (see **77A, Front seat trim, Front seatback trim: Removal - Refitting**, page **77A-4**) ,
 - the front seat base trim (see **77A, Front seat trim, Front seat base trim: Removal - Refitting**, page **77A-1**) ,
 - the front seat headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting**, page **79A-7**) .

II - OPERATION FOR REMOVAL OF PART CONCERNED


Front seat base

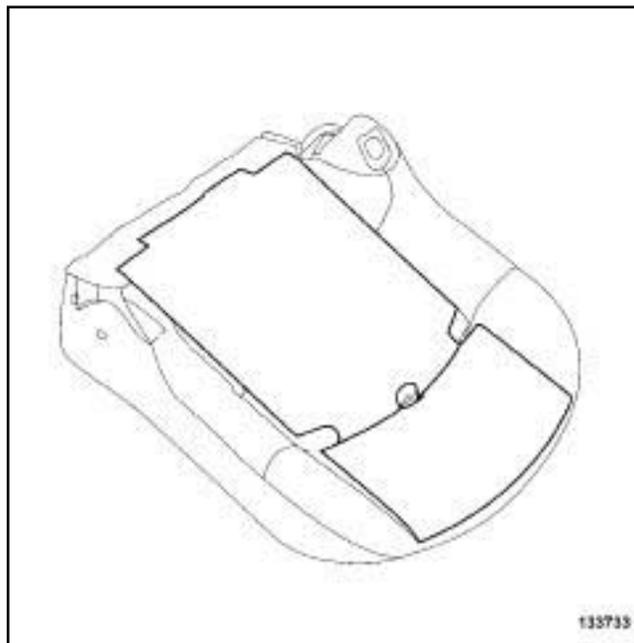

133733

133733

Front seatback

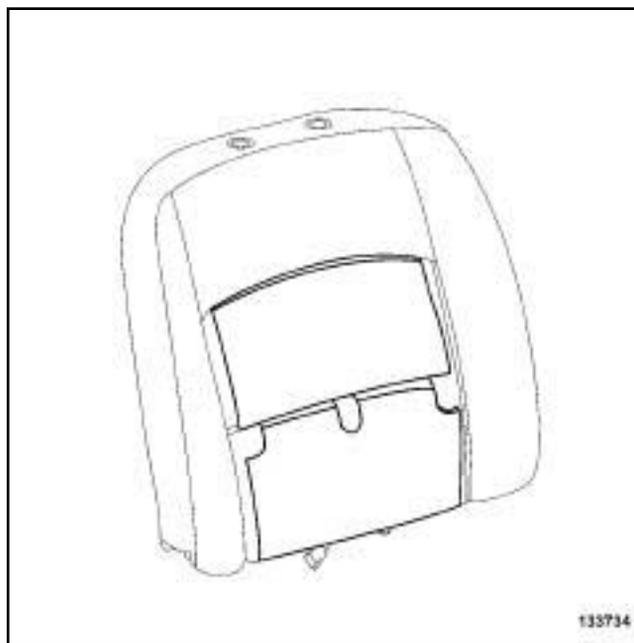

133734

133734

- Carefully detach the heated seat pad.

WARNING

To avoid any damage to the foam, detach the heated pad carefully.

Heated seat cover: Removal - Refitting

FRONT SEAT WITH HEATING

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

IMPORTANT

To ensure the pyrotechnic components operate correctly:

- do not bend the passenger presence sensor pad,
- do not apply glue or adhesive to the passenger presence sensor pad or to the seat cushion trim.

-
- Attach the heated seat pad.

II - FINAL OPERATION

- Refit the front seat foam or front seatback foam.
- Connect the heated seat cover connector.
- Refit the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**) .
- Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Carry out a function test.
- Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- Remove the front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**) .
- Refit:
 - the front seat headrest guides (see **79A, Seat components, Front seat headrest guide: Removal - Refitting**, page **79A-7**) ,
 - the front seat base trim (see **77A, Front seat trim, Front seat base trim: Removal - Refitting**, page **77A-1**) ,
 - the front seatback trim (see **77A, Front seat trim, Front seatback trim: Removal - Refitting**, page **77A-4**) ,
 - the front seat lower covers (see **77A, Front seat trim, Front seat lower cover: Removal - Refitting**, page **77A-9**) ,
 - the entire front seat (see **75A, Front seat frames and mechanisms, Complete front seat: Removal - Refitting**, page **75A-28**) .
- Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

Front seat headrest guide: Removal - Refitting

B95 or D95 or E95 or J95 or K95

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Remove the front seat headrest (see 79A, **Seat components, Front headrest: Removal - Refitting**, page 79A-3) .

Note:

The headrest guides can be removed without removing the front seatback cover.

II - OPERATION FOR REMOVAL OF PART CONCERNED



139289

- Slightly detach the "foam - cover" assembly of the seatback near the headrest guides to reveal the front seat headrest guide clips.
- Unclip the front seat headrest guides using a flat-blade screwdriver.
- Remove the front seat headrest guides.

Note:

The clips of the front seat headrest guides are all on the same side.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the headrest guides fully into the front seatback frame.

Note:

To prevent the headrest guides from being mixed up, each headrest guide has a specific indexing device.

- Check that the headrest guides are secure in the front seatback frame.

II - FINAL OPERATION

- Refit the front seat headrest (see 79A, **Seat components, Front headrest: Removal - Refitting**, page 79A-3) .
- Carry out a function test.


IMPORTANT

To prevent the headrest coming away from the guide during a collision, check that headrest guide locking system is functioning correctly.

B95 or D95, and 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK

REMOVAL

I - REMOVAL PREPARATION OPERATION

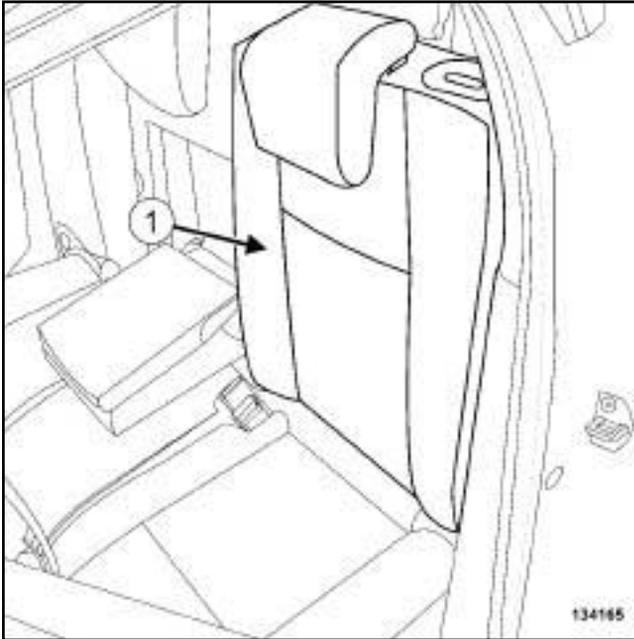

- Tilt the 1/3 rear bench seat (1) .

II - OPERATION FOR REMOVAL OF PART CONCERNED



- Remove:
 - the bolt (2) ,
 - the rear central armrest.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit:
 - the rear central armrest,
 - the bolt (2) .

II - FINAL OPERATION

- Position the 1/3 rear bench seat (1) .

Rear seat headrest guide: Removal - Refitting

B95 or D95 or K95, and REAR BENCH SEAT or REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

REMOVAL

I - REMOVAL PREPARATION OPERATION

- Remove the rear bench seat headrests (see **79A, Seat components, Rear headrest: Removal - Refitting, page 79A-13**).


REAR BENCH SEAT

- Remove:
 - the rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting, page 76A-6**),
 - the rear bench seatback (see **76A, Rear seat frames and mechanisms, Single unit rear bench seatback: Removal - Refitting, page 76A-1**),
 - the rear bench seatback cover partially (see **78A, Rear seat trim, Rear bench seat single unit seatback trim: Removal - Refitting, page 78A-11**).


REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

- Remove:
 - the rear bench seat base (see **1/3 and 2/3 rear bench seat: Removal - Refitting**),
 - the rear bench seatback (see **76A, Rear seat frames and mechanisms, 1/3 and 2/3 rear bench seatback: Removal - Refitting, page 76A-3**),
 - the central armrest of the rear bench seat (see **79A, Seat components, Rear centre arm rest: Removal - Refitting, page 79A-8**),
 - the rear bench seatback cover partially (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting, page 78A-4**).

II - OPERATION FOR REMOVAL OF PART CONCERNED

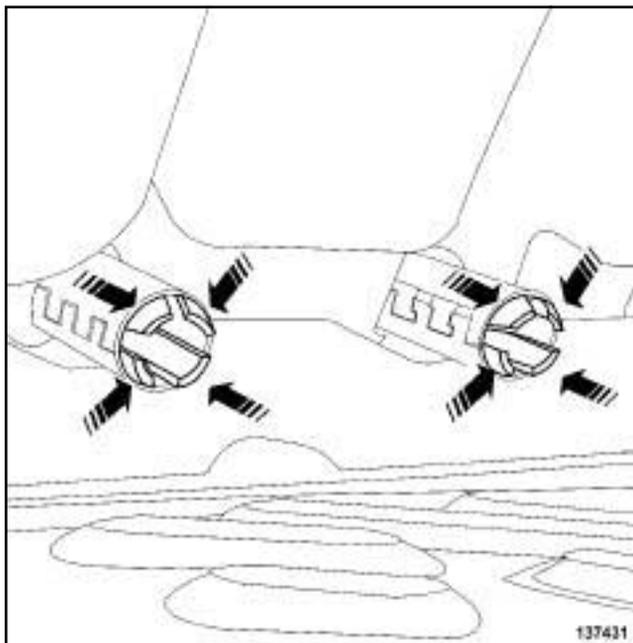

137431

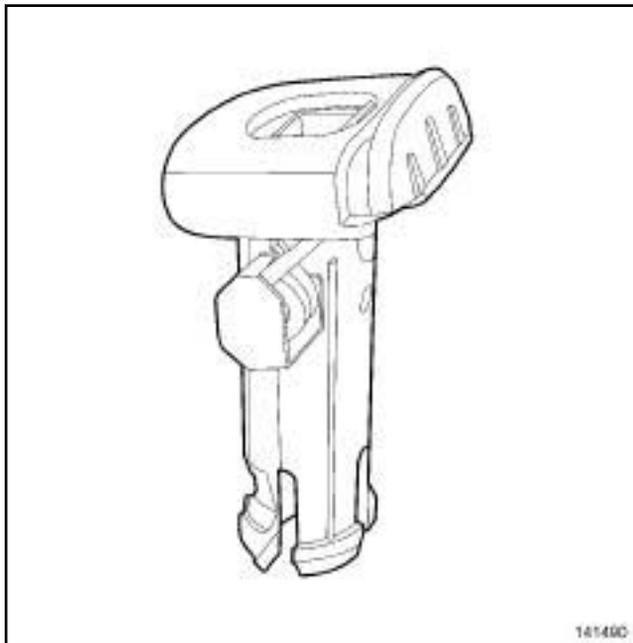

141490

- Unclip the rear bench seat headrest guides.
- Remove the rear bench seat headrest guides.

Rear seat headrest guide: Removal - Refitting

B95 or D95 or K95, and REAR BENCH SEAT or REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the rear bench seat headrest guides fully into the rear seat frame.
- Check that the rear bench seat headrest guides are secure on the rear seat frame.

II - FINAL OPERATION

REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

- Refit:
 - the rear bench seatback cover (see **78A, Rear seat trim, 1/3 and 2/3 rear bench seat seatback trim: Removal - Refitting**, page **78A-4**),
 - the central armrest of the rear bench seat (see **79A, Seat components, Rear centre arm rest: Removal - Refitting**, page **79A-8**),
 - the rear bench seatback (see **76A, Rear seat frames and mechanisms, 1/3 and 2/3 rear bench seatback: Removal - Refitting**, page **76A-3**),
 - the rear bench seat base (see **1/3 and 2/3 rear bench seat: Removal - Refitting**).

REAR BENCH SEAT

- Refit:
 - the rear bench seatback cover (see **78A, Rear seat trim, Rear bench seat single unit seatback trim: Removal - Refitting**, page **78A-11**),
 - the rear bench seatback (see **76A, Rear seat frames and mechanisms, Single unit rear bench seatback: Removal - Refitting**, page **76A-1**),
 - the rear bench seat base (see **76A, Rear seat frames and mechanisms, Single unit rear bench seat: Removal - Refitting**, page **76A-6**).

- Refit the rear bench seat headrests (see **79A, Seat components, Rear headrest: Removal - Refitting**, page **79A-13**).


IMPORTANT

To prevent the headrest coming away from the guide during a collision, check that headrest guide locking system is functioning correctly.


J95

REMOVAL

I - REMOVAL PREPARATION OPERATION

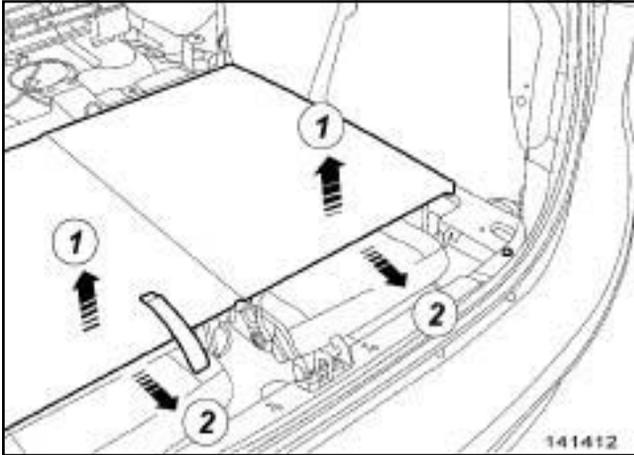

141412

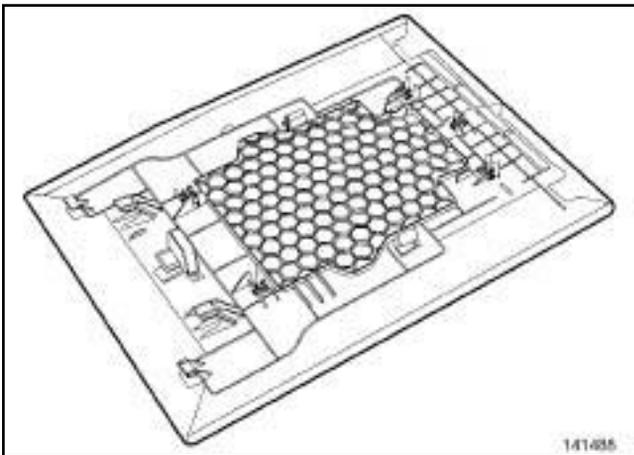


141488

□ Remove:

- the third row rear seatback casing at (1) and (2) ,
- the third row rear seat headrest (see 79A, **Seat components, Rear headrest: Removal - Refitting**, page 79A-13) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

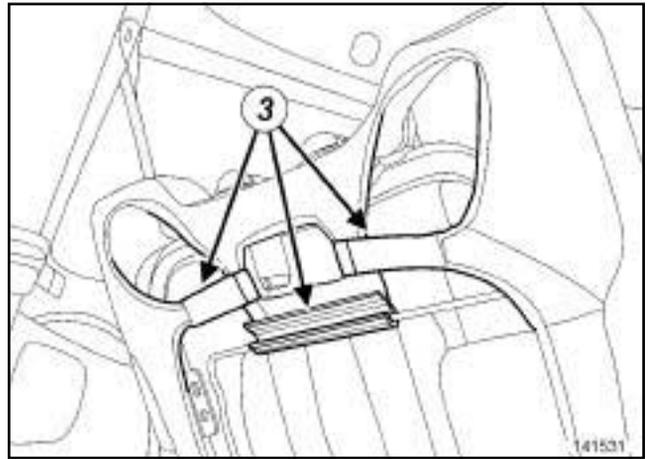


141531


- Remove the retaining sections (3) of the third row rear seatback trim.

Rear seat headrest guide: Removal - Refitting

J95

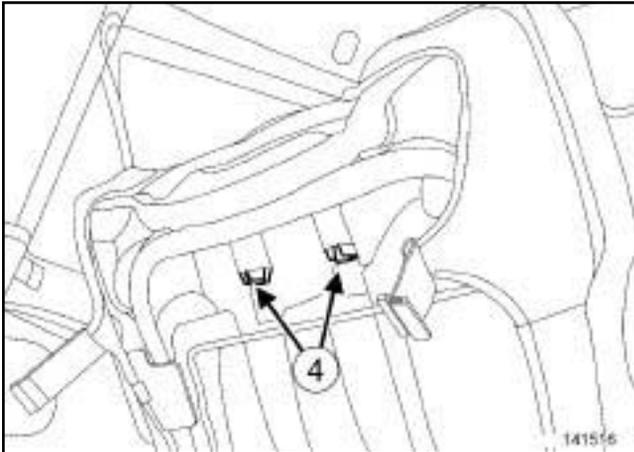

141516

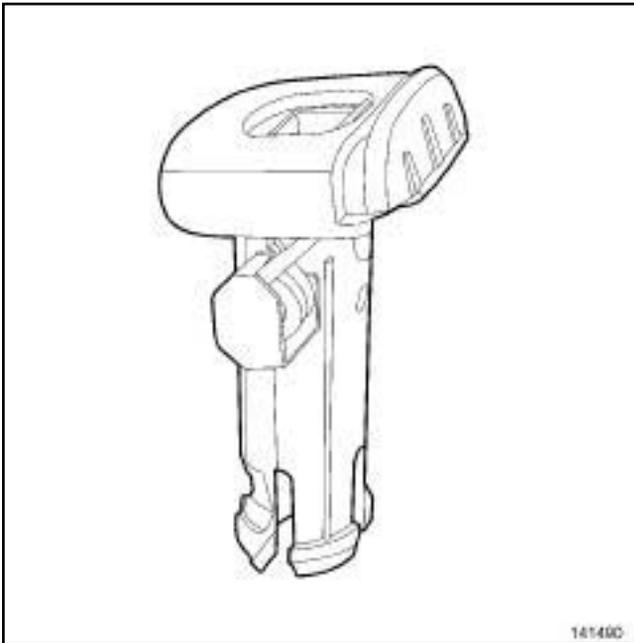

141490

- Unclip the third row rear seat headrest guides by pinching the clips (4) .
- Remove the third row rear seat headrest guides.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- Refit the third row rear seat headrest guides fully into the third row rear seatback frame.

Note:

The headrest guides are identical; it is possible to mix them up.

- Check that the third row seat headrest guides are secure in the third row rear seatback frame.
- Refit the retaining sections (3) of the third row rear seatback trim.

II - FINAL OPERATION

- Refit:
 - the third row rear seat headrest (see 79A, **Seat components, Rear headrest: Removal - Refitting**, page 79A-13) ,
 - the third row rear seatback casing.
- Carry out a function test.

IMPORTANT

To prevent the headrest coming away from the guide during a collision, check that headrest guide locking system is functioning correctly.

SEAT COMPONENTS

Rear headrest: Removal - Refitting

79A


B95 or D95 or J95 or K95

Note:

Depending on the type of unlocking button, this operation is performed manually or using a flat-blade screwdriver.

REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED

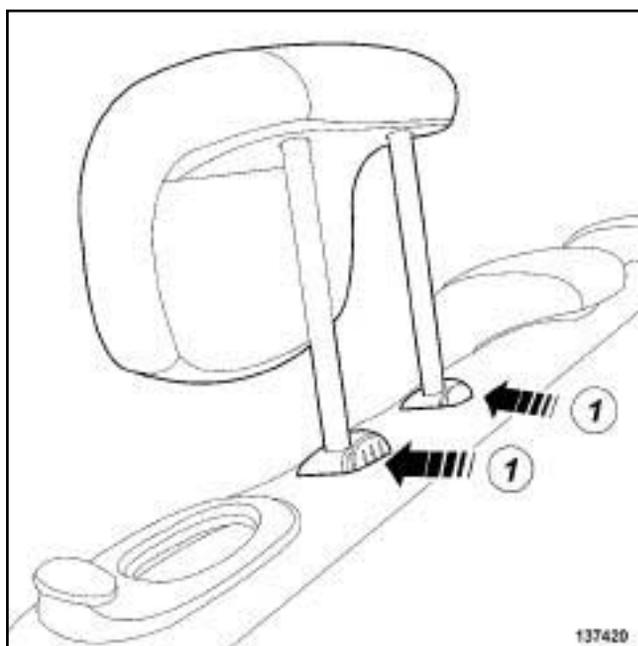

137420

- Press the headrest guides at (1) .
- Remove the rear headrest.

REFITTING

REFITTING OPERATION FOR PART CONCERNED

- Refit the rear seat headrest into the guides to the safety notch position.
- Press the unlocking button of the left-hand headrest guide.
- Carry out a function test.

IMPORTANT

To prevent the headrest coming away from the guide during a collision, check that headrest guide locking system is functioning correctly.

Rear bench seat headrest: Removal - Refitting

B95 or D95 or K95, and REAR BENCH SEAT or REAR BENCH FUNCTION or 1-2/3 REAR BENCH SEAT + ARMREST + N/R SEATBACK or 1/3-2/3 REAR BENCH SEAT WITH RECLINING SEATBACK

Note:

Depending on the type of unlocking button, this operation is performed manually or using a flat-blade screwdriver.

REMOVAL

OPERATION FOR REMOVAL OF PART CONCERNED



137420

- Press the unlocking buttons on each rear bench seat headrest guide at (1) .
- Remove the rear bench seat headrest.

REFITTING

REFITTING OPERATION FOR PART CONCERNED

- Refit the rear bench seat headrest into the guides to the safety notch position.
- Press the unlocking button of the headrest guide for the left-hand rear bench seat.

- Carry out a function test.

- Adjust the rear bench seat headrest to the low position.

IMPORTANT

To prevent the headrest coming away from the guide during a collision, check that headrest guide locking system is functioning correctly.